

OPNVR User Guide

Please read this manual thoroughly before use and keep it handy for future reference.

Table of Contents

Getting Started	7
Checking the Components	7
Front Panel	
Rear Panel	
Mouse Operation	10
Local Configurations	11
Initial Settings	11
Booting up	11
Initializing the Device	
Password Reset	
Quick Settings	
Camera	
Remote Device Initialization	
Short-Cut Menu to Register Camera	
Image	
Encode	
Channel Name	
Remote Upgrade	
Preview	53
Navigation bar	54
Preview Control Interface	
Right Click Menu	
Edit View (Sequence)	
Preview Display Effect Setup	
PTZ Control	65
Playback and Search	71
Search Interface	71
Smart Search Playback	75
Mark Playback	
Playback Image	
Splice Playback	
File List	79
Other Aux Functions	81
Event Manager	81
Video Detect	
Abnormality	
Network Settings	
Network Test	107
Storage	110
Basic	110
Schedule	111

HDD	112
FTP	113
Record Control	115
HDD Information	115
HDD Group	116
HDD Detect	117
Account	
System Info	126
RS232	
Security	
Auto Maintain	
Backup	
Default	
Upgrade	
Logout /Shutdown/Restart	

Before You Begin

Read these instructions before installing or operating this product.

Note: This installation should be made by a qualified service person and should conform to local codes. This manual provides installation and operation information. To use this document, you must have the following minimum qualifications:

• A basic knowledge of CCTV systems and components

• A basic knowledge of electrical wiring, low-voltage electrical connections and IP networking/infrastructure

Intended use

Only use this product for its designated purpose; refer to the product specification and user documentation.

Customer Support

For assistance in installing, operating, maintaining and troubleshooting this product refer to this document and any other documentation provided. If you still have questions, please contact Norbain Technical Support and Sales:

Norbain SD, Inspired, Easthampstead Road, Bracknell, Berkshire, RG12 1YQ, England.

UK +44 (0) 118 912 5000 / Vista Technical Support +44 (0) 118 912 5125

Note: You should be at the equipment and ready with details before calling Technical Support.

Conventions Used in this Manual

Boldface or button icons highlight command entries. The following **WARNING**, **CAUTION** and **Note** statements identify potential hazards that can occur if the equipment is not handled properly:



* WARNING:

Improper use of this equipment can cause severe bodily injury or equipment damage.



* CAUTION:

Improper use of this equipment can cause equipment damage.

Note: Notes contain important information about a product or procedure.

CE

This apparatus is manufactured to comply with the radio interference.

A Declaration of Conformity in accordance with the following EU standards has been made. The manufacturer declares that the product supplied with this document is compliant the provisions of the EMC Directive 2004/108/EC, the CE Marking Directive 93/68 EEC and all associated amendments.



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive: 2011/65/EU, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.

The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste.


* This symbol indicates electrical warnings and cautions.

** This symbol indicates general warnings and cautions.

NORBAIN SD reserves the right to make changes to the product and specification of the product from time to time without prior notice.

WARNINGS AND CAUTIONS:

To reduce the risk of fire or electric shock, do not insert any metallic objects through the ventilation grills or other openings on the equipment.

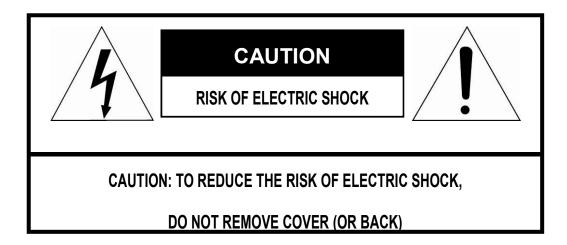

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Clean only with dry cloth.
- 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10. Only use attachments/accessories specified by the manufacturer.
- 11. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13. CAUTION THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.
- 14. Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

CE COMPLIANCE STATEMENT

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Getting Started

Checking the Components


After receiving the recorder, please check against the following list. If any of the items are missing or damaged, contact Norbain after-sales support.

Sequence	Checking items		Requirement
		Appearance	No obvious damage.
1	Package	Packing materials	No broken or distorted areas that may have been caused by dropping.
2	Labels	Labels on the device	No tears. NOTE Do not rip up or throw away the labels; otherwise the warranty is not valid. You will need to provide the serial number of the product should you need to call Norbain customer services.
3	Device	Appearance	No obvious damage.

Front Panel

lcon	Name	Function
STATUS	Status indicator light	Blue light if the system has a malfunction.
HDD	HDD status indicator light	Blue light if HDD has a malfunction.
NET	Network status indicator light	Blue light if the network connection is abnormal.
POWER	Power status indicator light	Blue light is on when the power applied correctly.
~ ~	USB2.0 port	Connect to peripheral USB storage device or mouse.

 Rear Panel



lcon	Port Name	Function
<u>7</u> 7	Network port	Connects to Ethernet.
HDMI	High Definition Media Interface	High definition audio and video signal output port. It transmits uncompressed high definition video and multi- channel audio data to the connected display with HDMI port. HDMI version is 1.4.
SS←	USB3.0 port	USB3.0 port. Connect to mouse or USB storage device.
RS-232	RS-232	For factory use / debug.
VGA	VGA video output port	Outputs analog video data to the connected displays.

lcon	Port Name	Function
MIC IN	Audio input port	Receives audio signal from devices such as microphone.
MIC OUT	Audio output port	Outputs audio signal to devices such as speakers. Bidirectional talk output.
1~4	Alarm input port 1~4	
Ŧ	GND	Alarm input ground port.
NO1~NO2	Alarm output port	
C1~C2	1~2	
DC 12V =	Power input port	Input DC 12V/4A.
Power switch		Power on/off button.
PoE		• The 4 & 8 PoE series product supports total 50W.
PORTS		• The 16 PoE series product supports total 130W.

Mouse Operation

	Descurred input dislanus have some up if you are not lawsed in
Left click	Password input dialogue box pops up if you are not logged in.
mouse	You can access the main menu from live view interface.
	Implement the control operation.
	Modify checkbox.
	In text box, click the corresponding button on the panel to enter a number or
	character (lowercase / CAPS).
	In QWTERY input mode: Click _ to input a space and click \leftarrow to deleting the
	previous character.
	!?@#\$% = + * ← 123 qwertyuiop/ 456 asdfghjkl:Enter 789 zxcvbnm,.Shift 0&
	!?@#\$%=+*·123QWERTYUIOP/456ASDFGHJKL: Enter789ZXCVBNM,ShiftD<&
	character.
Double left	Implement special control operations such as file list to play back the video.
click	In multiscreen mode, double-click one channel to view in full screen.
mouse	Double-click current video again to go back to previous multiscreen view.
Right click	Right-click in live view window interface, the shortcut menu is displayed.
mouse	Exit current menu without saving.
Roll scroll	In numeral input box: Increase or decrease numeral value.
wheel	Switch the items in the check box.
	Page up or page down.
Move	Select current control or move control.
mouse	
Drag	Select motion detection zone.
mouse	Select privacy mask zone.
-	oliou privacy mask 2016.

Local Configurations

Initial Settings

Booting up



- Ensure the input voltage corresponds to the power requirement of the Device. Power on the Device after the power cable is properly connected.
- To protect the Device, please connect the Device with the power cable first, and then connect to the power source.
- To ensure the stable work of the Device and the external devices connected to the Device and to prolong the battery life, it is recommended to refer to the national related standard to use the power source that provides stable voltage with less interference from ripples. USP power source is recommended.

Connect the Device to the monitor.

Plug in the power cable to the Device.

Press the power button to turn on the Device. The power indicator light is on. On the connected monitor, the live view screen is displayed by default. If you turn on the Device during the time period that is configured for recording, the system starts recording after it is turned on, and you will see the icon indicating recording status is working in the specific channels.

Initializing the Device

When booting up for the first time, you need to configure the password information for **admin** (by default).

I Note

In order to guarantee device security, please keep the admin login password in a safe place after the device has been initialized, it is recommended to modify the password regularly.

Turn on the Device.

The Device Initialization interface is displayed.

Enter Password 2 Unlock Pattern 3 Password Protection	
Username admin	
Password	
It is 8 to 32-digit containing letter(s), number(s), symbol(s). It contains at least two types.	
Prompt Question	
Next	

Configure the password for admin.

User name: The default user name is **admin**.

Password/confirm password: The password ranges from 8 to 32 digitals. It can contain letters, numbers and special characters (excluding "",""",";","E","&"). The password shall contain at least two of these categories.

Prompt question: In the **Prompt Question** box, enter the information that can remind you of the password.



STRONG PASSWORD RECOMMENDED For your device security, create a strong password of your own choosing. We also recommend you change your password periodically especially in the high security systems.

	Device Initialization	
1 Enter Password	2 Unlock Pattern	3 Password Protection
	$\bullet \bullet \bullet$	
	$\bullet \bullet \bullet$	
	$\bullet \bullet \bullet$	
	Please draw the unlock pattern.	
Back		Skip

Draw an unlock pattern.

After this setting is completed, the password protection settings interface is displayed.

III Note

The pattern that you want to set must cross at least four points.

If you do not want to configure the unlock pattern, click Skip.

Once you have configured the unlock pattern, the system will require the unlock pattern as the default login method.

	Device Initialization	
Enter Passy	vord 2 Unlock Pattern	3 Password Protection
🕝 Email Address	(To rese	et password)
Security Quest	on	
Question 1 Answer	What is your favorite children's book?	
Question 2 Answer	What was the first name of your first boss?	
Question 3 Answer	(What is the name of your favorite fruit?	
_		ОК

Configure the security questions.

I Note

If the admin password is forgotten, this can be reset through the reserved email address or security questions. If you do not want to configure these settings, disable the email address and security questions.

Email: Input an email address for password reset. If the password is forgetten in the future, you will need to input the security code received via assigned email to reset the admin password.

Security question: Configure the security questions.

If the password is forgetten in the future, enter the answers to the questions to reset the admin password.

Click OK to complete the device initialization setup.

Device goes to startup wizard interface.

Password Reset

You can reset the password with the device QR code or the security questions.

To reset through the QR code, make sure the Enable check box is selected in **Main Menu >** SYSTEM > SECURITY > System Service > Password Reset.

To reset through the security questions, make sure the security quesitons are configured.

Go to the device login interface.

- If you have set unlock pattern, device displays unlock pattern login interface.
- If you have not set unlock pattern, device displays password interface.

III Note

Click Switch User button and NVR goes to general user login interface. The default user name is admin. Click the user name drop-down arrow, select a user from the drop-down list, and then you can log in via a different account.

SYSTEM LOGIN	
admin	
$\bullet \bullet \bullet$	SYSTEM LOGIN
•••	Username admin 🔻 🖬 Password
	Forgot password
Forgot Unlock Switch User	OK Cancel

Click 💼

If you did not set the reserved email address, the email entering interface is displayed. Enter the email address, and then click **Next**, the **Reset the password** interface is displayed. If you have set the reserved email address, the **Reset the password** interface is displayed.

	Reset
Reset Type	Email
Email 🤇	(To reset password)
	Next Cancel
	Reset Password
	In order to provide a secure password reset environment, we need to collect your e-mail
	address, device MAC address, device SN, etc. All collected info is used only for the purposes
	of verifying device validity and sending a
	security code to you. Do you agree and want to continue the operation?
	OK Cancel

Reset	Password
Reset Type (Email 🔹	
SN: ******Z2CCBF	Note(For admin only): Option 1. Please download EasyViewer and then from More-Reset Device Password, scan the left QR code. Option 2. Please use an APP to scan the left QR code to get encryption strings. And then send the strings to support_gpwd @htmicrochip.com.
The security code will be delivered to a***@	nsd.com.
Security code	
Cancel	Next

There are two ways to reset the password: Scanning QR code to reset by email and answering security questions (local menu only).

Email

follow the prompts on the interface to scan the QR code, and then input the security code you get via the assigned email.

The security code sent to the email is only valid for 24 hours.

Security questions

Select security question from the drop-down list. Device displays security question interface. Please input the correct answers here.

III Note

You shall configure the security questions before resetting password by answering the questions. If you have not configured the questions, this method will not be available in the drop-down list.

	Reset Password
Reset Type	Security Question
Question 1 Answer	What is your favorite children's book?
Question 2 Answer	What was the first name of your first boss?
Question 3 Answer	What is the name of your favorite fruit?
	Cancel Next

Click Next.

Device displays reset password interface.

Reset Password
Reset password of (admin)
New Password
It is 8 to 32-digit containing letter(s), number(s), sy mbol(s). It contains at least two types.
Confirm Password
Cancel OK

Input new password and then confirm.

The password can be set from 8 to 32 characters and contain at least two types from number, letter and special character (excluding"", """, ";" and "&").

Click OK button to complete the setup.

Startup Wizard

After successfully initializing the device, the startup wizard interface opens. Here you can quickly configure your device. It includes general setup, basic network setup, camera registration, P2P, and schedule interface.

Boot up the device and complete the device initialization. Device goes to startup wizard. Select Autocheck for updates, device automatically checks if there are new updates.

Startup Wizard
The startup wizard includes General, Network,Remote Device, Record Control Settings.
Auto-check for updates Automatically notify me when updates are available. The system checks for updates daily. To inform you of the latest firmware upgrades for your device, we need to collect device inf o such as IP address, device name, firmware version, device SN, etc. All collected info is u sed only for the purposes of verifying device validity and pushing upgrade notifications.
Next



If you select the **Auto-check for updates** check box, the system will notify you automatically when updates are available.

General

Main menu->Setting->System->General->General

	SETTING
CAMERA	TNETWORK 📷 EVENT STORAGE
GENERAL DISPLAY RS232 VOICE PROMPT ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	General Date&Time Holiday Device Name NVR Device No. 8 Language ENGLISH Instant Replay 5 Instant Replay 5 Min. Monitor Channel(s) IPC Time Sync 24 Hour Navigation Bar Mouse Sensitivity Slow Fast

Device Name: Please input a corresponding device name here.

Device No: When you are using a single remote control (not included in the accessory bag) to control several NVRs, you can give a name to each NVR for your management.

Language: Device supports various languages: select a language for the system.

Instant replay: Set playback time you can view in the preview interface. The value ranges from 5 to 60 minutes.

Auto logout: Here you can set auto logout interval. Value ranges from 0 to 60 minutes.

Monitor channels when logout: Here you can set the channels you want to view when your account has logged out. Click the button and then cancel the channel name box, you need to login to view the corresponding video. The channel window displays **b** in preview interface.

Navigation bar: Check the box here, system displays the navigation bar on the interface.

IPC Time Sync: You can input an interval here to synchronize the NVR time and IPC time.

Mouse sensitivity: You can set double click speed via dragging the slide bar. You can Click Default button to restore default setup.

Date and Time

Main menu->Setting->System->General->Date&Time

	SETTING	
CAMERA	TINETWORK 📷 EVENT STORAGE SYSTEM	
GENERAL DISPLAY	General Date&Time Holiday	
RS232 VOICE PROMPT ACCOUNT	Date Format YYYY M Time Format 24-HOUR Date Separator - <	
SECURITY Auto Maintain IMP/EXP	□ DST DST Type ● Week ○ Date Start Time (Jan) (Last) (Sun) (00 : 00	
DEFAULT UPGRADE	End Time Jan V Last V Sun V 00 : 00	
	Server (time.windows.com (Manual Update) Port 123 (1~65535) Interval 60 Min.	
	Default OK Cancel Apply	

System time: Set system time.

Date format: There are three types: YYYY-MM-DD / MM-DD-YYYYY / DD-MM-YYYY.

Date separator: There are three denotations to separate date: dot, beeline and solidus.

DST: Enable the Daylight-Saving Time function. Click Week or click Date.

Time format: There are two types: 24-hour mode or 12-hour mode.

NTP: It is to set NTP server, port and interval.



System time is very important; do not modify this setting unless there is a must! Before your time modification, please stop record operation first!

Holiday

Main menu->Setting->System->General->Holiday

You can configure the device basic settings, time settings, and holiday settings.

	SETTING
	FNETWORK 🙀 EVENT STORAGE
GENERAL DISPLAY	General Date&Time Holiday
RS232 VOICE PROMPT ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	0 Status Holiday Name
	Add Holidays Default OK Cancel Apply

Add Holidays	
Holiday Name	
Repeat Mode 🛛 Once 🌑 Always	
Holiday Range 💿 Date 🔿 Week	
Start Time 2018 - 12 - 05	
End Time 2018 - 12 - 05	
Add More	
	Save Add Cancel

Basic Network Settings

Main menu->Setting->Network->TCP/IP

Set device IP address, DNS (Domain Name System) information.

Preparation

Make sure the device has properly connected to the network.

4. 		SETTING		
CAMERA	TNETWORK	EVENT STO	DRAGE 🔤 SYS	STEM
TCP/IP PORT PPPoE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Ethernet Port1 19 IP Address: 192.168.1.1 MAC Address: 38:af:29 IP Version (IPv4 Preferred DNS 8	:92:17:e1 Subnet Mask	vay: 192.168.1.1 N	Unbind MTU: 1500 Mode: STATIC
	Default		OK Cancel	Apply

Click device display edit interface.

	Edit
Ethernet Card Net Mode	Ethernet Port1 Single NIC
IP Version MAC Address IP Address Subnet Mask Default Gateway	IPv4 DHCP 38:af:29:92:17:e1 192.168.1.108 Test 255.255.255.0 192.163.1.1
мти	(1500
	OK Cancel

MAC address: Displays the MAC address of the Device. It is read-only.

IP version: In the IP Version list, you can select IPv4 or IPv6.

IP address: Enter the IP address and configure the corresponding subnet mask and default gateway.

Default gateway: IP address and default gateway must be in the same network range.

DHCP: Enable the DHCP function to get the DNS address from router.

MTU: It is to set MTU value of the network adapter. The value ranges from 1280-7200 bytes. The default setup is 1500 bytes.

IP Version: There are two options: IPv4 and IPv6. Right now, system supports these two IP address format and you can access via them.

Preferred DNS server: DNS server IP address.

Alternate DNS server: DNS server alternate address.

P2P

Main menu->Setting->Network->P2P

P2P is a convenient private network penetration technology. You do not need to apply for dynamic domain name or port mapping. You can add recording devices by following the below procedure.

Scan the QR code, download mobile app, and then register an account.


Connect the NVR device to the Internet, otherwise P2P can not run properly.



If system displays Online in the Status box, P2P registration is successful.

EasyViewer Mobile APP Operation

Scan the QR code to download and install the mobile App. Select Camera and enter the main interface. Register device in the mobile App: Click and select Device Manager.

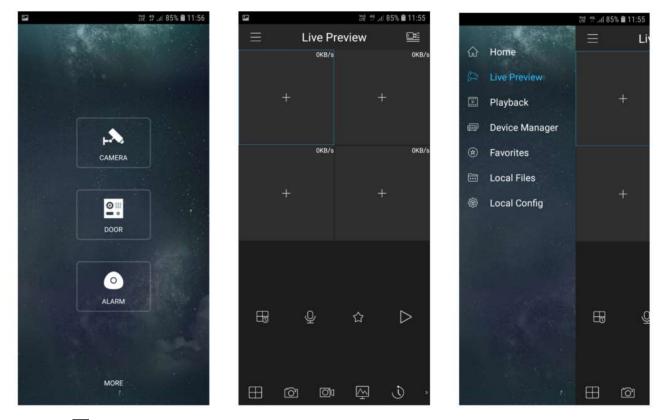

Click 📑 and enter the Add Device interface.

I Note

EasyViewer Mobile App supports device initialization.

Select Wired Device -> P2P to enter the P2P interface.

Click the QR code icon behind the SN to enter the QR code scan interface.

Scan the device label or scan the SN QR code. When the scan is successful, the device SN will be displayed in the SN item.

Enter name and password.

After device registraion on mobile App, click Start Preview and you can see the monitor screen.

Registration

Main menu->Setting->Camera->Registration

You can add remote devices by adding the IP address.

	SETTING
CAMERA	TNETWORK 📷 EVENT 🅦 STORAGE 🌄 SYSTEM
REGISTRATION IMAGE ENCODE CAM NAME	Camera Reg Status Firmware Upgrade Device Search IP Address Search Uninitialized Initialize 1 M Status IP Address Port Device Name Manufa 1 Image: Market Address Port Device Name Manufa 1 Image: Market Address 9 37777 XVR Private
	Add Manual Add Modify IP Filter Null Added Device CH Camera Name Modify Delete Status IP Address Port IP D1 IPC / X 10.1.1.65 Port 1 Port 2 D2 IPC / X 10.1.1.66 Port 2 Port 3 D3 IPC / X 10.1.1.67 Port 3 Port 4
	D5 IPC × 10.1.1.69 Port 5 D6 IPC × 10.1.1.70 Port 6 • • • • Delete Import Export

Channel: It is the device channel number.

Status: Red circle 🔲 means the channel has no video, green circle 🧧 means the channel has video.

IP address: It is to display network camera IP address.

Add/Delete: Click 🚺 to delete the device, click 🚹 to add the device to the NVR.

Add network camera

Device search: Click the button; you can search all network cameras in the same network segment. Double click a camera or check the camera box and then click Add button, you can add the device to the list.

Manual Add: Click Manual Add button, you can set the corresponding network camera information and then select the channel you want to add.

Manufacturer: Please select from the dropdown list.

IP address: Input remote device IP address.

RTSP port: Input RTSP port of the remote device. The default setup is 554.

HTTP port: Input HTTP port of the remote device. The default setup is 80.

TCP port: Input TCP port of the remote device. The default setup is 37777.

User name/password: The user name and password to login the remote device.

Channel No: Input channel number or click the connect button to allocate the channel.

Remote channel No: After getting the remote device channel number, click Setup to select a channel.

Channel: The local channel number you want to add.

Decode buffer: There are three options: realtime, local and fluent.

Service type: There are four types: Auto / TCP / UDP / MULTICAST (ONVIF device only)

Encrypt: When the connection protocol is ONVIF, enable the encryption function and system transmits data in the encrypted mode.

_	Manual Add
Manufacturer	Onvif
IP Address	192.168.0.0
RTSP Port	Customized
Username	admin
Password	
Connect	
Channel No.	(1 Setting
Remote Channel No.	
Channel	
Decode Buffer	Default
Encrypt	
Auto O TCP C	DUDP O MULTICAST
	OK Cancel



Click 🗹 to change the remote device information. Click 🞽 to delete remote device.

Schedule

Main menu->Setting->Storage->Schedule

After set record schedule and snapshot schedule, the device will automatically record video and snapshot images during the specified time.

Record Schedule

All channels are set to record continuously by default. You can set customized record period and record type.



Channel: Select the channel to configure schedule.

Select icon of several dates, all checked items can be edited or together.

🗪: Link icon.

Since the second type from one period or multiple if linked.

Record Type: Please check the box to select corresponding record type. There are 4 types: Regular / MD (motion detect) / Alarm / MD&Alarm.

Week day: There are eight options: ranges from Saturday to Sunday and all.

Holiday: Holiday setup. Main Menu->Setting->System->General

Pre-record: System can pre-record the video before the event occurs. The value ranges from 1 - 30 seconds.

Period setup: Click button after one date or a holiday. There are 4 record types: regular, motion detection (MD), Alarm, MD & alarm.

	Pe	riod	
Current Date: Sun			
Desired a company			
Period 1 00:00 Period 2 00:00	- 24 : 00		
Period 3 (00:00	- 24 : 00		
Period 4 (00:00	- 24 : 00		
Period 5 00 : 00	- 24 : 00		
Period 6 00:00	- 24 : 00		
Сору			
	Sun 🗌 Mon 🗌 Tue 🔲 ۱	Wed 🗋 Thu 📄 Fri 📄 Sat	
]
		OK	
Regular	Motion	Alarm	MD&Ala

I Note

When the record type is MD (motion detect), alarm, MD&Alarm, please enable the channel record function when corresponding alarm occurs.

		SETTING	G)		
CAMERA	TWORK	EVENT	STORAGE	SYSTEM	
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY	Channel Sensitivity Threshold		Input Abnormal 🔲 In 1 (1 - 100) 1 (1 - 100)	tensity Change 🔲	
ALARM OUTPUT	Period Alarm Out Record Channe PTZ Activation	Setting D1 D2 D3 D	Latch (10 Send Email 40506 Post-Record (10 40506	s s	
	Default	E1 D2 D3 E		Cancel Apply	

D Note


If you have added a holiday, you can set the record period for the holiday.

Schedule Snapshot

Main menu->Setting->Storage->Schedule->Snapshot

You can configure the storage schedule for the snapshot such as channels to take snapshot, alarm settings, and the armed period.

	SETTING
Marca CAMERA	TINETWORK
BASIC SCHEDULE HDD MANAGER	Rec Snapshot
FTP RECORD ADVANCED HDD DETECT	Image: Copy OK Cancel Apply

 



When the record type is MD (motion detect), alarm, MD&Alarm, please enable the channel snapshot function when corresponding alarm occurs.

D Note

Please enable auto snapshot function so that the snapshot plan can become activated.

Record Control

Main menu->Setting->Storage->Record

There are two ways to access the record menu:

- Right click mouse and then select Manual->Record.
- In the main menu, from Setting->Storage->Record.

After setting record schedule and snapshot schedule function, please enable auto record and auto snapshot function so that the device can automatically record and snapshot. System supports main

stream and sub stream. There are three statuses: auto / manual / off. Please highlight icon "o" to select corresponding channel.

Manual: The highest priority. After manual setup, all selected channels will begin general recording.

Auto: Channel records according to the record schedule.

Off: Current channel stops recording.

All: Check All button after the corresponding status to enable/disable all-channel schedule/manual record or enable/disable all channels to stop record.

Snapshot: Enable / disable schedule snapshot function.

			ŝ	SETTI	NG						
			è eve	ENT		4	STOR	AGE		SYSTEM	
BASIC											
SCHEDULE	Main St	All	D1	D3	D4	D5	D6	D7	D8		
HDD MANAGER	Auto	0	۰	۲	۲	۲	۲	٠	٠		
FTP	Manual	0	0	0	0	0	0	0	0		
RECORD	Off	0	0	0	0	0	0	0	0		
ADVANCED	Sub Stream1_										
HDD DETECT	Auto	0	0	0	0	0	0	0	0		
	Manual	0	0	0	0	0	0	0	0		
	Off	0	٠	٠	۲	۲	۲	۲	۲		
	Sub Stream2_										
	Auto	0	0	0	0	0	0	0	0		
	Manual	0	0	0	0	0	0	0	0		
	Off	0	٠	٠	۲	۲	٠	٠	٠		
	Snapshot										
	Enable	0	0	0	0	0	0	0	0		
	Disable	0	٠	٠	۲	۲	۲	•	٠		
							\square	OK	\supset (Cancel Apply	

Record Info

Main menu->Info-System->Record

After the system has video recordings, go to the record info interface to view device name, start time, end time etc.

	INFO
SYSTEM	📷 EVENT 💽 NETWORK 🐚 LOG
HDD RECORD BPS VERSION	EVENT NETWORK LOG

Camera

After registering a remote device to the NVR, you can view the video on the NVR, and manage and the storage.

Change camera IP address

Main menu->Setting->Camera->Registration

Check the box before the camera name and then click Change IP or click the *l* before the camera name.

Enter change IP interface.

I Note

Check the box before several cameras, change the IP addresses of several cameras at the same time.

		IP Setting		
Checke DH O ST			Username Password	(admin
1	Serial No. 4D01B90YAZ27C89	IP Address 172.16.31.39		
ОК	Cancel			

Check DHCP, there is no need to input IP address, subnet mask, and default gateway. NVR will automatically allocate an IP address to the camera.

Check Static, then input an IP address, subnet mask, default gateway.

I Note

If it is to change several devices IP addresses at the same time, please input incremental value. When changing IP address buy batch, device automatically skips the conflicted IP and begin the allocation according to the incremental value.

Input remote device user name and password.

Click OK button to save settings.

I Note

When changing IP addresses of several devices at the same time, make sure the camera user names and passwords are the same.

IP Export

Device can export the Added device list to your local USB device.

Insert the USB device and then click the Export button.

Enter the following interface.

	IMP	P/EXP	_	
Device Name Total Space	(sdc1(USB DISK) - 7.54 GB	Refresh Free Space	(5.95 GB	
Address	(/NVR/Config_NVR4216-1	6P-4KS2_201812	206090738/	
Name			Size	Туре
an lengen lenge	leExport.backup		61.6 KB	Fold File
	311	_		
New Folder	Format Import	Export		

Select the directory address and then click the OK button.

Device pops up a dialogue box to show the export is successful. Click OK button to exit.



Backup encryption is enabled by default when exporting files. The file information includes IP address, port, remote channel number, manufacturer, user name and password.

When you enable backup encryption, the extension name of the exported file is .backup. All the other softwares cannot open the file to edit except the NVR device.

When you disable backup encryption, the extension name of the exported file is .csv. It might lead to data leakage.

IP Import

Device Name	(sdb1(USB DISK))	(Refresh)	(10.63 GB		
Total Space	(14.43 GB	Free Space	(10.63 GB		
Address	(/English/				
Name				Size Type	Delete 🔺
📑 men7.bi				2.50 MB File	×
📑 re333.br	mp			2.50 MB File	× _
📑 ne.bmp				2.50 MB File	× _
📑 free.bm				2.50 MB File	×
📑 fre2.bm	C			2.50 MB File	×
📑 fr7.bmp				2.50 MB File	×
📑 f8.bmp				2.50 MB File	×
📑 col.bmp				2.50 MB File	×
ex2.bm				2.50 MB File	×
	Config_20150202143711	.csv		171 B File	×
im2.bmp				2.50 MB File	×
re222.br				2.50 MB File 2.50 MB File	×
re3.bmp				2.50 MB File	×
anima1.bm anitation				2.50 MB File	×
Config Files	(RemoteConfig_201502	202143711.csv			

Select the import file and then click the OK button. System pops up a dialogue box to remind you successfully imported.

I Note

If the imported IP has conflicted with current added device, system pops up a dialogue box to remind you. You have two options.



You can edit the exported .CVS file. **Do not change the file format; otherwise it may result in import** failure.

Does not support customized protocol import and export.

The import and export device shall have the same language format.

Remote Device Initialization

Main menu->Setting->Camera->Registration

Remote device initialization can change remote device login password and IP address.

I Note

When connecting a camera to the NVR via PoE port, NVR automatically initialize the camera. The camera adopts NVR current password and email information by default.

When connect a camera to the NVR via PoE port after NVR upgraded to the new version, the NVR may fail to initialize the camera. Please go to the Registration interface to initialize the camera.

Enter Registration interface.

Click Device Search and then click Uninitialized.

Device displays camera(s) to be initialized.

Select a camera to be initialized and then click Initialize.

Device displays password setup interface.

I Note

If you want to use current device password and email information, the remote device automatically uses NVR admin account information (login password and email). There is no need to set password and email.

Cancel using current device password and email information

Enter password setting interface.

Enter Password
Using current device password and email info.
Username admin
Password
It is 8 to 32-digit containing letter(s), number(s),symbol(s). It c ontains at least two types.
Confirm Password
Next

Set camera password.

The user name is **admin**. The password ranges from 8 to 32 digitals. It can contain letters, numbers and special characters (excluding "", "", ", ", "&"). The password shall contain at least two categories. Usually we recommend the strong password.



In order to guarantee device security, please keep the admin login password in a safe place after the device has been initialized, it is recommended to modify the password regularly.

Click Next button.

Enter input email interface.

Set email information.


Email: Input an email address for reset password purpose.

I Note

Click Next or Skip if you do not want to input email information here.

Click Next button.

Enter Change IP address interface.

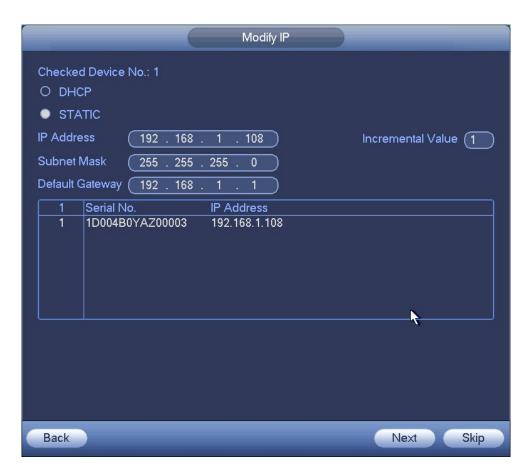

Set camera IP address

Check DHCP, there is no need to input IP address, subnet mask, and default gateway. Device automatically allocates the IP address to the camera.

Check Static, and then input IP address, subnet mask, default gateway and incremental value.



To change several devices IP addresses at the same time, please input incremental value.

If there is an IP conflict when changing the static IP address, an IP conflict dialog box pops up. If changing a batch of IP addresses, device automatically skips the conflicting IP and begins the allocation according to the incremental value.

Click Next button.

Device begins initializing camera.

1	IP Address 192.168.1.108	Serial No. 1D004B0YAZ00003	Results Initialize:Succeed


Click Finish to complete the setup.

Short-Cut Menu to Register Camera

If you have not registered a remote device to a channel, please go to the preview interface to add.

On the preview interface,

Move your mouse to the center, there is an icon "+".

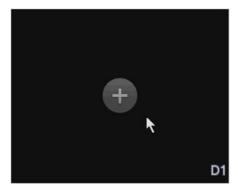

Click "+", device pops up interface to add network camera.

Image

Main menu->Setting->Camera->Image

You can configure the image settings such as saturation, contrast, brightness, sharpness for each connected camera.

Channel: In the Channel list, select the channel that you want to configure.

Saturation: Adjusts the color shades. The bigger the value, the lighter the color will become. The value ranges from 0 to 100. The default value is 50. The recommended range is between 40 and 60.

Brightness: Adjusts the image brightness. The bigger the value, the brighter the image will become. The value ranges from 0 to 100. The default value is 50. The recommended range is between 40 and 60.

Contrast: Adjusts the image contrast. The bigger the value, the more obvious the contrast between the light area and dark area will become.

The value ranges from 0 to 100. The default value is 50. The recommended range is between 40 and 60.

Auto Iris: Check the box to enable this function. This function is on by default.

Mirror: Switch the video to mirror mode. This function is disabled by default.

Flip: Rotate the image. This function is disabled by default.

BLC: Includes several options: BLC / WDR / HLC / OFF.

Profile: Set the white balance mode. It influences the general hue of the video. This function is on by default. You can select different scene mode such as auto, sunny, cloudy, home, office, night, etc to adjust the video to the best quality.

Day/night: It is to set device color and the B/W mode switch. The default setup is auto.

	_	SETTING		
	NETWORK	EVENT	STORAGE	SYSTEM
REGISTRATION	Channel	(D1)		
ENCODE CAM NAME	Exposure 3D NR	• On O Off	Config File Image Brightness Contrast Saturation Sharpness Gamma Mirror Flip BLC Mode	Config1 50 50 50 50 50 50 0 On 0 On 0 Off 0°
	WB		Day&Night_	
	Mode	Auto	Mode	Auto
	Default	Refresh	ОК	Cancel Apply

Encode

Main menu->Settings->Camera->Encode

Set the video encoding parameters such as bit rates, text overlay, snapshot settings.

From Main menu->Setting->System->Encode, you can see the following interface.

Channel: Select the channel you want.

Type: It is to set device bit stream type.

Main stream - there are three options: regular / motion detect / alarm. The sub stream supports regular bit streams only.

The active control frame function (ACF) can record different frame rates. For example, you can use high frame rate to record important events, record scheduled event in lower frame rate.

Set different frame rates for different record events.

Compression: Video encode mode.

H.264: Main Profile encode mode.

H.264H: High Profile encode mode.H.264B: Baseline Profile encode mode.H.265: Main Profile encode mode.

MJPEG: System needs high bit streams to guarantee video definition. Use the recommended max bit stream value to get the better images.

Smart Codec: Enable the smart codec function. This function can reduce the video bit stream for recorded video to maximize the storage space.

Resolution: In the Resolution list, select resolution for the video.

Frame rate (FPS): Configure the frames per second for the video. The higher the value, the clearer and smoother the image will become. Frame rate changes along with the resolution.

Bit rate type: In the **Bit Rate** list, select a value or enter a customized value to change the image quality. The bigger the value is, the better the image will become.

Video/audio: You can enable or disable the video/audio. The main stream is enabled by default. After enable the audio function, the record file is composite file consisting of the video and audio. For the sub stream, please enable video first and then enable audio function.

Audio format: Set audio encode format.

Sampling rate: Audio sampling rate refers to the sampling amount within 1 second. The higher the value is, the better the audio is. The default setup is 8K.

D NOTE

Click Copy to copy the settings to other channels.

	SETTING
	TNETWORK 📷 EVENT STORAGE 🛃 SYSTEM
REGISTRATION	Encode Mode Overlay Snapshot
ENCODE	Channel D1
CAM NAME	Code-Stream Type General
	Compression (H.264)
	Smart Codec Close
	Resolution (2560×1440) (704×480(D1))
	Frame Rate(FPS) 20 > 5 >
	Bit Rate Type CBR
	Bit Rate(Kb/S) (4096 • (256 •
	Reference Bit Rate 2304-6144Kb/S 128-768Kb/S
	Audio/Video
	Default Copy Refresh OK Cancel Apply

Overlay

Main menu->Settings->Camera->Overlay

Overlay: you can configure to display system time and channel name on each channel window in the live view screen.

Cover area: Here is for you to cover area section. You can drag you mouse to set proper section size. In one channel video, system max supports 4 zones in one channel. You can set with Fn button or direction buttons.

Preview / monitor: Cover area has two types. Preview and Monitor. Preview means the privacy mask zone cannot be viewed by user when system is in preview status. Monitor means the privacy mask zone cannot be view by the user when system is in monitor status.

Time display: You can select system displays time or not when in playback. Please click set button and then drag the title to the corresponding position in the screen.

Channel display: You can select system displays channel number or not when in playback. Please click and then drag the title to the corresponding position in the screen.

PNETWORK 📷 EVENT SYSTEM
Encode Mode Overlay Snapshot
Channel D1 🔹
Time Display Monitor Setting Channel Display Monitor Setting Cover-Area Monitor Setting
Customized Title Monitor Setting Customized Title1 Customized Title2 Customized Title3 Customized Title4 Customized Title5 Align Mode Right Align • Default Copy Refresh OK Cancel Apply

Snapshot

Main menu->Settings->Camera->Snapshot

Setup snapshot mode, picture size, quality and frequency.

Snapshot mode: There are two modes: regular and trigger. If you set regular mode, you need to set snapshot frequency. If you set trigger snapshot, you need to set snapshot activation operation.

Image size: Here you can set snapshot picture size.

Image quality: Here you can set snapshot quality. The value ranges from 1 to 6.

Interval: Set timing (schedule) snapshot interval.

	SETTING
	TNETWORK 📷 EVENT STORAGE 🛃 SYSTEM
REGISTRATION IMAGE ENCODE CAM NAME	Encode Mode Overlay Snapshot
	()
	Сору
	2345678910111213141516
_	OK Cancel

Channel Name

Main menu->Setting->Camera->Cam name

Modify channel name. Supports maximum of 63-character. Please note you can only modify the channel name of the connected network camera.

	SETTING		
	TINETWORK	STORAGE 🛃 SYSTEM	
REGISTRATION IMAGE ENCODE CAM NAME	Camera Name D1 OPI 1 D3 CAM 3 D5 CAM 5 D7 CAM 7 D9 CAM 9 D11 CAM 11 D13 CAM 13 D15 CAM 15	D2 CAM 2 D4 CAM 4 D6 CAM 6 D8 CAM 8 D10 CAM 10 D12 CAM 12 D14 CAM 14 D16 CAM 16	

Remote Upgrade

Main menu->Setting->Camera->Registration->Upgrade

Upgrade the connected network camera firmware. It includes online upgrade and file upgrade. From main menu->setting->camera->remote, the interface is shown as below.

	SETTING
CAMERA	TNETWORK 📷 EVENT 📴 STORAGE 🔤 SYSTEM
CAMERA REGISTRATION IMAGE ENCODE CAM NAME	Image: Network EVENT STORAGE SYSTEM Camera Reg Status Firmware Upgrade Device Upgrade(0/6) Device Type None C Status IP Address System Version Status Upgrade D1 10.1.1.65 2.622.00000 To be upgraded Detect D2 10.1.1.66 2.622.00000 To be upgraded Detect D3 10.1.1.67 2.622.00000 To be upgraded Detect D4 0.1.1.68 2.622.000000 To be upgraded Detect D5 10.1.1.69 2.622.000000 To be upgraded Detect D5 10.1.1.69 2.622.000000 To be upgraded Detect D6 10.1.1.70 2.622.000000 To be upgraded Detect
	File Upgrade Manual Check Online Upgrade

Online Upgrade

Select a remote device and then click the Detect button on the right-hand side, alternatively check the box to select a remote device and then click Manual Check.

System detects the new version on the internet.

Select a remote device that requires a new version and then click online upgrade.

After successful operation, system pops up upgrade successful dialogue box.

File upgrade

Select a channel and then click File upgrade.

Select upgrade file on the pop-up interface.

Select the upgrade file and then click OK button. After successful operation, system pops up upgrade successful dialogue box. III Note

If there are too many remote devices, select device type from the drop-down list.

Device Status

Main menu->Setting->Camera->Registration->Status

View the IP cameras status such as motion detect, video loss, tampering, alarm.

- IP camera status: == Front-end does not support. IP Front-end supports. II There is alarm event from current front-end.
- Connection status: Connection succeeded. Connection failed.
- Refresh: Click it to get latest front-end channel status.

		SETTING		
	TWORK	VENT	STORAGE	SYSTEM
REGISTRATION IMAGE	Camera Reg Status	Firmware	Upgrade	
ENCODE	Channel Status	IP Address	Video Detect IPC E	xternal Alarm
CAM NAME	D1 O	10.1.1.65	<i>İ</i> t	
	D2 🧕	10.1.1.66	́х.	
	D3 0 D4 0 D5 0 D6 0	10.1.1.67		
	D4 O	10.1.1.68		
	D5 O	10.1.1.69 10.1.1.70	Ŕ Ŕ	
	Refresh	10. 1. 1. 70	2	

Firmware

Main menu->Setting->Camera->Registration->Firmware

It is to view channel, IP address, manufacturer, type, system version, SN, video input, audio input, external alarm etc.

	SETT	TING	
	👼 NETWORK 🛛 📆 EVENT	🍡 STORAGE 🛛 🛃 S	YSTEM
REGISTRATION IMAGE	Registration Status Fi	irmware Upgrade	
ENCODE CAM NAME	D1 10.1.1.65 F	nufacturer Type Private IP Camera Private IPC-HDBW2201R-ZS	System Vers 2.600.0005.0 2.210.0000.8
	Refresh		,

Preview

After device booted up, the system displays in multiple-channel mode.



If you want to change system date and time, you can refer to general settings (Main Menu->Setting->System->General).

If you want to modify the channel name, please refer to the display settings (Main Menu->Camera->CAM name).

SN	lcon	Function
1		Current channel is recording, system displays this icon.
2	*	Motion detection alarm occurs, system displays this icon.
3	?	Video loss alarm occurs, system displays this icon.
4	8	Current channel is in monitor lock status, system displays this icon.

<u>Tips</u>

- Preview drag: If you want to change position of channel 1 and channel 2 when you are previewing, you can left click mouse in the channel 1 and then drag to channel 2, release mouse you can switch channel 1 and channel 2 positions.
- Use mouse scroll to control digital zoom: You can use the mouse to zoom in and out of the image.

Navigation bar

On the preview interface, left click mouse, you can view the navigation bar.



Go to the Main menu->Setting->System->General to enable navigation bar function; disabled by default.



Main Menu

Click for the main menu interface.

Split Screen

Click **Click** to select corresponding window-split mode and output channels.

PTZ

Click 🖵 system goes to the PTZ control interface.

Image

Click 😰 to go to the image interface. Please make sure system is in single-channel mode.

Search

Click System goes to search interface.

Alarm Status

Click 🚺 to check alarm status interface. It is to view device status and channel status.

Channel Info

Click 🔜 for the channel information interface. To view information of the corresponding channel.



Registration

Click 🖼 system goes to the registration interface.

Network

Click 📷 system goes to the network interface. Modify network IP address, default gateway and etc.

HDD Manager

Click System goes to the HDD manager interface. View and manage HDD information.

USB Manager

Click Displaystem goes to the USB Manager interface. View USB information, backup and update.

Preview Control Interface

Move you mouse to the top center of the video of the current channel, you can see system pops up the preview control interface. If your mouse stays in this area for more than 6 seconds and has no operation, the control bar automatically hides.



Instant playback

Main menu->Setting->System->General

Set instant playback to start 5-60 minutes before current time.

Digital zoom

Zoom into specified zone of the current channel. Click button 🗟 the button is shown as 😫

There are two ways for you to zoom in.

- Drag the mouse to select a zone.
- Put the middle button at the center of the zone you want to zoom in and move the mouse.



Right click mouse to cancel zoom and go back to the original interface

Manual record function

It is to back up the video of current channel to a USB device. System cannot backup the video of multiple-channel at the same time.

Click button III, system begins recording. Click it again, system stops recoridng. You can find the record file on the USB device.

Manual Snapshot

Click Los States Click C

Bidirectional talk



Click

Click 💟 button to start bidirectional talk function the icon now is shown as



again, you can cancel bidirectional talk and the bidirectional talk buttons of other digital



Registration

Shortcut menu. Click to enter to the registration interface to add / delete remote device or view its corresponding information.


Switch bit streams

Click M to switch the bit stream type of the main stream and sub stream.

- M: Main stream. Bit streams are big and definition is high. It occupies large network bandwidth suitable for video wall surveillance, storage etc.
- S: Sub stream. Definition is low but occupies small network bandwidth. It is suitable for general surveillance, remote connection etc.

Right Click Menu

After you logged into the device, right click mouse, the short cut menu will be displayed.

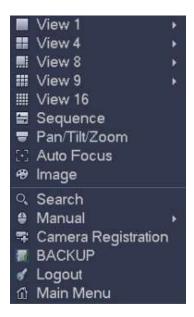

- Window split mode: You can select window amount and then select channels.
- Sequence: Change channel display sequence on the preview window.
- PTZ: Click it to go to PTZ interface.
- Auto focus: It is to set auto focus function. Please make sure the connected network camera

supports this function.

- Color setting: Set video corresponding information.
- Search: Click it to go to Search interface to search and playback a record file.
- Record control: Enable/disable record channel.
- Camera registration: Search and add a remote device.
- Main menu: Go to system main menu interface.

<u>Tips</u>

Right click mouse to go back to the previous interface.

Edit View (Sequence)

On the preview interface, right click mouse and then click Edit view. Enter edit view interface.



Enter edit view interface, device automatically switches to the max split amount mode. The channel list on the edit view interface displays the added camera channel number and channel

name. 💟 means camera is online. 📕 means camera is offline.

In case the channel amount has exceeded the device max split amount, the edit view interface can


display the max screen number amount and current screen number, click 🚺 or 🚬, switch the video

from another channel.

Sequence
 D8 IP PTZ Dome D11 IPC D13 CAM 13 D14 CAM 1 D15 CAM 15 D17 CAM 17 D18 CAM 18 D19 CAM 1 D20 CAM 20 D21 CAM 21 D22 CAM 22 D23 CAM 23 D24 IPC
Apply Cancel

On the edit view interface, drag the channel to the desired window, or drag on the preview window to switch the position.


Check the channel number at the bottom right corner to view the current channel sequence.

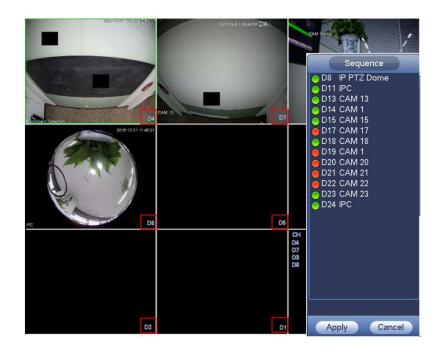

Click Apply to save current channel sequence.

After changing the channel sequence, click Cancel button or right click mouse, device pops up the dialogue box.

- Click OK to save current settings.
- Click Cancel to exit without saving the settings.

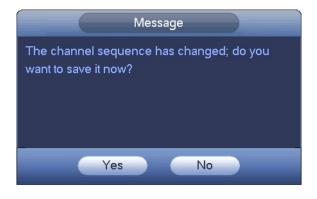

Preview Display Effect Setup

Color

Here you can set hue, brightness, contrast, saturation, gain, white level, color mode etc.



Item	Note		
Period	Divide 24 hours into two periods and configure the		
	corresponding color settings.		
Effective Time	Enable the function and then set the effective time for each		
	period.		
	Adjust the sharpness of image edge. The bigger the value is, the		
Sharphose	more obvious the image edge, and the noise is also greater.		
Sharpness	If the value is too high it will cause niose. The default value is 50		
	and the recommended value ranges from 40 to 60.		
Brightness	Adjust the image brightness. The value ranges from 0 to 100.		
	The default value is 50.		
	The bigger the value is, the brighter the image will become. The		
	recommended range is between 40 and 60.		
Contrast	Adjust the image contrast. The bigger the value is, the more		
	obvious the contrast between the light area and dark area will		
	become. You can adjust this value when the contrast is not		
	obvious. The value ranges from 0 to 100. The default value is 50.		
	The recommended range is between 40 and 60.		
Saturation	Adjust the color shades. The bigger the value, the lighter the		
	color will become. This value does not influence the general		

Item	Note	
	image lightness.	
	The value ranges from 0 to 100. The default value is 50. The	
	recommended range is between 40 and 60.	
Gain	The smaller the value, the low the noise. But the brightness is	
	also too low in the dark environments. It can enhance the video	
	brightness if the value is high. But the video noise may become	
	too clear.	
Color mode	In the Color Mode list, you can select Standard, Soft, Bright,	
	Colorful, Bank, Customized 1, Customized 2, Customized 3,	
	and Customized 4.	
	The sharpness, hue, brightness, contrast and saturation will	
	adjust automatically according to the selected color mode.	

Display

Main Menu->Setting->System->Display->Display

These settings do not affect the recorded file or playback.

SETTING				
📆 CAMERA		To EVENT	STORAGE	SYSTEM
GENERAL DISPLAY	Display	Tour		
VOICE PROMPT ACCOUNT SECURITY AUTO MAINTAIN IMP/EXP DEFAULT UPGRADE	Transparency Time Display Channel Display Image Enhance IVS Rule Original Scale Resolution		%	
	Default		ОК	Cancel Apply

Now you can set corresponding information.

- Resolution: There are five options: 1280×1024 (Default), 1280×720, 1920×1080, 1024×768 and 3840×2160. Please note the system needs to reboot to activate current setup.
- Transparency: Here is for you to adjust menu transparency. The higher the value, the more transparent the menu is.
- Time display: You can set to display time or not when in playback.
- Channel display: You can select to channel name or not when system is playback.
- Image enhance: Check the box; you can optimize the margin of the preview video.
- Original scale: Check the box here to select a corresponding channel; it can restore video original scale.

Click OK button to save current setup.

Preview Tour Parameters

Main Menu->Setting->System->Display->Tour

Here you can set tour parameter.

- Enable tour: Check the box to enable tour function. The general tour supports all types of window split mode.
- Interval: Input proper interval value here. The value ranges from 1-120 seconds.
- Motion tour type: System support 1/8-window tour. Please note you need to go to the main menu->Setting->Event->Video detect->Motion detect to enable tour function.
- Alarm tour type: System support 1/8-window tour. Please note you need to go to the main menu->Setting->Event->Alarm to enable tour function.
- Window split: It is to set window split mode.


SETTING
🥰 CAMERA 🚁 NETWORK 📷 EVENT 🍡 STORAGE 🔄 SYSTEM
GENERAL DISPLAY VOICE PROMPT ACCOUNT SECURITY AUTO MAINTAIN MP/EXP DEFAULT UPGRADE I Add Default Display Tour Video Detect View 1 Alarm View 1 S View 1 S View 1 S S View 4 S Vindow Split View 4 S Vindow Split Move up (Move down) Default OK Cancel Apply

<u>Tips</u>

On the navigation bar, click 间	to enable/disable tour
--------------------------------	------------------------

PTZ Control

Right click mouse. Please note you can only go to the PTZ control interface when you are in single window display mode.

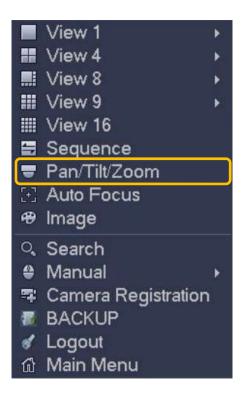

Please note the command name is grey if the device does not support this function. The PTZ operation is only valid in single window mode.

PTZ control panel performs the operations such as directing camera in eight directions, adjusting zoom, focus and iris settings, and quick positioning.

Speed Controls the movement speed. The bigger the value is, the faster the movement will be.

You can click of the zoom, focus and iris to zoom in / out, definition and brightness.

The PTZ rotation supports eight directions.



In the middle of the eight direction arrows, there is a 3D intelligent positioning key.

Click this key, system goes back to the single screen mode. Drag the mouse in the screen to adjust section size. The dragged zone supports 4X to 16X speeds.



Name	Function	function	Shortcut	Function	function	Shortcut
	key		key	key		key
Zoom	•	Near	ŀ	0	Far	•
Focus	•	Near	•	0	Far	►
Iris	•	close	◀	0	Open	► II

Click

to open the expanded menu, you can set preset, tour, pattern, scan etc.



Please note the above interface may vary due to different protocols. The button is grey and cannot be selected once the current function is null. Right click mouse to go back.

lcon	Function	lcon	Function
•	Preset		Flip
	Tour	Ð	Reset
~	Pattern		Aux
₿	Scan	0	Aux on-off button
P	Rotate	0	Go to menu

PTZ Function Setup

Click on the expanded control interface to set preset, tour, pattern, and scan.

Preset Setup

Click the direction arrows to the required position.

In the Preset box, enter the value to represent the required position.

Click Setting to complete the preset settings.



Tour Setup

Click the **Tour** tab. The **Tour** tab is displayed. In the **Patrol No**. box, enter the value for the tour route. In the **Preset** box, enter the preset value. Click **Add Preset**. A preset will be added for this tour.

<u>Tips</u>

Repeat the above steps to add more presets to the tour. Click Del preset button to remove it from the tour. Please note some protocols do not support delete preset function.

	PT	z	
Preset	Tour	Pattern	Border
	k	Del I	0. 0 Preset Preset Tour

Pattern Setup

Click the Pattern tab.

The **Pattern** interface is displayed.

In the **Pattern** box, enter the value for pattern.

Click **Start** to perform the directions operations. You can also go to the PTZ Control Panel to perform the

operations of adjusting zoom, focus, iris, and directions.

On the **PTZ** interface, click **End** to complete the settings.



Scan Setup


Click the Border tab.

The **Border** interface is displayed.

Click the direction arrows to position the left and right borders.



Call PTZ Function

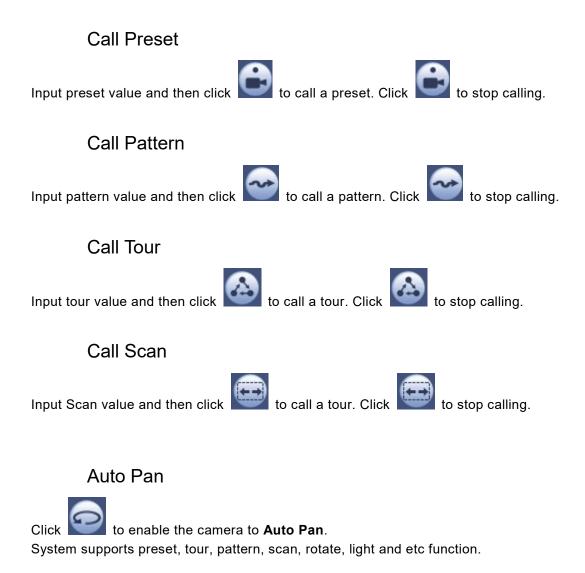

	Aux	
Click	, system goes to the	e following interface.

	AUX	
Direct Aux		
NONE	On	Off
Aux Num		
1	On	Off

In the **Direct Aux** list, select the option that corresponds to the applied protocol.

In the Aux Num box, enter the number that corresponds to the AUX switch on the decoder.

Playback and Search

Playback Controls





	From R/W HDD Recor Sui Mo Tu: We Thi Fri Sat 1 2 4 5 6 7 8 1 2 4 5 1
	D7 CAM 7 D8 CAM 8 D9 CAM 9 D10 CAM 9 D10 CAM 10 D11 CAM 11 D12 CAM 12 D13 CAM 13 D14 CAM 14 D15 CAM 15 D16 CAM 16 0 D16 CAM 16
	00:00:00 - 00:00 💾
Stop playback 🔲 Sync 🔽 All 🔽 Regular 😾 Alarm ✔ Motion	Q24hr Q2hr Q1hr Q30min


Name	Function		
Display	Display the searched recorded video or picture. It supports playing in single-channel, 4-		
window	channel, 9-channel, and 16-channel simultaneously.		
Search type	Select the content to play back: Record , PIC , Splice Playback .		
	The dates with recording or snapshots have a small solid circle under the date.		
Calendar	r Click the date that you want to search, the time bar displays the correspondin		
	recordings.		
Time Bar	Display the type and time period of the selected recorded video.		
	In the 4-channel layout, four time bars are displayed; in the other view layouts, only one		
	time bar is displayed.		
	Click on the colored area to start playback from a certain time.		
	Use the mouse scroll wheel to zoom in to the time bar.		
	Time bar colors: Green indicates general type; Red indicates alarm; Yellow indicates		
	motion detection.		

control pane. II You can switch between play and pause whilst in playback. Stop. Click the Stop button to stop playback. Reverse Play. During playback, click the Reverse Play button to play the video in reverse playback, click <a forward.<="" playing="" start="" td="" to=""> Previous Frame / Next Frame. IVent the playback is paused, click <a forward.<="" playing="" start="" td="" to=""> Previous Frame / Next Frame. When the playback is paused, click <a forward.<="" playing="" start="" td="" to=""> IVent the playback is paused, click <a forward.<="" playing="" start="" td="" to=""> Vient the playback is playback, click <a forward.<="" playing="" start="" td="" to=""> IVent the playback is playback, click <a <a="" a="" back="" click="" playing="" playing<="" recorded="" single-frame="" start="" to="" video,=""> Slow Playback, click <a 16.<="" 2,="" 4,="" 8,="" as="" of="" or="" playback="" set="" slow="" slowx1="" speed="" td="" the="" to=""> During playback, click <a a="" as="" fast="" fastx<="" of="" playback="" set="" speed="" the="" to=""> Fast Playback. During playback, click >> to set the speed of fast playback as FastX4, Sor FastX16. During slow playback, click >> to speed up slow playback. Image: Simulation of playback. In the full screen mode, click Image: to take a snapshot and save to a USB device. Add Mark for the recorded view. Xou can set the time bar units as 24hr, 2hr, 1hr, or 30min, You can set the time bar units as 24hr, 2hr, 1hr, or 30min, You can set the time bar units as 24hr, 2hr, 1hr, or 30min, You can set th			
pane. Stop. Click the Stop button to stop playback. Reverse Play. During playback, click the Reverse Play button to play the video in reverse During reverse playback, click ◀ to start playing forward. Previous Frame / Next Frame. ♥ When the playback is paused, click ◀ for click ▶ to play single-frame recorded video. When the playback is paused, click ◀ for click ▷ to start playing Slow Playback. During playback, click ▶ to set the speed of slow playback as SlowX1/2 SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to slow down the speed of fast playback. Fast Playback. During playing back, click ▶ to set the speed of fast playback as FastX FastX4, FastX4, FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Image: Simultary and the full screen mode, click Image: The full screen mode screeceeeeeeeeeeeeeeeeeeeeeeeeeeeeeeee	 Play / Pause. You can switch between play and pause whilst in playback. 		
 Click the Stop button to stop playback. Reverse Play. During playback, click the Reverse Play button to play the video in reverse playback, click < to start playing forward. Previous Frame / Next Frame. When the playback is paused, click < or click > to play single-frame recorded video. When playing back single-frame recorded video, click > to start playing Slow Playback. During playback, click > to set the speed of slow playback as SlowX1/2 SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click > to slow down the speed of fast playback. Fast Playback. During playing back, click > to set the speed of fast playback as FastX FastX4, FastX4, FastX8, or FastX16. During slow playback, click > to speed up slow playback. Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click to take a snapshot and save to a USB device. Xou can set the time bar units as 24hr, 2hr, 1hr, or 30min. 			
Click the Stop button to stop playback. Reverse Play. Uuring playback, click the Reverse Play button to play the video in reveraburing reverse playback, click ◀ to start playing forward. Previous Frame / Next Frame. ♥ When the playback is paused, click ◀ or click ▷ to play single-frame recorded video. When playing back single-frame recorded video, click ▷ to start playing Slow Playback. ▶ During playback, click ▷ to set the speed of slow playback as SlowX1/2 SlowX1/4. SlowX1/8, or SlowX1/16. During playback, click ▷ to slow down the speed of fast playback. Fast Playback. During playback, click ▷ to set the speed of fast playback as FastX Fast Playback. During playing back, click ▷ to set the speed of fast playback as FastX Fast Playback. During slow playback, click ▷ to speed up slow playback. Image: Smart search (not avaiable in all models) Adjust volume of playback. Image: Adjust volume of playback. Image: Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Image: State of the state			
During reverse playback, click ◀ to start playing forward. Previous Frame / Next Frame. ◀ When the playback is paused, click ◀ or click ▶ to play single-frame recorded video. When playing back single-frame recorded video, click ▶ to start playing Slow Playback. ▶ During playback, click ▶ to set the speed of slow playback as SlowX1/2. SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to set the speed of fast playback. Fast Playback. During playing back, click ▶ to set the speed of fast playback as FastX. Fast Playback. During slow playback, click ▶ to set the speed of fast playback as FastX. FastX4, FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Image: Smart search (not avaiable in all models) Image: Adjust volume of playback. Image: Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Previous Frame / Next Frame. ↓ Previous Frame / Next Frame. ↓ When the playback is paused, click ↓ or click ↓ to play single-frame recorded video. When playing back single-frame recorded video, click ▶ to start playing Slow Playback. During playback, click ▶ to set the speed of slow playback as SlowX1/2 SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to slow down the speed of fast playback. Fast Playback. During playing back, click ▶ to set the speed of fast playback as FastX FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Image: Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click Image: to take a snapshot and save to a USB device. Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.	rse.		
Image: Simple state of the second			
Image: Precorded video. When playing back single-frame recorded video, click ➤ to start playing Slow Playback. During playback, click ➤ to set the speed of slow playback as SlowX1/2, SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ➤ to slow down the speed of fast playback. Fast Playback. During playing back, click ➤ to slow down the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ➤ to speed up slow playback. Image: Smart search (not avaiable in all models) Image: Adjust volume of playback. Image: Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
When playing back single-frame recorded video, click ▶ to start playing Slow Playback. During playback, click ▶ to set the speed of slow playback as SlowX1/2 SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to slow down the speed of fast playback. Fast Playback. During playing back, click ▶ to slow down the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click to take a snapshot and save to a USB device. Add Mark for the recorded view.			
Slow Playback. During playback, click ▶ to set the speed of slow playback as SlowX1/2, SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to slow down the speed of fast playback. Fast Playback. During playing back, click ▶ to set the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Image: Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click Image: to take a snapshot and save to a USB device. Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Image During playback, click ► to set the speed of slow playback as SlowX1/2, SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ► to slow down the speed of fast playback. Fast Playback. During playing back, click ► to set the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ► to speed up slow playback. Smart search (not avaiable in all models) Image: Adjust volume of playback. In the full screen mode, click Image: Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.	orward.		
SlowX1/4, SlowX1/8, or SlowX1/16. During fast playback, click ▶ to slow down the speed of fast playback. Fast Playback. During playing back, click ▶ to set the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ▶ to speed up slow playback. Smart search (not avaiable in all models) Image: Adjust volume of playback. In the full screen mode, click Image: to take a snapshot and save to a USB device. Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
During fast playback, click ► to slow down the speed of fast playback. Fast Playback. During playing back, click ► to set the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click ► to speed up slow playback. Image: Smart search (not avaiable in all models) Adjust volume of playback. Image: Im	,		
Fast Playback. During playing back, click >> to set the speed of fast playback as FastX FastX4, FastX8, or FastX16. During slow playback, click >> to speed up slow playback. Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click In the full screen mode, click Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Image: During playing back, click >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>			
Image: Second system FastX4, FastX4, FastX8, or FastX16. During slow playback, click >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>			
FastX8, or FastX16. During slow playback, click >> to speed up slow playback. Image: Smart search (not avaiable in all models) Image: Adjust volume of playback. Image: In the full screen mode, click Image: In the full screen mode, click Image: In the full screen mode, click Image: Add Mark for the recorded view. Image: Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.	,		
Image: During slow playback, click >> to speed up slow playback. Image: During slow playback, click >> to speed up slow playback. Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) Image: During slow playback, (not avaiable in all models) </td <td></td>			
Smart search (not avaiable in all models) Adjust volume of playback. In the full screen mode, click In the full screen mode, click Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Adjust volume of playback. Image: Adjust volume of playback.			
Image: Second structure In the full screen mode, click is to take a snapshot and save to a USB device. Image: Second structure Add Mark for the recorded view. Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
Image: device. Image:			
Time bar You can set the time bar units as 24hr, 2hr, 1hr, or 30min.	storage		
You can set the time bar units as 24hr, 2hr, 1hr, or 30min.			
unit			
Clip During playback, sections of recorded video can be clipped and saved to t storage device.	ie USB		
Select recordings that you want to view.			
Click \blacktriangleright to start playing from the beginning.			
Double-click anywhere in the time bar to start playback.			
Click on the time bar to select the start time, and then click to start clipp	ng.		

	Click on the time bar to select the end time, and then click to stop clipping. Click Dick Dick Dick Dick Dick Dick Dick D
Record type	Select the the recording type to search for.
Motion detection search	Whilst playing back video motion detection, you can analyze a certain area to find when a specific event occurred. The system will display the motion events within this area.
Sync	Select the Sync check box to simultaneously play recorded videos of different channels in the same period in multi-channel view.
Digital zoom	When the system is in full-screen playback mode, left click the mouse. Drag the mouse to select a section and then left click mouse to digital zoom. Right click mouse to exit.

Clip

This function allows you to clip some footages to a new file and then save to the USB device. Please follow the steps listed below.

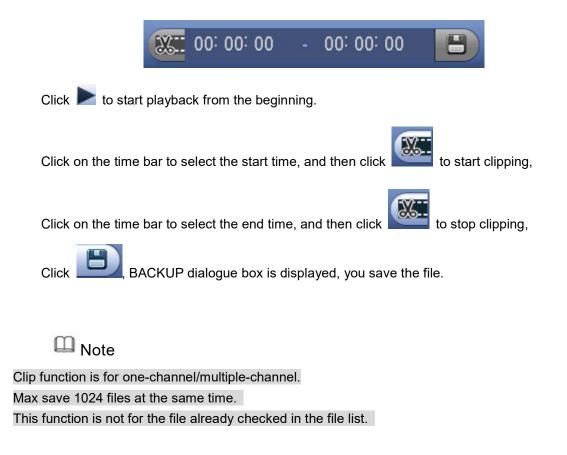

Record Backup

You can back up the recorded video file or splice video file into the USB storage device.

Click The **BACKUP** dialog box is displayed.

	Backup
1	Name(Type)Free Space/Total SpaceDevice StatusImage: Status65.25 MB/14.45 GBReady
2	CH Type Start Time End Time Size(KB)
1	
2	✓ 8 R 17-04-19 13:15:59 17-04-19 13:48:44 1016352 ✓ 8 R 17-04-19 13:51:26 17-04-19 14:07:51 510336
Id Page	Up N Page Down En Select/Cancel backup device or file. Combine Video

If you do not want to backup the file, uncheck the box.

Click Backup to begin the process.

Smart Search Playback

Main menu->Setting->Event->Video detect->Motion detect

Whilst playing back video motion detection, you can analyze a certain area to find when a specific event occurred. The system will display the motion events within this area.

Not all models support this function.

To use the Smart Search function, do the following:

Select **Main Menu > VIDEO**, the video search interface is displayed. In the **CAM NAME** list, select the channel(s) that you want to play.

Start playback.



The grid is displayed on the screen.



Only single-channel supports smart search.

If multi-channels are selected, double-click on the channel window to display this channel only on the screen, and then you can start using smart search function.

Drag the pointer to select the searching area.



The screen starts playing back the motion splices of recorded video for the selected area.

Click to exit the playback.

Mark Playback

When you are playback record, you can mark the record when there is important information. After playback, you can use time or the mark key words to search corresponding record and then play. It is very easy for you to get the important video information.

Add Mark

When system is playback, click Mark 🐼 button to enter the following interface.

Add Mark
Mark Time (2013-09-27 10:01:08) Mark Name (
Default OK Cancel

Playback Mark

During single window playback mode, click mark file list button 🔊 you can go to mark file list interface. Double click a mark file, you can begin playback from the mark time.

Play before mark time

Here you can set to begin playback from previous "N" seconds of the mark time.

I Note

Usually, system can playbacks previous N seconds record if there is such kind of record file. Otherwise, system playbacks from the previous X seconds when there is such as kind of record.

Mark Manager

Click the mark manager button on the Search interface, you can go to Mark Manager interface.


By default, it manages all the marked videos of the selected channel.

To search the marked video, select channel number from the **Channel** list, enter time in **Start Time** box and **End Time** box, and then click **Search**.

All the marked videos display in time order.

To modify the name of marked video, double-click a marked video, the **Edit Mark** dialog box is displayed.

To delete the marked video, select the marked video, and then click **Delete**.

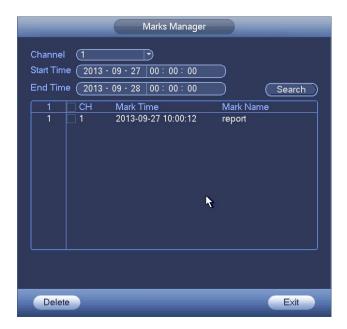

Modify

Double click a mark, system dialogue box pops up, change mark information. You can only change mark name.

Delete

Here you can check the mark you want to delete and then click Delete button, you can remove one mark item.

I Note

After you go to the mark management interface, system needs to pause current playback. System resume playback after you exit mark management interface.

If the mark file you want to playback has been removed, system begins playback from the first file in the list.

Playback Image

You can search and review recorded snapshots.

Select **Main Menu > VIDEO**, the video search interface is displayed. In the **Search Type** list, select **PIC**. In the **Channel** list, select a channel number. In the **Calendar** area, select a date.

Click

The system starts playing snapshots according to the configured intervals.

Splice Playback

Select **Main Menu > VIDEO**, the video search interface is displayed. In the **Search Type** list, select **Splice Playback**; In the Split Mode list, select **4**, **9**, or **16**.

In the **Calendar** area, select a date. In the **CAM NAME** list, select a channel.

D NOTE

Only single-channel supports this function.

Start playing back splices.

Click *Click*, the playback starts from the beginning.

Double-click anywhere on the time bar, the playback starts from where you click.

0 0.05 0.10 0.15 0.20 0.25 0.30 0.35 0.40 0.45 0.50 0.55 1

Select splice file.


- Click Playback, system playbacks from the first of current date by default.
- Click time bar, system playbacks from the time you click.
- Click 📕, you can select on the file list.



Every recorded video file must be at least five minutes. If a recorded video file is less than 20 minutes but still choose to split into four windows, the system will automatically adjust the windows quantity to ensure every splice is more than five minutes.

File List

You can view all the recorded videos within a certain period from any channel in the File List.

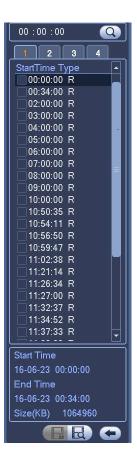

Select **Main Menu > VIDEO**, the video search interface is displayed. Select channel(s).

Click 目

The File List interface is displayed.

Start playback.

Click P, the playback starts from the first file by default.

Select a file, the system plays back this file.

D NOTE

In the time box on the top of the file list interface, you can enter the specific time to search the file that you want to view.

In the File List area, 128 files can be displayed.

File type: **R** indicates general recorded video; **A** indicates recorded video with external alarms; **M** indicates recorded video with motion detection events.

Lock or Unlock File

Select the video you want to lock from the **File List** interface, and then click **File**. The locked video will not be overwritten.

I Note

The recorded video that is being written cannot be locked.

To view the locked recordings, click *I* y the **FILE LOCKED** interface is displayed.

3 CH Type Start Time End Time Size(KB) 1 1 R 2016-06-23 10:00:00 2016-06-23 10:33:44 539136 2 1 R 2016-06-23 10:50:35 2016-06-23 10:52:55 2048 3 1 R 2016-06-23 10:56:50 2016-06-23 10:58:11 2048						
2 1 R 2016-06-23 10:50:35 2016-06-23 10:52:55 2048 3 1 R 2016-06-23 10:56:50 2016-06-23 10:58:11 2048	3		Туре	Start Time	End Time	Size(KB)
3 1 R 2016-06-23 10:56:50 2016-06-23 10:58:11 2048						
	Z					
Unlock	3		n	2010-00-23 10.30.30	2010-00-23 10.38.11	2040
Unlock						
Unlock						
Unlock Cancel						
Unlock Cancel						
Unlock Cancel						
Unlock Cancel						

Other Aux Functions

Digital Zoom

In 1-window playback mode, left click mouse to select any zone on the screen, you can zoom in current zone. Right click mouse to exit.

Switch Channel

During playback mode, select from the dropdown list to switch playback channel. This function is not for the channel of no record. The smart search channel does not support this function either.

Event Manager

Video Detect

Main menu->Setting->Event->Video detect

The video detect adopts the computer image and graphics process technology. It can analyze the video and check there is considerable changing degree or not. Once video has changed

considerably (such as there is any moving object, video is distorted), system can trigger the corresponding alarm activation operations.

In the main menu, from Setting to Detect, you can see motion detect interface. There are four detection types: motion detection, video loss, tampering and scene changing.

Video Motion Detection

Main menu->Setting->Event->Video detect->Motion detect

	SETTING
CAMERA	TRETWORK 📷 EVENT STORAGE 📑 SYSTEM
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY ALARM OUTPUT	Motion Detect Video Loss Tampering Scene Change Channel D1 Enable Image: Change Region Setting Image: Change Image: Change Period Setting Anti-Dither Setting
	Period Setting Anti-Dither 5 s Alarm Out 1 2 Latch 10 s Show Message Send Email PRecord Channel D1 D2 D3 D4 D5 D6 PTZ Activation Setting Post-Record 10 s Tour D1 D2 D3 D4 D5 D6 Snapshot D1 D2 D3 D4 D5 D6 Log
	Default Copy Refresh OK Cancel Apply

The system analyzes the video images to detect an obvious change such as moving objects and blurriness. The system can activate alarms when such changes are detected.

Detection menu is shown as below.

Parameter	Description
Channel	In the Channel list, select a channel to set the motion detection.
Region	Click Setting to define the motion detection region.
Enable MD	Enable or disable the motion detection function.
Period	Define a period during which the motion detection is active.
Anti-Dither	The system will only record one event during this period.

Parameter	Description
	Click Setting to display setting interface.
	(not supported by all models)
Alarm Out	General Alarm: Enable alarm activation through the alarm
	devices connected to the selected output port.
	• External Alarm: Enable alarm activation through the connected
	alarm box.
	Set the length of time the recorder delays turning off the alarm after
Latch	the initial event. The value ranges from 0 seconds to 300 seconds,
	and the default value is 10 seconds. If you enter 0, there will be no
	delay.
Show Message	Select the Show Message check box to enable a pop-up message
Show Message	in your local device.
	Select the Send Email check box to enable the system to send an
	email notification when an alarm event occurs.
Send Email	NOTE NOTE
	To use this function, make sure the email function is enabled in Main
	Menu > NETWORK > EMAIL.
	Select the channel(s) that you want to record. The selected channel(s)
	starts recording after an alarm event occurs.
Record Channel	NOTE NOTE
	The recording for motion detection and auto recording function must
	be enabled.
	Click Setting to display the PTZ interface.
PTZ	Enable PTZ activation function. For each PTZ camera, select the
	preset that you want to be called when an alarm event occurs.
	Set a length of time for the Device to delay turning off recording after
Post Record	the alarm is cancelled. The value ranges from 10 seconds to 300
	seconds, and the default value is 10 seconds.
Tour	Select the Tour check box to enable a tour of the selected channels.
	Select the Snapshot check box to take a snapshot of the selected
	channel.
Snapshot	NOTE NOTE
	To use this function, select Main Menu > CAMERA > ENCODE >
	Snapshot, in the Mode list, select Event.
	Select the check box to enable the function. When an alarm event
	occurs, the video output port outputs the settings configured in Main
Video Matrix	Menu > DISPLAY > TOUR.
	NOTE NOTE
	Not all models support this function.
Buzzer	Select the check box to activate a buzzer noise at the Device.
	Select the check box to enable the Device to record a local alarm
Log	log.

Parameter	Description
Voice Prompts	Select to enable audio broadcast / voice prompts in response to a
	motion detection event.

Click **Apply** to save the settings.



Click **Default** to restore the default setting. Click **Copy**, in the **Copy** dialog box, select the additional channel(s) that you want to copy the motion detection settings to, and then click **Apply**. Click **Test** to test the settings.

Setting the Motion Detection Region

Next to Region, click Setting.

The region setting screen is displayed.

Move mouse pointer to top middle of the interface screen.

The region setting interface is displayed.



	Setting	2
🗢 Ali	0 2 4 6 8 10 12 14 16 18 20 22 24	
🗖 Sun		ng)
🗖 Mon	Settin	1Q)
🗖 Tue		ng)
🖸 Wed		ng)
🗢 Thu		ng)
🗢 Fri		IQ)
🗖 Sat		ng)
Defa	It OK Cancel	

	Period
Current Date: Sun	
Period 1 $(00:00 - 24:00)$ Period 2 $(00:00 - 24:00)$ Period 3 $(00:00 - 24:00)$ Period 4 $(00:00 - 24:00)$ Period 5 $(00:00 - 24:00)$ Period 6 $(00:00 - 24:00)$	
Copy Sun 🗋 Mon	🗋 Tue 🗋 Wed 🗋 Thu 🗋 Fri 🗋 Sat
	ОК

Tampering

Main menu->Setting->Event->Video detect->Tampering

	SETTING
CAMERA	TNETWORK
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY ALARM OUTPUT	Motion Detect Video Loss Tampering Scene Change Channel D1 Enable Period Setting
	Alarm Out 12 Latch (10 s) Show Message Send Email Record Channel 01 02 03 04 05 06 PTZ Activation Setting Post-Record 10 s 01 02 03 04 05 06 Tour 01 02 03 04 05 06 06 01 02 03 04 05 06 06 01 02 03 04 05 06 06 01 02 03 04 05 06 05 06 01 02 03 04 05 06 01 02 03 04 05 06 01 02 03 04 05 06 01 02 03 04 05 06 01 02 03 04 05 06 02 03 04 05 06 02 03 04 05 06 02 03 04 05 06 02 03 04 05 05 06 02
	Voice Prompts File Name (None Buzzer Default Copy Refresh OK Cancel Apply

If the camera lens is covered or the video is over exposed due to sunlight. To avoid such situations, you can configure the tampering alarm settings.

Video Loss

Main menu->Setting->Event->Video detect->Video loss

SETTING					
	TRETWORK				
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY ALARM OUTPUT	Motion Detect Video Loss Tampering Scene Change Channel D1 Enable Period Setting Alarm Out 1 2 Latch 10 s Show Message Send Email Record Channel D1 D1 D2 D3 D4 D5 D6 PTZ Activation Setting Post-Record 10 s s Snapshot D1 D2 D3 D4 D5 D6 S S				

When the video loss occurs, the system activates the alarm. To avoid such situations, you can configure the tampering alarm settings.

Tips

You can enable preset/tour/pattern activation operation when video loss occurs.

Alarm Settings

Main menu->Setting->Event->Alarm

Alarm in: Here is for you to select channel number.

In the main menu, from Setting->Event->Alarm, you can see alarm setup interface. Local alarm: After connect the alarm device to the NVR alarm input port, system can trigger the corresponding alarm operations when there is alarm signal from the alarm input port to the NVR.

Network alarm: NVR trigger corresponding alarm operations when it receives the alarm signal via the network transmission.

IPC external alarm: When the network camera connected peripheral device has triggered an alarm, it can upload the alarm signal to the NVR via the network transmission. The system can trigger the corresponding alarm operations.

- IPC offline alarm: When the network connection between the NVR and the network camera is off, the system can trigger the corresponding alarm operations.
- Enable: Please you need to highlight this button to enable current function.
- Type: normal open or normal close.
- Period: Click set button. There are two ways for you to set periods. There are max 6 periods in one day. There are four record types: regular, motion detection (MD), Alarm, MD & alarm.
 - ♦ Select icon of several dates, all checked items can be edited together. Now the icon

is shown as . Click to delete a record type from one period.

- ♦ Click button after one date or a holiday. There are four record types: regular, motion detection (MD), Alarm, MD & alarm.
- PTZ activation: When an alarm occurred, system can activate the PTZ operation. The PTZ activation lasts an anti-dither period.
- Anti-dither: Here you can set anti-dither time. The value ranges from 5 to 600s. The anti-dither time refers to the alarm signal lasts time. It can be seem as the alarm signal activation stays such as the buzzer, tour, PTZ activation, snapshot, channel record. The stay time here does not include the latch time. During the alarm process, the alarm signal can begin an anti-dither time if system detects the local alarm again. The screen prompt, alarm upload, email and etc will not be activated. For example, if you set the anti-dither time as 10 second, you can see the each

activation may last 10s if the local alarm is activated. During the process, if system detects another local alarm signal at the fifth second, the buzzer, tour, PTZ activation, snapshot, record channel will begin another 10s while the screen prompt, alarm upload, email will not be activated again. After 10s, if system detects another alarm signal, it can generate an alarm since the anti-dither time is out.

- Alarm output: The number here is the device alarm output port. You can select the corresponding ports(s) so that system can activate the corresponding alarm device(s) when an alarm occurred.
- Latch: When the anti-dither time ended, the channel alarm you select in the alarm output may last the specified period. The value ranges from 1 to 300 seconds. This function is not for other alarm activation operations. The latch is still valid even you disable the alarm event function directly.
- Show message: System can pop up a message to alarm you in the local host screen if you enabled this function.
- Alarm upload: System can upload the alarm signal to the network (including alarm center and the WEB) if you enabled current function. System only uploads the alarm channel status. You can go to the WEB and then go to the Alarm interface to set alarm event and alarm operation. Please go to the Network interface to set alarm center information.
- Send email: System can send out the alarm signal via the email to alert you when alarm occurs. Once you enable the snap function, system can also send out an image as the attachment.
 Please go to the Main Menu->Setting ->Network->Email interface to set.
- Record channel: you can select proper channel to record alarm video (Multiple choices).
 - You need to set alarm record mode as Schedule in Record interface (Main Menu->Advanced->Record). Please note the manual record has the highest priority. System record all the time no matter there is an alarm or not if you select Manual mode.
 - Now you can go to the Schedule interface (Main Menu->Setting->Schedule) to set the record type, corresponding channel number, week and date. You can select the record type:Regular/MD/Alarm/MD&Alarm. Please note, you cannot select the MD&Alarm and MD(or Alarm) at the same time.
 - ♦ Now you can go to the Encode interface to select the alarm record and set the encode parameter (Main Menu->Setting->Encode).
 - Finally, you can set the alarm input as the local alarm and then select the record channel. The select channel begins alarm record when an alarm occurred. Please note system begins the alarm record instead of the MD record if the local alarm and MD event occurred at the same time.
- Tour: Here you can enable tour function when an alarm occurs. System supports 1/8-window tour. Please go to chapter0 Display for tour interval setup. Please note the tour setup here has higher priority than the tour setup you set in the Display interface. Once there two tours are both enabled, system can enable the alarm tour as you set here when an alarm occurred. If there is no alarm, system implements the tour setup in the Display interface.
- Snapshot: You can enable this function to snapshot image when an alarm occurs.
- Buzzer: Highlight the icon to enable this function. The buzzer beeps when an alarm occurs.

-		SETTIN	G	
	NETWORK	EVENT	STORAGE	SYSTEM
VIDEO DETEC AUDIO DETECT	Local	Net IPC	Ext IPC Offline	
ALARM	Alarm In		Enable 🗹 Type (NO	\mathbb{D}
ABNORMALITY ALARM OUTPUT	Alarm Name			
	Period	Setting	Anti-Dither 5	⊃s
	Alarm Out	12	Latch (10)s	
	Show Message		Send Email	
	Record Channel		04 D5 D6	
	PTZ Activation	Setting	Post-Record (10	s
	Tour		04 D5 D6	
	Snapshot	D1 D2 D3 C	14 D5 D6	
	⊌Log			
	Voice Prompts	File Name None		
	Buzzer			
	Default	Сору	ОК	Cancel Apply

Please highlight icon to select the corresponding function. After setting all the setups please click save button.

Abnormality

Main menu->Setting->Event->Alarm

You can configure the alarm output for three types of system event (HDD, Network, and User). When there is an abnormal system event, the system activates an alarm in accordance with these settings.

- ♦ Disk: Disk error, no disk, no space.
- ♦ Network: Disconnection, IP conflict, MAC conflict.
- ♦ User: Unauthorised login.
- Alarm output: Select alarm activation output port.
- Less than: System can alarm you when the HDD space is less than the threshold you set here (For HDD no space type only).
- Attempts: In user interface, select illegal login from the dropdown list. Here you can set login attempts. The value ranges from 1 to 10.

- Lock time: In user interface, select illegal login from the dropdown list. Here you can set account lock time. The value ranges from 1 to 30 minutes.
- Latch: Here you can set corresponding delaying time. The value ranges from 1s-300s. System automatically delays specified seconds in turning off alarm and activated output after external alarm cancelled.
- Show message: system can pop up the message in the local screen to alert you when alarm occurs.
- Alarm upload: System can upload the alarm signal to the network (including alarm center) if you enabled current function. For disconnection event, IP conflict event and MAC conflict event, this function is null.
- Send email: System can send out email to alert you when alarm occurs.
- Buzzer: Highlight the icon to enable this function. The buzzer beeps when an alarm occurs.

	SETTING
CAMERA	TINETWORK 📷 EVENT
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY	HDD Network User Event Type No HDD T Enable
ALARM OUTPUT	Alarm Out 12 Latch 10 s Show Message Send Email Voice Prompts File Name None Buzzer ⊘Log
	OK Cancel Apply

	SETTING
CAMERA	TINETWORK
VIDEO DETEC AUDIO DETECT	HDD Network User
	Event Type Disconnect 🔻 Enable 🖌
ALARM OUTPUT	Alarm Out 12 Latch 10 s Show Message Send Email Voice Prompts File Name None Buzzer ✔Log
	OK Cancel Apply

Configure the settings for the User event.

Parameter	Description			
Event Type	In the Event Type list, select Illegal Login.			
	Enable the user error detection function.			
Enable	If you do not enable this function, there will be no limit for wrong password			
	entry and the account cannot be locked because of the wrong password.			
Attomat(a)	Set the maximum number of allowable wrong password entries. The account			
Attempt(s)	will be locked after your entries exceed the maximum number.			
Lock Time	Set how long the account is locked for. The value ranges from 1 minute to 60			
Lock Time	minutes.			
	Click Setting to display setting interface.			
	(not supported by all models)			
Alarm Out	• General Alarm: Enable alarm activation through the alarm devices			
Alami Out	connected to the selected output port.			
	• External Alarm: Enable alarm activation through the connected alarm			
	box.			
	Set the length of time the recorder delays turning off the alarm after the initial			
Latch	event. The value ranges from 0 seconds to 300 seconds, and the default value			
	is 10 seconds. If you enter 0, there will be no delay.			

Parameter	Description		
	Select the Send Email check box to enable the system to send an email		
	notification when an alarm event occurs.		
Send Email	NOTE NOTE		
	To use this function, make sure the email function is enabled in Main Menu >		
	NETWORK > EMAIL.		
Buzzer	Select the check box to activate a buzzer at the recorder.		
Log	Select the check box to enable the Device to record a local alarm log.		
Valas Dus muta	Select to enable audio broadcast/voice prompts in response to a user account		
Voice Prompts	alarm event.		

Click **Apply** to complete the settings.

Alarm output

Main menu->Setting->Event->Alarm output

Here is for you to set proper alarm output (Auto/manual/stop). Connect the alarm device to the system alarm output port, and set the mode as auto, system can trigger the corresponding operations when an alarm occurs.

- Auto: Once an alarm event occurs, system can generate an alarm.
- Manual: Alarm device is always on the alarming mode.
- Stop: Disable alarm output function.

Click OK button of the alarm reset, you can clear all alarm output status.

	_	SETTING		
		EVENT	STORAGE	SYSTEM
VIDEO DETEC AUDIO DETECT ALARM ABNORMALITY ALARM OUTPUT	Alarm Out Auto Manual Stop Status	All 1 2 • • • • • • • • • • • • • • • • • •		
	Alarm Release	OK		
			ОК	Cancel Apply

Network Settings TCP/IP

Main menu->Setup->Network->TCP/IP

You can configure the settings for the recorder such as IP address, DNS according to the networking plan.

	SETTING
	TNETWORK 📷 EVENT STORAGE SYSTEM
TCP/IP PORT PPPoE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Ethernet Card IP Address Net Mode NIC Member Edit Unbind Ethernet Port1 192.168.1.108 Single NIC 1 1 1 P Address: 192.168.1.108 Default Gateway: 192.168.1.1 MTU: 1500 MAC Address: 38:af:29:92:17:e1 Subnet Mask: 255.255.255.0 Mode: STATIC IP Version IPv4 ID HCP Preferred DNS 8 8 8 Alternate DNS 8 8 4 Default Card Ethernet Port1 OK Cancel Apply

Port

Main menu->Setup->Network->Port

Parameter	Description			
	The allowable maximum clients accessing the Device at the same time,			
Max Connection	such as WEB, Platform, and Mobile Phone.			
	Select a value between 1 and 128. The default value setting is 128.			
TCP Port	The default value setting is 37777. You can enter the value according			
TCP Pon	to your actual situation.			
UDP Port	The default value setting is 37778. You can enter the value according			
	to your actual situation.			
HTTP Port	The default value setting is 80. You can enter the value according to			
	your actual situation.			
RTSP Port	The default value setting is 554. You can enter the value according to			
	your actual situation.			
HTTPS Enable	Enable HTTPS .			
HTTPS Port	HTTPS communication port. The default value setting is 443. You can			
	enter the value according to your actual situation.			

System needs to reboot after you changed and saved any setup of the above ports. Make sure the port values here do not conflict.

SETTING					
CAMERA	NETWORK	EVENT	STORAGE	SYSTEM	
TCP/IP PORT PPPoE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Max Connection TCP Port UDP Port HTTP Port RTSP Port HTTPS Port	128 37777 37778 80 554 (443) (1 [~] 128)) (1025 [~] 65535)) (1025 [~] 65535)) (1 [~] 65535)) (1 [~] 65535)) (1 [~] 65535) ☐ Enable		
	Default		()	Cancel Apply	

PPPoE

Main menu->Setup->Network->PPPoE

PPPoE is another way for the Device to access the network. You can establish network connection by configuring PPPoE settings to give the Device a dynamic IP address in the WAN. To use this function, firstly you need to obtain the user name and password from the Internet Service Provider.

		SETTING		
	TWORK	EVENT	STORAGE	SYSTEM
TCP/IP PORT PPOE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Enable Username Password IP Address			
	Default		ОК	Cancel Apply

DDNS

Main menu->Setup->Network->DDNS

When the IP address of the Device changes frequently, the DDNS function can dynamically refresh the correspondence between the domain on DNS and the IP address, ensuring you access the Device by using the domain.

Preparation

If using "Quick DDNS" type, domain registration is not needed. If using other DDNS type, you need to login to the DDNS website to register the user name, password, and domain name.

After you register the device and log in the DDNS website, you can view all connected device information of the current user.

Select Main Menu > NETWORK > DDNS.

The **DDNS** interface is displayed.

SETTING					
CAMERA	TNETWORK	EVENT	STORAGE	SYSTEM	
TCP/IP PORT PPPoE	Enable After	enabling DDNS func	tion, third-party server i	may collect your device info.	
DDNS UPnP EMAIL	Host IP Domain Name Username	dynupdate.no	-ip.com		
SNMP MULTICAST REGISTER	Password				
SWITCH P2P					
	Default T	est	OK	Cancel Apply	

Configure the settings for the DDNS parameters.

• Non-Quick DDNS type.

Parameter	Description	
Enable	Enable the DDNS function.	
DDNS Type	Type and address of DDNS service provider.	
	• Type: Dyndns DDNS; address: members.dyndns.org	
Host IP	Type: NO-IP DDNS; address: dynupdate.no-ip.com	
	Type: CN99 DDNS; address: members.3322.org	
Domain Name	The domain name for registering on the website of DDNS service	
Domain Name	provider.	
User Name	Enter the user name and password obtained from DDNS service	
Password	provider. You need to register on the website of DDNS service provider.	
Interval	Enter the amount of time that you want between DDNS updates.	

• Quick DDNS type.

Description	
Enable the DDNS function.	
Type of DDNS service provider.	
Address of DDNS service provider. The default is <u>www.quickddns.com</u> which cannot be modified.	

Parameter	Description		
	The domain name for registering on the website of DDNS service		
	provider.		
Domain Name	Select the domain mode as default domain or customized domain.		
	• The default domain format is " <mac_address>.quickddns.com"</mac_address>		
	• The customized domain format is "name. quickddns.com."		
Email	In the Email box, enter the email address that is used to access the		
	DDNS service provider.		
	After configuration is completed, click Test to check if the domain name		
Test	is successfully registered. If yes, go to the next step; if not, please		
	check the network connection status.		

Click **Apply** to complete the settings.

Enter the domain name in the browser on your PC, and then press Enter.

If the web interface of the Device is displayed, the configuration is successful. If not, the configuration is failed.

UPnP

Main menu->Setup->Network->UPnP

You can map the relationship between the LAN and the WAN to access the Device on the LAN through the IP address on the WAN.

Preparation

Login the router to set the WAN port to enable the IP address to connect into the WAN. Enable the UPnP function at the router.

Connect the Device with the LAN port on the router to connect into the LAN.

Select **Main Menu > NETWORK > TCP/IP**, configure the IP address into the router IP address range, or enable nable the DHCP function to obtain an IP address automatically.

	SETTING		
		STORAGE	STEM
TCP/IP PORT	Enable		
PPPoE DDNS UPnP	Status Disable LAN IP 0 0 0 0 WAN IP 0 0 0 0 0		
EMAIL	Port Mapping List	Internal Port External P	
MULTICAST REGISTER	1 HTTP TCP 2 TCP TCP 3 UDP UDP	80 80 37777 37777 37778 37778	<u>-on</u>
SWITCH P2P	4 RTSP UDP 5 RTSP TCP	554 554 554 554	
	6 SNMP UDP 7 HTTPS TCP	161 161 443 443	
	Default	OK Cancel	Apply

Parameter	Description		
PAT	Enable the UPnP function.		
	Indicates the status of UPnP function.		
Status	Offline: Failed.		
	Online: Succeeded.		
	Enter IP address of router on the LAN.		
LAN IP	NOTE NOTE		
	After successfully mapping, the system obtains IP address		
	automatically without performing any configuration.		
	Enter IP address of router on the WAN.		
WAN IP	NOTE NOTE		
	After successfully mapping, the system obtains IP address		
	automatically without performing any configuration.		
	The settings in PAT table correspond to the UPnP PAT table on the		
	router.		
	Service Name: Name of network server.		
	Protocol: Type of protocol.		
	• Int. Port: Internal port that is mapped on the Device.		
	• Ext. Port: External port that is mapped on the router.		
	NOTE NOTE		
PAT Table	• To avoid the conflict, when setting the external port, try		
	to use the ports from 1024 through 5000 and avoid popular ports		
	from 1 through 255 and system ports from 256 through 1023.		
	• When establishing a mapping relationship, please		
	ensure the mapping ports are not occupied or limited.		
	• The internal and external ports of TCP and UDP must		
	be the same and cannot be modified.		
	Click to modify the external port.		

Email

Main menu->Setup->Network->Email

The email interface is shown as below.

- SMTP server: Please input your email SMTP server IP here.
- Port: Please input corresponding port value here.
- User name: Please input the user name to login the sender email box.
- Password: Please input the corresponding password here.
- Sender: Please input sender email box here.
- Title: Please input email subject here. System support English character and Arabic number. Max 32-digit.

- Receiver: Please input receiver email address here. System max supports 3 email boxes. System automatically filters same addresses if you input one receiver repeatedly.
- SSL enable: System supports SSL encryption box.
- Interval: The send interval ranges from 0 to 3600 seconds. 0 means there is no interval.
- Health email enable: Please check the box here to enable this function. This function allows the system to send out the test email to check the connection is OK or not.
- Interval: Please check the above box to enable this function and then set the corresponding interval. System can send out the email regularly as you set here. Click the Test button, you can see the corresponding dialogue box to see the email connection is OK or not.

Please note system will not send out the email immediately when the alarm occurs. When the alarm, motion detection or the abnormity event activates the email, system sends out the email according to the interval you specified here. This function is very useful when there are too many emails activated by the abnormity events, which may result in heavy load for the email server.

SETTING				
SAMERA	TWORK	EVENT	STORAGE	SYSTEM
TCP/IP PORT PPPoE DDNS UPnP	Enable SMTP Server Anonymous Username		Port (25	(1~65535)
EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Receiver Sender Subject Encryption Type Interval Health Enable Test	TLS 7 120 s	Attachment	
	Default		ОК	Cancel Apply

SNMP

Main menu->Setup->Network->SNMP

SNMP is an abbreviation of Simple Network Management Protocol. It provides the basic network management frame of the network management system. SNMP is widely used in various scenarios, network devices, software and systems.

Preparation

- Install SNMP monitor and management tool, such as MIB Builder and MG-SOFT MIB Browser.
- Obtain the corresponding MIB file from the technical support. Enter from main menu > Setup > Network > SNMP.

The SNMP interface is displayed.

	SETTING
CAMERA	TRANSPORT TRANSPORT
CAMERA TCP/IP PORT PPPoE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	Image: Network interviewed inte
	Default OK Cancel Apply

Select the SNMP check box.

Configure the parameyers. For details, see the following table.

Parameter	Description	
	Select the check box of the corresponding version.	
Version	D NOTE	
	System selects V3 by default. There might be risks for V1 and V2.	
SNMP Port	Enter the SNMP port number.	
Read		
Community/Write	The read community/write community string supported by the program.	
Community		
Turn Adda	Enter the IP address of the PC installed with MG-SOFT MIB Browser. It is	
Trap Address	the destination address to receive trap information from the device.	
Trap Port	The destination port to receive trap information from the device.	
Read Only User	Enter the read only username to access the NVR device.	
Read/Write User	Enter the read/write username to access the NVR device.	
Authentication	It includes MD5 and SHA. System automatically recognizes it after it is	
Authentication	enabled.	
Password	Enter the password for encryption and authentication. The password shall	
Fassword	be no less than 8 characters.	

Parameter	Description
Encryption Type	Select the encryption type. The default type is CBC-DES.

Click OK to complete the configuration.

View device info.

- 1) Run MIB Builder and MG-SOFT MIB Browser.
- 2) Compile the two MIB files with MIB Builder.
- 3) Load the compiled module to the software with MG-SOFT MIB Browser.
- 4) Enter the PC IP address into MG-SOFT MIB Browser and select the version to search.
- 5) Expand the tree list in MG-SOFT MIB Browser to view the device configuration information, such as channel number and program version.

Multicast

Main menu->Setup->Network->Multicast

You can use the multicast function to group the communication and transmit to a group of destination computers simultaneously.

	SETTING
	TRETWORK
TCP/IP PORT	Enable
PPPoE DDNS	IP Address 239 . 255 . 42 . 42 Port 36666 (1025~65000)
REGISTER SWITCH	
P2P	
	Default OK Cancel Apply

Select the Enable check box to enable this function.

Configure the parameters. For details, see the following table.

Parameter	Description	
Enable	Enable the multicast function.	
IP Address	Enter the IP address that you want to use as the multicast IP.	
	The IP address ranges from 224.0.0.0 through 239.255.255.255.	
Port	Enter the port for the multicast. The port ranges from 1025 through 65000.	

Click Apply or OK to complete the setting.

After configuring the multicast, you can log in Web with multicast.

On the web login dialog box, in the **Type** list, select **MULTICAST**. The web will automatically obtain the multicast IP address and join. Then you can view the video through multicast function.

OPTIO		Optio
Username:		
Password:		Plain Text
Type:	ТСР	Forgot password?
	• LAN O WAN	
	Login Cancel	

Multicast can be selected via Type dropdown.

Auto register

Main menu->Setup->Network->Register

You can register the Device into the specified proxy server which acts as the transit to make it easier for the client software to access the Device.

		SETTING		
	TRANETWORK	EVENT	STORAGE	SYSTEM
TCP/IP PORT	Enable			
PPPoE DDNS UPnP	Host IP (1	5)	
EMAIL SNMP		0		
MULTICAST REGISTER SWITCH				
P2P				
	Default		ОК	Cancel Apply

Configure the settings for the register parameters.

Parameter	Description	
Enable	Enable the register function.	
Server IP Address	Enter the server IP address or the server domain that you want to register to.	
Port	Enter the port of the server.	
Sub Service ID	This ID is allocated by the server and used for the Device.	

Click **Apply** to complete the settings.

P2P

Main menu->Setup->Network->P2P

You can manage the devices by using P2P technology to download the application and register the devices.

You can add the reordering device into your EasyViewer mobile phone APP without registering DDNS or setting port forward by following the below procedure.

After you have configured the network settings, on the **NETWORK** interface, click **Next**. The **P2P** interface is displayed.



Enable the P2P function.

Download mobile app or client, scan the QR code and then register an account.

- EasyViewer APP: Use your mobile phone to scan the QR code to add the device into the Cell Phone Client, and then you can start accessing the Device.
- Optio Central: Obtain the Device SN by scanning the QR code. Go to the P2P management platform and add the Device SN into the platform. Then you can access and manage the device in the WAN

You can also enter the QR code of Cell Phone Client and Device SN by clicking 🕮 on the top right of the

interfaces after you have entered the Main Menu.

SWITCH

Main menu->Setup->Network->Switch

When connect a network camera to the PoE port of the NVR, NVR can automatically allocate the IP address according to the specified IP segment. The network camera can automatically register to the NVR.

It is for you to set IP address, subnet mask, gateway and etc of the Switch.

SETTING				
CAMERA	THE TWORK	EVENT	STORAGE	SYSTEM
TCP/IP PORT PPPoE DDNS UPnP EMAIL SNMP MULTICAST REGISTER SWITCH P2P	IP Address Subnet Mask Default Gateway	10 . 1 . 1 . 255 . 255 . 255 . 10 . 1 . 1 .	1	
	Default		ОК	Cancel Apply

Туре	Note			
Connect camera	After connect the camera to the PoE, NVR allocate an IP address in the specified			
to the PoE	IP segment to the camera. NVR tries to use arp ping to set. If the NVR has			
	enabled the DHCP function, it uses DHCP to set.			
	• After successfully set IP address, NVR can send out broadcast via the			
	switch and get the corresponding response. Now The camera has			
	registered to the NVR. Go to the preview interface, the corresponding			
	channel has been used and there is a small PoE icon at the top left corner.			
	• Go to the Register interface to view the connected device list, you can see			
	the PoE channel number, PoE port information and etc. Click IP search to			
	display or refresh the information.			
Remove camera	After remove the camera network cable from the PoE port, the channel displays			
from the PoE	"Cannot find the network host". On the registration interface, the IP address is			
port	shown as offline.			
The mapping	The PoE port and the channel window is one to one correspondence. For			
policy when	example, connect a network camera to PoE port 1, it register to channel 1 by			
connect a	default.			
camera to the				
PoE port.				

Network Test

Main menu->Info->Network->Test

Testing the Network

You can test the network connection status between the recorder and other devices.

INFO					
SYSTEM	📆 EVENT		LOG		
ONLINE USERS					
LOAD	TEAT				
TEST	TEST				
	Destination IP (Test	
	Test Result				
	Network On West	De el cet De el com			
	Network Sniffer F				
	Device Name (Address	sdc1(USB DISK)	Refresh		
				Browse	
		P Sr 10.15.6.143 0k	niffer Packet Size (B	Sniffer Packet Backup	

Select Main Menu > INFO > NETWORK > Test.

The **Test** interface is displayed.

In the **Destination IP** box, enter the IP address. Click **Test**.

After testing is completed, the test result is displayed. You can check the evaluation for average delay, packet loss, and network status.

Capturing Packet and Backing up

Packet capture means the operations such as capturing, resending, and editing data that are sent and received during network transmission. When there is network abnormality, you can perform packet capturing and backup to a USB storage device. This data can technical support in analyzing the network condition.

Select Main Menu > INFO > NETWORK > Network Test.

The Network Test interface is displayed.

Connect a USB storage device to the Device.

Click Refresh.

The Device starts detecting the USB storage device and displays its name in the Device Name box.

Select the route of the data that you want to capture and backup.

- In the Network Sniffer Packet Backup, click Browse. The Browse interface is displayed.
- 2. Select the route.



- If there are several USB storage devices are connected to the Device, you can select from the **Device Name** list.
- Click Refresh to total space, free space and the file list in the selected USB storage device.
 - In the case of insufficient capacity, click
- Click **New Folder** to create a new folder in the USB storage device.
- Click Apply to save the route selection settings. The Test interface is displayed again.

Click **I** to start packet capturing and backing up.

- Only the data packet of one LAN can be captured at one time.
- After capturing starts, you can exit the **Test** interface to perform other operations such as web login and monitoring.


Click		to stop capturing.
•	-	

The backup data is saved in the selected route under the naming style "LAN name-time.pcap." You can open it by using Wireshark software.

Network Load

Main menu->Info->Network->Load

Network load means the data flow which measures the transmission capability. You can view the information such as data receiving speed and sending speed.

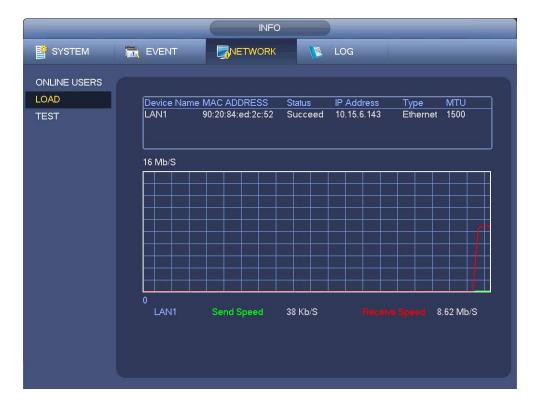

Storage

Here you can view HDD information such as type, status, total capacity, record time and etc. The operation includes format, resume from error, change HDD property (Read write, Read-only). Here you can also set alarm and HDD storage position.

Basic

Main menu->Setup->Storage->Basic

		SETTING		
CAMERA		EVENT	STORAGE	SYSTEM
BASIC SCHEDULE HDD MANAGE FTP RECORD ADVANCED HDD DETECT	Pack Duration(Auto-Delete Old	Overwrite 60 Min. I Files •		
	Default		ОК	Cancel Apply

Configure the basic storage settings parameters.

Parameter		Description
HDD Full		 Configure the settings for the situation when all the read/write discs are full, and there is no disc space. Select Stop Record to stop recording Select Overwrite to overwrite the recorded video files always from the earliest time.
Pack Mode		Specify the record file length. The max is 120 mins.
Auto-Delete Files	Old	Configure whether the device deletes old recordings: select Customized to configure the time length for how long you want to keep the old files or select Never to keep for as long as you have hard disk space.

Schedule

Main Menu > STORAGE > SCHEDULE > Record.

Configure the schedule for recorded video. All channels are recorder by default, you can customize individual channels to record, alarm settings, and the armed period.

HDD

Main-menu->Setting->Storage->HDD Manager

In the table, you can view the information of current HDD, such as device name, HDD type, status, total space and free space, and serial number of the HDD port.

CAMERA Image: NETWORK Image: EVENT Image: STORAGE SYSTEM BASIC SCHEDULE Name Physical Position Type HDD Group HDD MANAGE FTP Image: Storage Image: Storage Image: Storage Image: Storage			SETTING		
SCHEDULE Name Physical Position Type HDD Group HDD MANAGE			To EVENT	STORAGE	SYSTEM
RECORD ADVANCED HDD DETECT	BASIC SCHEDULE HDD MANAGE FTP RECORD ADVANCED	Name	Physical Position	Туре	HDD Group

Configuring the settings for the HDD manager.

HDD type setting: In the **Type** list, select **Read/Write**, **Read-Only** or **Redundant**, and then click **Apply** To save the settings.

HDD format: Select the HDD that you want to format, click **Format**, in the pop-up message, click **OK** to start formatting, and then follow the onscreen message to complete formatting.

FTP

Main menu->Setting->Storage->FTP

You can store and view the recorded videos and snapshots on the FTP server.

Preparation

Purchase or download a FTP server and install it on your PC.

For the created FTP user, you need to set the write permission; otherwise the upload of recorded videos and snapshots will fail.

Configuration Steps

Select Main Menu > STORAGE > FTP.

The **FTP** interface is displayed.

		SETTING		
SAMERA			STORAGE	SYSTEM
BASIC SCHEDULE HDD MANAGER FTP RECORD ADVANCED HDD DETECT	Enable O FTP SFTP (Host IP Username Password Remote Directory Image Upload Interva	Fil	0 Port (22 Anonymous e Size (0	(1~65535) M
	Channel Weekday Period Period Test	D1 Wed 00:00 - 24:00 00:00 - 24:00		otion Regular
	Default		ОК	Cancel Apply

Configure the settings for the FTP settings parameters.

Parameter	Description
Enable	Enable the FTP upload function.
Host IP	IP address of the PC that is installed with FTP server.
Port	The default is 21.
Anonymity	Enter the user name and password to login the FTP server.
User Name	Enable the anonymity function, and then you can login anonymously
Password	without entering the user name and password.
	Create folder on FTP server.
	• If you do not enter the name of remote directory, system
	automatically creates the folders according to the IP and time.
Remote Directory	• If you enter the name of remote directory, the system creates
	the folder with the entered name under the FTP root directory
	first, and then automatically creates the folders according to the
	 IP and time. Enter the length of the uploaded recorded video. If the entered length is less than the recorded video length, only a section of the recorded video can be uploaded. If the entered length is more than the recorded video length,
	Enter the length of the uploaded recorded video.
	• If the entered length is less than the recorded video length, only
	a section of the recorded video can be uploaded.
File Length(M)	• If the entered length is more than the recorded video length,
	the whole recorded video can be uploaded.
	• If the entered length is 0, the whole recorded video will be
	uploaded.
	• If this interval is longer than snapshot interval, the system takes
	the recent snapshot to upload. For example, the interval is 5
	seconds, and snapshot interval is 2 seconds per snapshot, the
	system uploads the recent snapshot every 5 seconds.
Image Upload Interval	• If this interval is shorter than snapshot interval, the system
(Sec.)	uploads the snapshot per the snapshot interval. For example,
	the interval is 5 seconds, and snapshot interval is 10 seconds
	per snapshot, the system uploads the snapshot every 10
	seconds.
	 To configure the snapshot interval, select Main Menu >
	CAMERA > ENCODE > Snapshot.
Channel	Select the channel that you want to apply the FTP settings.
Week Day	Select the week day and set the time period that you want to upload
Period 1, Period 2	the recorded files. You can set two periods for each week day.
	Select the record type (Alarm, MD, and General) that you want to
Record type	upload. The selected record type will be uploaded during the
	configured time period.

Click Test.

The system pops up a message to indicate success or failure. If failed, please check the network connection or configurations.

Click **Apply** to complete the settings.

Record Control

After you set schedule record or schedule snapshot function, please set auto record/snapshot function so that the NVR can automatically record or snapshot.

HDD Information

Main menu->Info->System->HDD

You can view the HDD quantity, HDD type, total space, free space, status, and S.M.A.R.T information.

		INFC			
SYSTEM	EVENT		🚺 LOG		
HDD					
RECORD	2	Туре	Free Space/Total Space	Status	S.M.A.R.T
BPS	All 1*#	- Read/Write	9.54 TB / 9.54 TB 465.72 GB / 465.73 GB	Normal	0
VERSION	2	Read/Write	9.09 TB / 9.09 TB	Normal	2
			1 1		

Parameter	Description
No	Indicates the number of the currently connected HDD. The asterisk (*)
No.	means the current working HDD.
Device Name	Indicates the name of HDD.
Physical	Indicates the installation position of HDD
Position	Indicates the installation position of HDD.
Туре	Indicates HDD type.
Total Space	Indicates the total capacity of HDD.
Free Space	Indicates the usable capacity of HDD.
Status	Indicates the status of the HDD to show if it is working normally.
S.M.A.R.T	View the S.M.A.R.T reports from HDD detecting.

You can detect HDD by quick detect and global detect.

Quick detect: Detect the files saved in HDD. The detected bad track can be repaired by formatting. If there are no files in HDD, the system cannot detect the bad track.

Global detect: Detect the whole HDD through Windows, which takes time and might affect the HDD that is recording the video.

Port	main board-1					
Modle	ST3500418AS					
Serial I	No. 9VMTSF6T					
Status	ок					
Descril	be:					
Smart	ID Attribute	Thresh	nold Value	Worst Value	Status	-
1	Read Error Rate	6	112	99	OK	
3	Spin Up Time		98	97	OK	
4	Start/Stop Count	20	100	100	OK	
5	Reallocated Sector Count	36	100	100	OK	
7	Seek Error Rate	30	81	60	OK	
9	Power On Hours Count		94	94	OK	
10	Spin-up Retry Count	97	100	100	OK	
12	Power On/Off Count	20	100	100	OK	
183	Runtime Bad Block		100	100	OK	
184	End-to-End Error	99	100	100	OK	
187	Reported Uncorrect	0	100	100	OK	
188	Command Timeout	0	100	99	OK	
189	High Fly Writes		99	99	OK	
194	Temperature		35	46	OK	
195	Hardware ECC Recovered		21	20	OK	
197	Current Pending Sector Count		100	100	OK	
198	Off-line Scan Uncorrectable Count	0	100	100	OK	-
<u> </u>						

HDD Group

It is to set HDD group, and HDD group setup for main stream, sub stream and snapshot operation.



When you are setting HDD group, please set a HDD for each channel, otherwise NVR cannot save current setup.

- HDD: Here you can view the HDD amount the device can support.
- Group: It lists the HDD Group number of current hard disk.

Please select the correspond group from the dropdown list and then click Apply button. Click sub stream/snapshot button to set corresponding HDD group information.

HDD Detect

The HDD detect function is to detect HDD current status so that you can clearly understand the HDD performance and replace the malfunction HDD.

There are two detect types:

- Quick detect is to detect via the universal system files. System can quickly complete the HDD scan. If you want to use this function, please make sure the HDD is in use now. If the HDD is removed from other device, please make sure the write-data once was full after it installed on current device.
- Global detect adopts Windows mode to scan. It may take a long time and may affect the HDD that is recording.

Manual Detect

Main menu->Setting->Storage->HDD Detect->Manual Detect



Detect Report

Main menu->Setting->Storage->HDD Detect->Detect Report

			SETTING				
		1	EVENT	STORAGE	SYSTE	EM	
BASIC SCHEDULE	Manual Detect	Detect Re	eport				
HDD MANAGE		Port No.	Detect Type	Start Time	Capacity		View
FTP RECORD ADVANCED HDD DETECT		1	Quick Detect	2017-09-21 22:10:43	1863.02 GB	0	

Click View, you can see the detailed information such as detect result, backup and S.M.A.R.T.

	Details	
Detect Results S.M.A.R.T		
Type Quick Detect	Backup to USB Devices	
	Good <mark>B</mark> Bac = 829 MB	I <mark>Block</mark>
	Detected HDD No	b. 1
	Total Space	1863.02 GB
	Error	0
	HDD Port No.	1

Port	main board-1				
Modle	ST2000VX007-2AY102				
Serial I	No. W9800B3Q				
Status	ОК				
Descril	be:				
Smart	ID Attribute	Threst	nold Value	Worst Value	5-
1	Read Error Rate	6	100	64	C
3	Spin Up Time	0	98	98	C
4	Start/Stop Count	20	100	100	C
5	Reallocated Sector Count	10	100	100	C
7	Seek Error Rate	30	72	60	C
9	Power On Hours Count	0	100	100	C
10	Spin-up Retry Count	97	100	100	
12	Power On/Off Count	20	100	100	C
183	Runtime Bad Block	0	100	100	C
184	End-to-End Error	99	100	100	C
187	Reported Uncorrect	0	100	100	¢,

Account

It is to manage users, user group and ONVIF user, set admin security questions.

I Note

For the user name, the string max length is 31-byte, and for the user group, the string max length is 15-byte. The user name can only contain English letters, numbers and "_"、"@"、".".

The default user amount is 64 and the default group amount is 20. System account adopts two-level management: group and user. The user authorities shall be smaller than group authorities (The **admin** user authorities are set by default).

For group or user management, there are two levels: admin and user. The user name shall be unique and one user shall only belong to one group.

Add User

Main menu->Setting->System->Account->User

	SETTING	
CAMERA	👼 NETWORK 🛛 🔂 EVENT 🛛 🛃 STOR	AGE 🛃 SYSTEM
GENERAL DISPLAY RS232 VOICE PROMPT ACCOUNT		EUser
SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE		
	Add User	
	Add User	
Username (Password Confirm Passw	ord
Group admin		
System	Playback Monitor	
ACCOU		
SECUR	RITY 🗹 BACKUP 🗹 AUTO MAINT	EN

Input the user name, password, select the group it belongs to from the dropdown list. Then you can check the corresponding rights for current user.

Modify user

Save Cancel

Main menu->Setting->System->Account->User

Click	1	you can go t	o the following	interface to	change u	user information.
-------	---	--------------	-----------------	--------------	----------	-------------------

		Мо	dify User	
User Name	(1		User MAC	
Modify Password				
Old Password			Group	(admin 🔻
New Password			Memo	
Confirm Password	4 ()			
Period	Setting			
Authority				
System	Playback	Monitor		
	UNT 🗹 S AGE 🗹 E	SYSTEM EVENT BACKUP	✓ SYSTEM I✓ NETWOR✓ DEVICE M	K 🔽 CAMERA

For **admin** user, you can change the email, enable/disable unlock pattern, change password prompt question, set security questions.

		Modify User
User Name (admin Modify Password) Old Password (New Password (Confirm Password (Prompt Question (c111111) Authority		User MAC Email Address Group admin Memo admin 's account Unlock Pattern E Security Questions
System Playback Image: System Playback Image: All Image:	Monitor SYSTEM EVENT BACKUP	 ✓ SYSTEM INFO ✓ MANUAL CONT ✓ NETWORK ✓ CAMERA ✓ DEVICE MAINT
		Save Cancel

- Input email information and then click Save, it is to set/change email address.
- Check the box to enable unlock pattern and then click , click Save to change unlock pattern.
- Set security question

Step 1 Click Security question, enter the following interface.



Step 2 Input answers and then click Save button.

After successfully set security questions, you can answer the security questions to reset admin password.

D Note

Select security questions from the dropdown list and then input the proper answers, click Delete button to reset security questions and answers again.

Change Password

Check the Modify password box, you can change password. Please input old password, and then input new password twice to confirm.

D Note

Password/confirm password: The password ranges from 8 to 32 digitals. It can contain letters, numbers and special characters (excluding "", "", ",", ":", "&"). The password shall contain at least two categories. Usually we recommend the strong password.



STRONG PASSWORD RECOMMENDED-For your device own safety, please create a strong password of your own choosing. We also recommend you change your password periodically especially in the high security system.

Modify Group

Main menu->Setting->System->Account->Group.

			SETTIN	1G			-
	💏 NETV	VORK	EVENT	3	STORAGE	SYSTEM	
GENERAL DISPLAY	l	Jser	Group	ONVIF	User		
VIDEO MATRIX RS232 PTZ POS VOICE ACCOUNT SECURITY AUTO MAINTAIN IMP/EXP DEFAULT UPGRADE	2 1 2 (Add C	Group Nat admin user	me Modify	Delete × ×	Memo administrator g user group	roup	

Step 1 Click add group button. Enter Add group the interface.

Step 2 Input group name and then input some memo information if necessary. Check the box to select authorities.

			Add Group	
Group Name(Memo (
Authority				
System	Playback	Monitor		
🔲 ѕто	OUNT PRAGE URITY	SYSTEM	SYSTEM INFO	MANUAL CONT CAMERA
				Save Cancel

Security Question

Main menu->Setting->System->Account->Security question

I Note

This function is for **admin** user only.

Here you can change security questions. After you successfully answered security questions, you can reset admin account password.

Input correct security answers and then click Delete button at the bottom of the interface, you can reset security questions and answers.

	SETTING
📆 CAMERA	TNETWORK 📷 EVENT STORAGE SYSTEM
GENERAL DISPLAY	User Group Security Qu ONVIF User
RS232 VOICE PROMPT ACCOUNT	Successfully set. Please delete it first if you want to reset security question again.
SECURITY Auto Maintain	Answer
IMP/EXP DEFAULT	Question 2 (What was the first name of your first boss?
UPGRADE	Question 3 (What is the name of your favorite fruit?
	(Setting) Delete

ONVIF User

Main menu->Setting->System->Account->ONVIF

When the camera from the third party is connected with the NVRvia the ONVIF user, please use the verified ONVIF account to connect to the DVR. Here you can add/delete/modify user

I Note


SETTING STORAGE NYSTEM 😪 CAMERA **TRANETWORK** EVENT GENERAL Security Qu... ONVIF User User Group DISPLAY RS232 Modify Username Group Name Delete admin admin VOICE PROMPT 1 ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE (Add User)

The default ONVIF user is **admin**. It is created after you initialize the DVR.

Click Add User button. Enter Add User interface.

	Add User
User	123
Password	
Confirm Password	
Group	(admin)
	Save Cancel

 Set user name, password and then select group from the dropdown list. Click Save to complete setup.



Online User

Main menu->Info->Network->Online user

Here is for you manage online users connected to your NVR..

You can click button **I** to disconnect or block one user if you have proper system right.

System detects there is any newly added or deleted user in each five seconds and refresh the list automatically.

		INFO		
SYSTEM			LOG	
ONLINE USERS LOAD TEST	Username admin	IP Address 172.16.31.1	User Login Time 2018-12-07 10:45:42	Block
	Block Time 60	s s		

System Info

Version

Main menu->Info->System->version

BPS Main menu->Info->System->BPS

Here is for y	you to view	current video	hit rate (kh	o/s) and resolution.	
	you to view	current video		<i>i</i> s <i>j</i> and resolution.	

SYSTEM EVENT NETWORK LOG HDD Channel Kb/S Resolution Wave RECORD D1 3725 2560°1440 h BPS D2 3647 2560°1440 h [VERSION D3 3827 2560°1440 h [D4 3894 2560°1440 h [[D5 3721 2560°1440 h [[D6 3732 2560°1440 h [[-	
RECORD D1 3725 2560*1440 1 [BPS D2 3647 2560*1440 1 [VERSION D3 3827 2560*1440 1 [D4 3894 2560*1440 1 [[D5 3721 2560*1440 1 [YSTEM	SYSTEM
BPS D2 3647 2560*1440 1 [VERSION D3 3827 2560*1440 1 [D4 3894 2560*1440 1 [D5 3721 2560*1440 1 [ORD	
D4 3894 2560*1440 <u>}</u> . [D5 3721 2560*1440 <u>}</u> . [SION	

Event Information

Alarm Status

Main menu->Setting->Event->Alarm Status

	INFO	
SYSTEM		
ALARM STATUS	Device Status Device(NIC No.:1,HDD No.:2) No HDD HDD Error HDD No Space IP Conflict Net Disconnect MAC Conflict	
	Channel Status Channel(CH: 16, External Alarm:4) External Alarm Video Loss Tampering Motion Detection IPC External Alarm IPC Offline Alarm	

RS232

Main menu->Setting->System->RS232

After setting RS232 parameters, the NVR can use the COM port to connect to other device to debug and operate.

- Function: There are various devices for you to select.
 - ♦ Console is for you to use the COM or mini-end software to upgrade or debug the program.
 - ♦ Control keyboard is for you to control the device via the special keyboard.
 - ♦ Transparent COM (adapter) is to connect to the PC to transfer data directly.
 - ♦ Protocol COM is for card overlay function.
 - ♦ Network keyboard is for you to use the special keyboard to control the device.
 - ♦ PTZ matrix is to connect to the peripheral matrix control.
 - ∻

Note

Different series products support different RS232 functions.

- Baud rate: You can select proper baud rate.
- Data bit: You can select proper data bit. The value ranges from 5 to 8.
- Stop bit: There are three values: 1/1.5/2.
- Parity: there are five choices: none/odd/even/space mark.

System default setup is:

- Function: Console
- Baud rate:115200
- Data bit:8
- Stop bit:1
- Parity: None

After completing all the setups please click save button, system goes back to the previous menu.

	SETTING		
	77 NETWORK 🔂 EVENT	STORAGE	SYSTEM
GENERAL DISPLAY RS232 PTZ POS BROADCAST VOICE PROMPT ACCOUNT AUTO MAINTAIN IMP/EXP DEFAULT UPGRADE	Function Console • Baud Rate 115200 • Data Bit 8 • Stop Bit 1 • Parity None •		
	Default	ОК	Cancel Apply

Security

IP Filter

Main menu->System->Security->IP filter

You can add IP in the following list. The list supports max 64 IP addresses. System supports valid address of IPv4 and IPv6.

After you enabled trusted sites function, only the IP listed below can access current NVR.

If you enable blocked sites function, the following listed IP addresses cannot access current NVR.

- Enable: Highlight the box here, you can check the trusted site function and blocked sites function. You cannot see these two modes if the Enable button is grey.
- Type: You can select trusted site and blacklist from the dropdown list. You can view the IP address on the following column.

- Start address/end address: Select one type from the dropdown list, you can input IP address in the start address and end address. Now you can click Add IP address or Add IP section to add.
 - a) For the newly added IP address, it is in enable status by default. Remove the $\sqrt{}$ before the item, and then current item is not in the list.
 - b) System max supports 64 items.
 - c) Address column supports IPv4 or IPv6 format. If it is IPv6 address, system can optimize it.
 For example, system can optimize aa:0000: 00: 00aa: 00aa: 00aa: 00aa: 00aa as aa:: aa: aa: aa: aa: aa.
 - d) System automatically removes space if there is any space before or after the newly added IP address.
 - e) System only checks start address if you add IP address. System check start address and end address if you add IP section and the end address shall be larger than the start address.
 - f) System may check newly added IP address exists or not. System does not add if input IP address does not exist.
- Delete: Click it to remove specified item.
- Edit: Click it to edit start address and end address. System can check the IP address validity after the edit operation and implement IPv6 optimization.
- Default: Click it to restore default setup. In this case, the trusted sites and blocked sites are both null.

D Note

If you enabled trusted sites, only the IP in the trusted sites list can access the device. If you enabled blocked sites, the IP in the blocked sites cannot access the device. System supports add MAC address.

		SETTING			
	NETWORK	EVENT	STORAGE	SYS	TEM
GENERAL DISPLAY RS232 VOICE PROMPT		n Service Isted Sites 〇 Bloc	ked Sites		
ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	Start Address Add Default	End Add	tress	Edit Cancel)	Del

System Service

main menu->System->Security ->System Service

	SETTING
CAMERA	
GENERAL DISPLAY RS232 VOICE PROMPT ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	PFLTER System Service Reset Password Mobile Phone Push CGI ONVIF Audio/Video Transmi The corresponding device or software shall support v Pefault Marcel Apply

Parameter	Description
Password Reset	Enabled by default.
	If it is disabled, the user can only use the security questions to reset the
	password.
Mobile Phone Push	Enabled by default.
	The snapped pictures triggered at the device can be push to the
	EasyViewer mobile app.
CGI	Enabled by default.
	The device can be connected via this protocol when enabled.
ONVIF	Enabled by default.
	The device can be connected via this protocol when enabled.
Audio/VideoEncryption	The stream transmission is encrypted when this function is enabled. The
	associated device or software shall support decryption.

Auto Maintain

Here you can set auto-reboot time and auto-delete old files setup. You can set to delete the files for the specified days.

You can select proper setup from dropdown list.

After all the setups please click save button, system goes back to the previous menu.

-		SETTING			
	TWORK	EVENT	STORAGE	SYSTEM	
GENERAL DISPLAY RS232 VOICE PROMPT ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	Auto Reboot				
			ОК	Cancel App	y

Backup

Main menu->Backup

a) Connect USB burner, USB device or portable HDD and etc to the device.

BACKUP	
Device Nan (sdc1(USB DISK)) (Browse 0.00 KB(Space Needed) 13.78 GB/15.00 GB(Free/Total)	
Type All Image: Start Time Control (2013 - 10 - 18) OO : 00 : 00 Record CH Image: Start Time Image: Start Time Control (2013 - 10 - 18) Image: Start Time Contr)
0 Channel Type Start Time End Time Size(KB)	
×	
Start	

- b) Select backup device and then set channel, file start time and end time.
- c) Click add button, system begins search. All matched files are listed below. System automatically calculates the capacity needed and remained.
- d) System only backup files with a $\sqrt{}$ before channel name. You can use Fn or cancel button to delete $\sqrt{}$ after file serial number.
- e) Click backup button, you can backup selected files. There is a process bar for you reference.
- f) When the system completes backup, you can see a dialogue box prompting successful backup.

Туре	(Space)	Needed)		GB(Free/Total)			
Start Tin	ne 💽	2013 - 10 -	10 00:00:00) Record CH (1	\mathbb{P}		
End Tin		2013 - 10 -	18 12 : 11 : 34) File Format (DAV	$\overline{\mathbf{F}}$	Add	Remove)
43	Ch	annel Type	Start Time	End Time	Size(KB)		^
1	✓ 1	R	13-10-14 22:00:00	13-10-14 23:00:00	48176		
2	✓ 1	R	13-10-14 23:00:00	13-10-15 00:00:00	48037		
3	v 1	R	13-10-15 00:00:00	13-10-15 00:28:50	22528		
4	✓ 1	R	13-10-15 00:28:50	13-10-15 01:00:00	24668	1120	
5	✓ 1	R	13-10-15 01:00:00	13-10-15 02:00:00	46815	2	
6	∠ 1	R	13-10-15 02:00:00	13-10-15 03:00:00	47802		
7	✓ 1	R	13-10-15 03:00:00	13-10-15 04:00:00	47566		
8	✓ 1	R	13-10-15 04:00:00	13-10-15 05:00:00	47468		
9	✓ 1	R	13-10-15 05:00:00	13-10-15 06:00:00	47358		
10	✓ 1	R	13-10-15 06:00:00	13-10-15 07:00:00	47773		
11	v 1	R	13-10-15 07:00:00	13-10-15 08:00:00	47229		
12	V 1	R	13-10-15 08:00:00	13-10-15 09:00:00	47865		
13	v 1	R	13-10-15 09:00:00	13-10-15 09:03:02	2780		
11	1	Þ	12 10 15 00-05-55	12 10 15 00-57-22	10060		
						0	Start)

g) Click backup button, system begins burning. At the same time, the backup button becomes

stop button. You can view the remaining time and process bar at the left bottom.

D Note

During backup process, you can click ESC to exit current interface for other operation (For some series product only). The system will not terminate backup process.

The file name format usually is: Channel number+Record type+Time. In the file name, the YDM format is Y+M+D+H+M+S. File extension name is .dav

Import/Export

Main menu->Setting->System->Import/Export

This function allows you to copy current system configuration to other devices. It also supports import, create new folder, and delete folder and etc function.

		SETTING			
CAMERA		EVENT		SYSTEM	
GENERAL DISPLAY RS232 VOICE PROMPT	Device Name Total Space Address	sdc1(USB DISK) • (7.54 GB (/NVR/Config_NVR4216	Refresh Free Space	(5.95 GB) 206090738/	
ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	Name ⊫ ⊡ configFi	ileExport.backup		Size 61.6 KB	Type Fold File
	• New Folder)	Format Import	Export		Apply

- Export: Please connect the peripheral device first and then go to the following interface. Click Export button, you can see there is a corresponding "Config_Time" folder. Double click the folder, you can view some backup files.
- Import: Here you can import the configuration files from the peripheral device to current device. You need to select a folder first. You can see a dialogue box asking you to select a folder if you are selecting a file. System pops up a dialogue box if there is no configuration file under current folder. After successfully import, system needs to reboot to activate new setup.
- Format: Click Format button, system pops up a dialogue box for you to confirm current operation. System begins format process after you click the OK button.




System cannot open config backup interface again if there is backup operation in the process. System refreshes device when you go to the config backup every time and set current directory as the root directory of the peripheral device.

If you go to the configuration backup interface first and then insert the peripheral device, please click Refresh button to see the newly added device.

Backup Log

Main menu->Info->Log

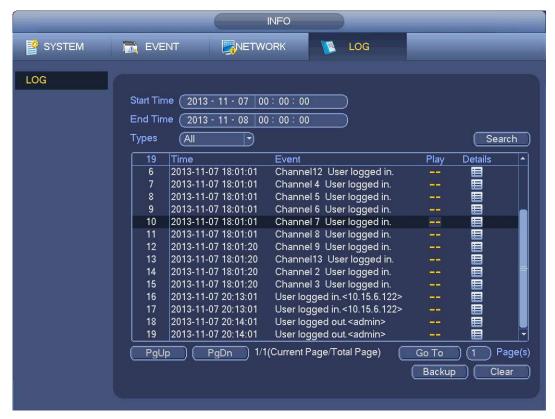

a) Select log type and then set start time/end time, click Search button, you can see log time and

event information. Click 💷 to view detailed log information.

b) Select log items you want to save and then click backup button, you can select a folder to save them. Click Start to backup and you can see the corresponding dialogue box after the process is finish.

USB Device Auto Pop-up

After you inserted the USB device, system can auto detect it and pop up the following dialogue box. It allows you to conveniently backup file, log, configuration or update system.

		Find USB device.
	lame: Capacity:	sdc1(USB DISK) 5.95 GB/7.54 GB(Free/Total)
System	Darkup m Upgrade	Log Backup Config Backup

Default

Main menu->Setting->System->Default



After you use default function, some your customized setup may lose forever! Please think twice before you begin the operation!

You can restore factory default setup to fix some problems when the device is running slowly. Configuration error occurred.

Check an item you want to restore default setup, or check the All to select all items. Click OK or apply button, system pops up a dialogue box. Click OK to restore.

		SETTING		
		EVENT		SYSTEM
GENERAL DISPLAY	Default			
RS232 VOICE PROMPT ACCOUNT	AII CAMERA NETWORK			
SECURITY Auto Maintain IMP/EXP	EVENT STORAGE SYSTEM			
DEFAULT				
	(Factory Reset)		ОК	Cancel Apply

Upgrade

Main menu->Setting->System->Update

- Step 1 Insert USB device that contain the upgrade file.
- Step 2 Click Start button and then select the .bin file.
- Step 3 You can see the corresponding dialogue box after the update process is complete.

	SETTING	
	TNETWORK 🙀 EVENT SYSTEM	
GENERAL DISPLAY RS232 VOICE PROMPT ACCOUNT SECURITY Auto Maintain IMP/EXP DEFAULT UPGRADE	File Upgrade Please insert USB device and then click update button to begin update, or you calupdate file and then begin upgrade operation. Do not turn off the device during the upgrade process! Upgrade Online Upgrade Image: I	

Online Upgrade

When the NVR is online, you can use the online upgrade to update the firmware.

Before the online upgrade, system needs to detect if any new version is available. It includes auto check and manual check.

- Auto check: System automatically detects if any new version is available occasionally.
- Manual check: Detect new version at real time.
- •

During the upgrade process, make sure that the network connection and power supply are normal.

Step 1 Version check.

• Auto check: Select the Auto check for updates check box and click Save.

I Note

System enables this function by default.

- Manual check: Click Manual Check.
 System starts to search new version and displays the result after the check is completed.
- When system displays that it is the latest version, the current version is the latest one and you do not need to upgrade it.
- When system displays the new version information (including release date and upgrade

notes), new version is available and go to Step 3.

Step 2 Click Upgrade to upgrade the system.

Uboot

When NVR boots up, during the uboot process, NVR automatically detects there is USB device and there is upgrade file on the USB device or not. If the detection result is OK, NVR automatically begins upgrade.



The USB device shall contain two files: u-boot.bin.img and update.img.

The USB device shall connected to the USB port at the front panel. Otherwise, NVR cannot properly detect the file or upgrade.

Logout /Shutdown/Restart

Main menu->Operation->Shutdown

- Shutdown: System shuts down and turns off power.
- Logout: Log out menu. You need to input password when you login the next time.
- Restart: reboot device.

If you shut down the device, there is a process bar for your reference, system waits for 3 seconds and then shut down (You cannot cancel).

Please note, sometimes you need to input the proper password to shut down the device.

