


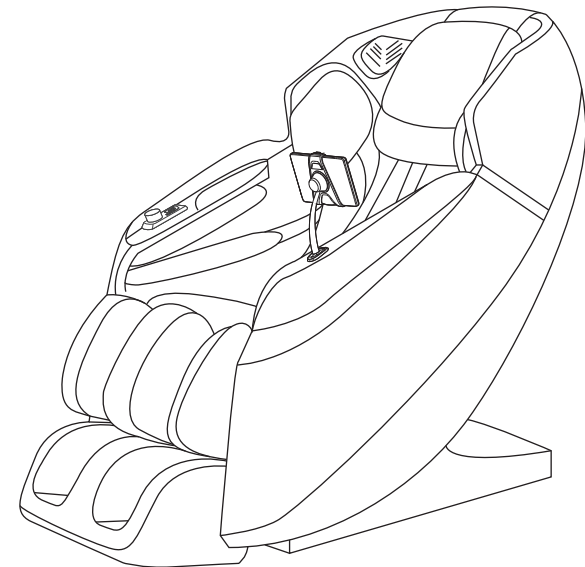

Deluxe Massage Chair

R8Q01

U S E R M A N U A L



Thank you for choosing our product and your support. In order to understand the directions fully, please read user's manual carefully. And after reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice for further improvement.

Contents

Safety	1-6
Preparation Before Use	7-12
Move the Chair	7
Place the Chair	7
Installation	8-11
Bluetooth pairing	12
Components	13-19
Outer Structure	13
Controller	14
Function of Controller	15
Voice Control	16-17
Cleaning and Maintenance	18
Troubleshoot	19
Specifications	20

Safety

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

DANGER-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Please contact our after-sale service center!
- 6) Do not use the power cord as a handle to carry this appliance.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

Safety

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high may cause burns regardless of the control setting. Infants, disabled persons, asleep or unconscious people are forbidden to use it. People with sensitive skin or poor blood circulation should not use this product. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The appliance shall not be exposed to dripping or splashing environment; do not place objects (such as vases) filled with liquids on the device.
- 19) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 20) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operabl.
- 21) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have beengiven supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 22) If it is not in use for a long time or after use, please turn off the powerand pull out the power plug.
- 23) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.

Safety

SAVE THESE INSTRUCTIONS

This message chair is intended for household use only.

● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 40°C or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

IMPORTANT SAFETY INSTRUCTIONS

● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

Safety

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
It is not recommended to use the massage for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

Safety

● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

● Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.


● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Safety

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This product is for use on a nominal 100-240V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

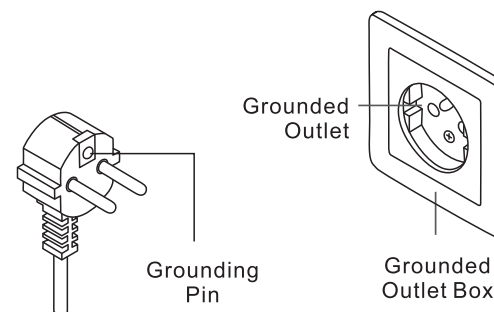

Preparation Before Use


Move the Chair

- Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

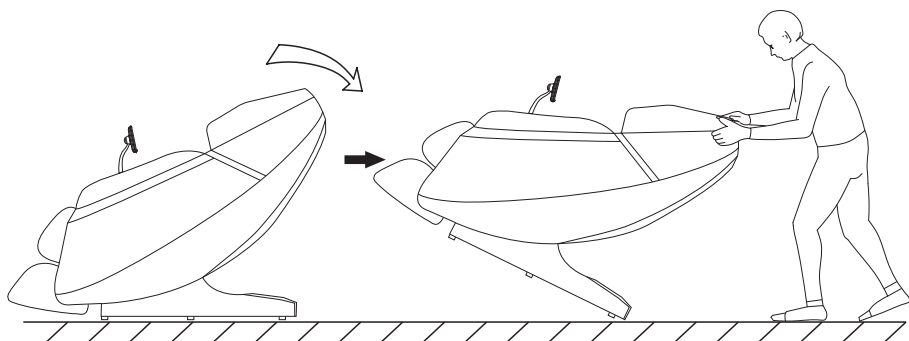

Place the Chair


Please make sure that there is an allowance of more than 35cm behind the massage chair, and more than 35cm in front of the massage chair to allow the backrest to recline without obstruction during operation.

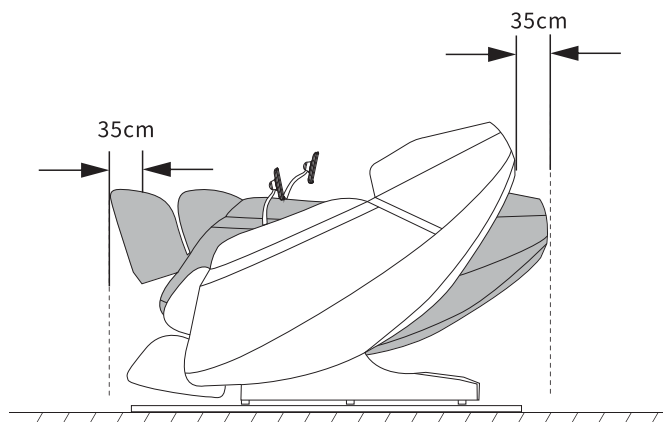


Preparation Before Use

Install Backrest Pad and Pillow Pad

- Position the backrest pad on the chair and tidy it up.

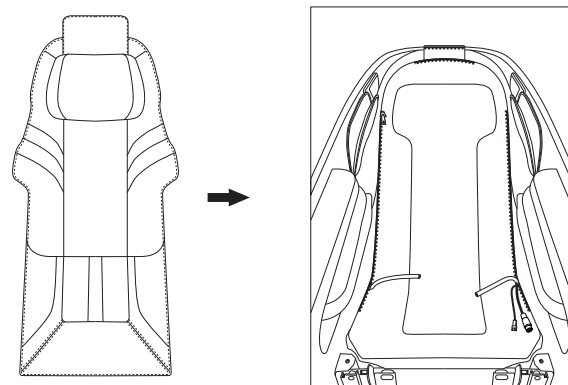


- Attach the upper backrest pad to backrest with long zipper, pic 1.
- Then attach the pillow to the short zipper, pic 2.

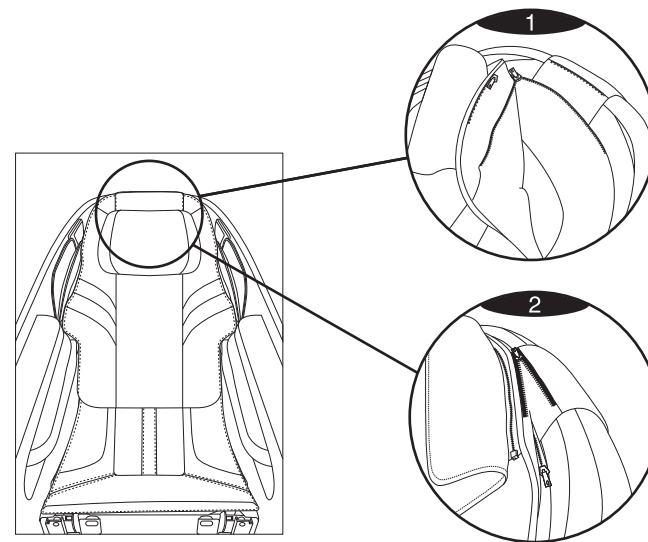


Preparation Before Use

- Connection of the air hose and heating cable with the hose and cable under seat.
- Verbinden Sie das Kabel der Fernbedienung mit dem Kabel unter dem Sitz.

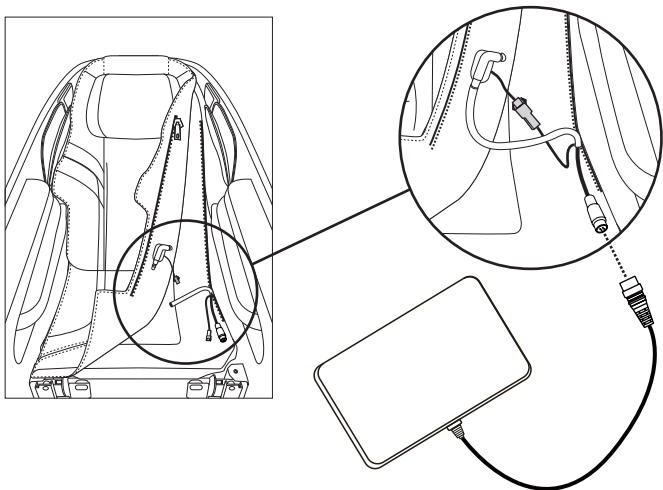

- After connecting the air hose and heating, pull the zip tie to the bottom.
(Note: The installation of the left air hose and zip is the same as the right steps)


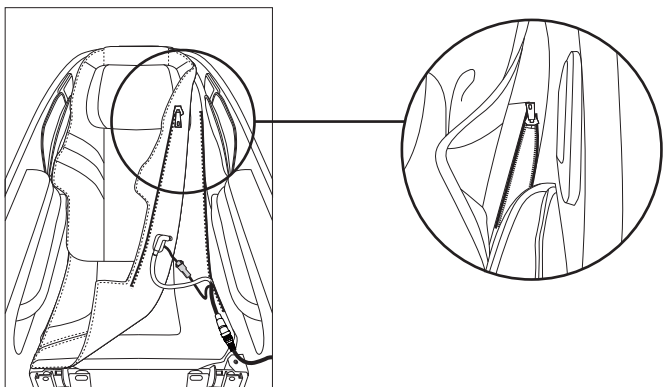


Preparation Before Use



Install Legrest

Insert the air pipe 1 and interface 2 into the counterpart position of the chair, separately.




Note: Connect the same-coloured leg tubes to the chair.

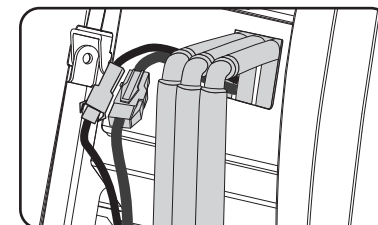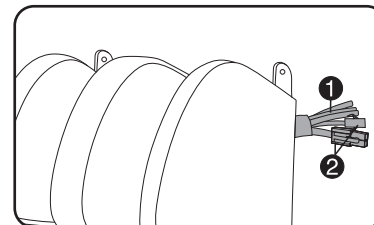

Put the legrest bracket 3 into the fixed axis 4.

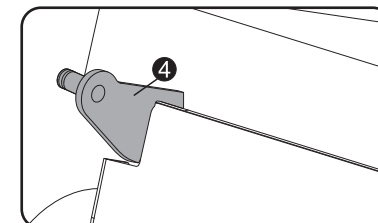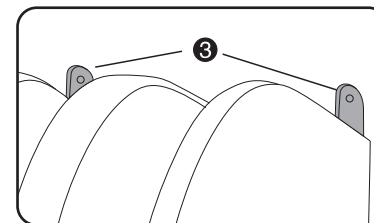


Lock the footrest by the clips, screw it tightly.

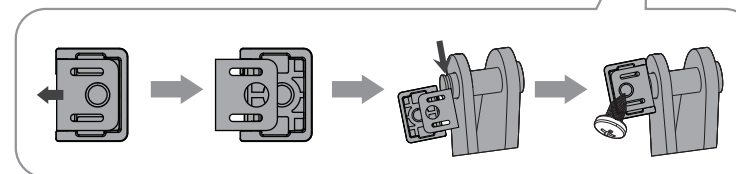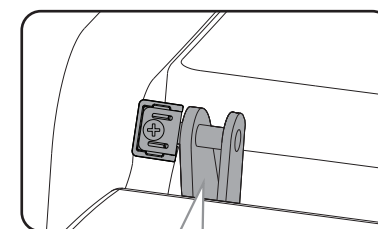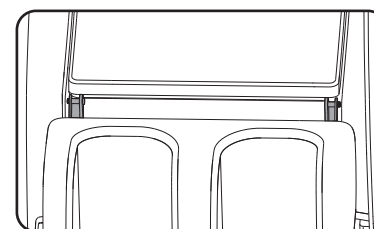

Preparation Before Use


- After installed footrest, attach footrest and backrest pad with the zipper.

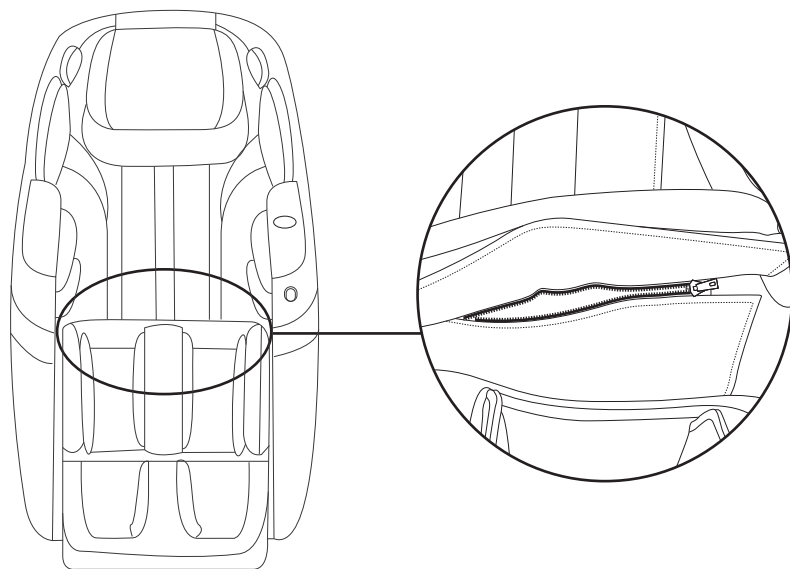

Installation of manual bracket

- Aligned holes, lock screw.
- Press down to align the snap.


Note: The arrow direction is towards the front of the handrail.

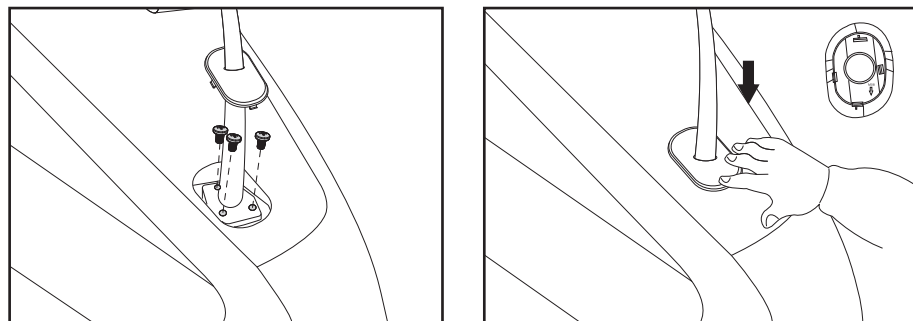

Preparation Before Use


Connect power

- Plug the power cord into power inlet, turn on the power switch.

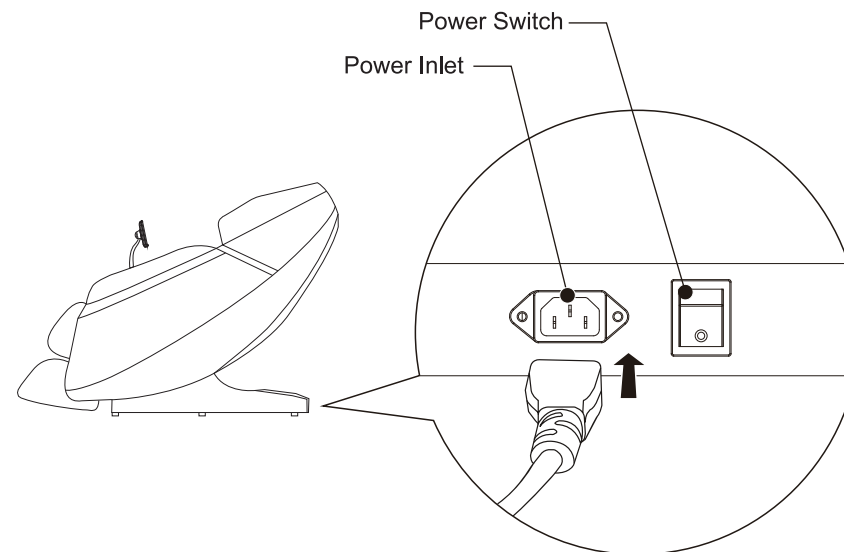



Bluetooth pairing

On your phone Bluetooth list, choose the model "R8Q01" to do the pairing.

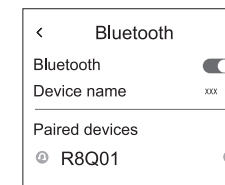

Components

Outer Structure

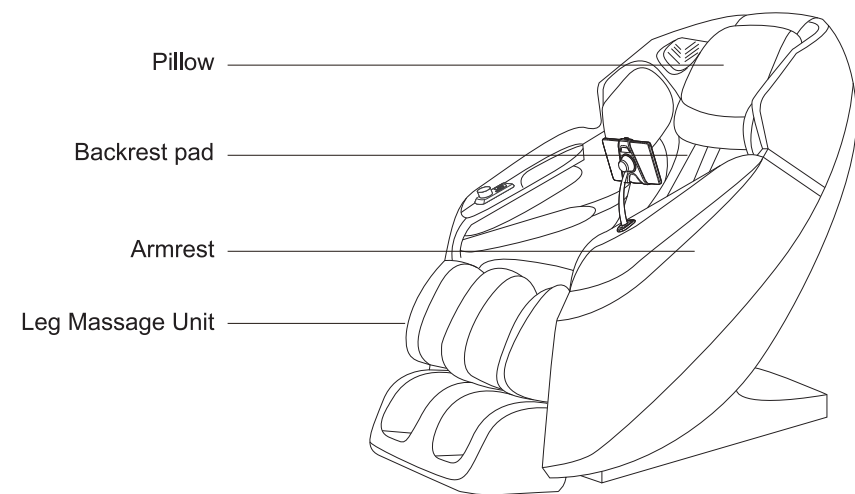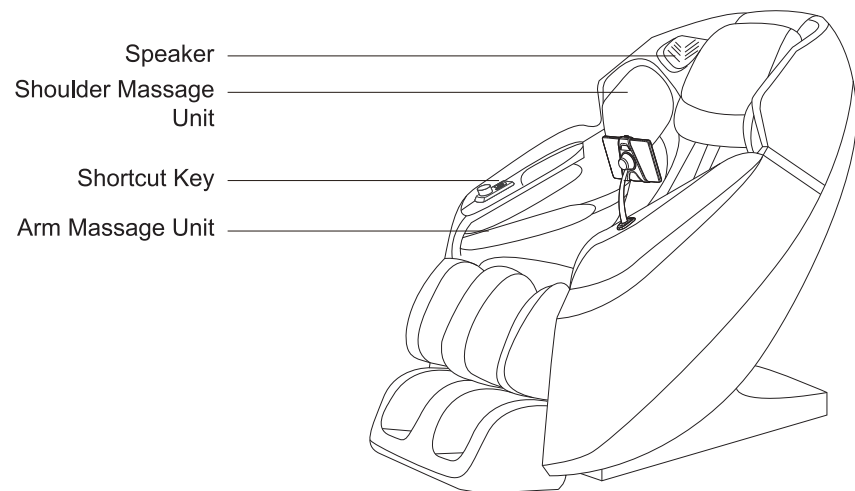




Components

Controller

(The specific display is subject to the actual product.)


Shoulder & Neck Testing

- Press and hold the power button on the side of the hand controller to turn on the massage chair.
- After powering on, select the massage program and initiate body shape detection. Please relax and lie down comfortably.
- If the body shape detection is not in the optimal position, press the () () button and then press "OK" to start the massage.

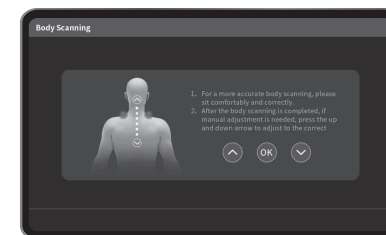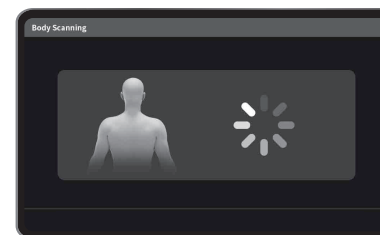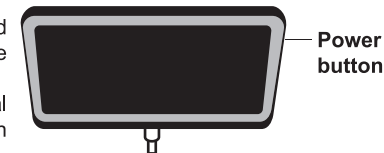

Function Introduction

- You can select the desired functions based on your personal needs.

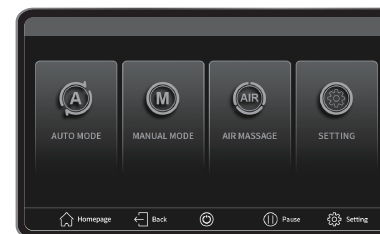

Auto Program: Enter the automatic program interface to choose from a variety of massage programs.


Manual Program: Enter the manual program interface to choose massage techniques, massage areas.

Airbag Massage: Enter the airbag massage interface to select airbag massage areas and zero gravity levels.

Setting: Enter the setting interface to configure features such as heating, language, and Bluetooth.

Components

Shortcut Key

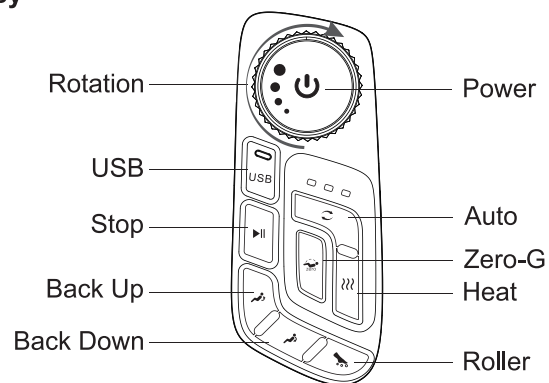

Function	Button	Instruction
Power		Press to turn on/off the massage chair.
Rotation		Rotate clockwise to increase Massage strength and counterclockwise to decrease from levels 1 to 6.
Stop		Press this button to pause the massage function. Press again to resume the original massage function.
Auto		Press this button to switch between multiple automatic program functions. The specific display is subject to the actual product.
Heat		Press this button to adjust the heating function.
Zero-G		Press this button to activate the zero gravity position, which can be adjusted at three angles. This function will be locked in the program with angle adjustment.
Back Up / Back Down		Press the Back Up/Down button to adjust the backrest angle.
Roller		Press to turn on/off the function and adjust the strength from level 1 to level 3.

Voice Control

When the massage chair is turned on or in standby mode, say "Hello massage chair " to enable the voice control function.

Use the following commands to use the AI voice Control feature:

Power on	Please select your favorite program to start your massage.
Power off	During shutdown, please leave or restart the massage chair after the chair is completely reset. Thank you and hope you enjoy the massage.
Pause massage	Massage paused
Continue to massage	Massage resumed
Turn on Bluetooth	OK, Bluetooth on
Turn off Bluetooth	OK, Bluetooth off
Turn off foot roller	OK, Foot roller off
Turn on foot roller	OK, Foot roller on
Turn on heating	OK, Heating on
Turn off Heating	OK, Heating off
Zero gravity	OK, command complete
kneading massage	kneading massage
shiatsu massage	shiatsu massage
knocking massage	knocking massage
Rolling massage	Rolling massage
tapping massage	tapping massage
clapping massage	clapping massage
Massage for ten minutes	OK, Massage for ten minutes
Massage for fifteen minutes	OK, Massage for fifteen minutes
Massage for twenty minutes	OK, Massage for twenty minutes
Massage for twenty five minutes	OK,Massage for twenty five minutes
Massage for thirty minutes	OK, Massage for thirty minutes
Increase strength	increase back roller intensity
Decrease strength	decrease back roller intensity

Master massage	Start Master massage
Relaxing massage	Start Relaxing massage
Deep Shiatsu massage	Start Deep Shiatsu massage
Refreshing massage	Start Refreshing massage
Wake Up massage	Start Wake Up massage
Noon Rest massage	Start Noon Rest massage
Neck & Shoulder massage	Start Neck & Shoulder massage
Waist & Back massage	Start Waist & Back massage
Slim massage	Start Slim massage
Sole Relieving massage	Start Sole Relieving massage
Spine Care massage	Start Spine Care massage
Calf Care massage	Start Calf Care massage
Soft massage	Start Soft massage massage
Lumbar Care massage	Start Lumbar Care massage
Gentle Care massage	Start Gentle Care massage
Sport Care massage	Start Sport Care massage
Lady Care massage	Start Lady Care massage
Deep Sleep massage	Start Deep Sleep massage
Deep Stretch massage	Start Deep Stretch massage
Gentleman Care massage	Start Gentleman Care massage
Yoga massage	Start Yoga massage
Space massage	Start Space massage
Spa massage	Start Spa massage
TCM Recuperating massage	Start TCM Recuperating massage

Cleaning and Maintenance


Maintenance advice

Please follow the below steps to clean leather and plastic parts

- Please ensure the main switch is turn off and the power plug is unplugged from the electrical outlet.
- Dip a soft, dry cloth in water or warm water containing 3% to 5% neutral detergent and wring it thoroughly.
- Clean the leather and plastic parts.
- Then wipe with dry soft cloth.
- Let it dry naturally.

Warning


- Do not use alcohol, thinner, gasoline and other chemicals for cleaning.
- Do not dry the surface with a blower.
- Do not iron the fabric.
- During maintenance, always unplug the power plug. Do not unplug it by wet hands.
- Please use a dust cover to avoid dust if you won't use the chair for a long time.
- As fabric's color may be dyed on the leather, be careful when using denim and colored cloth to wipe the product.
- Wipe the product with the melamine foam dipped in mild detergent, if the dirt is hard to remove.
- Do not let the leather touch plastic in case of the color fading.
- Water temperature should not exceed 40 degrees.

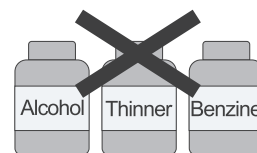

Please do not use



Water temperature
should not exceed
40 degrees



Do not iron

Troubleshoot

If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or the nearby customer service center.

Problem	Possible cause/action	
The massage rollers move up and then stop.	In order not to affect the body, the automatic timer function will move the massage roller to the upper end when the massage is over.	Inevitable in structure, not abnormal
Noise during the massage	- The sound of clapping; - Friction sound of the massage wheel and fabric during kneading; - The sound of the massage wheel when lifting and kneading; - The sound during air pressure massage; - The sound of the inflator pump; - The sound of airbag exhausting; - The sound of the backrest up and down.	
The massage rollers will stop during the massage.	- If the force applied to the massage rollers is too large, the massage rollers will stop running. - Lift your body slightly when using it, or raise the backrest slightly. (especially those who weigh more than 100kg, please pay attention when using)	After checking, if there is still an abnormality, please stop using the massage chair immediately.
Press the power button, but the massage chair doesn't work properly or cannot connect to the power.	- Please check the following: - Is the power plug fully inserted into the socket? - Is the main power switch on the left rear of the unit turned on?	
The power cord and plug are abnormally hot.	Please stop using immediately.	Please contact with your dealer or customer service.
	Please contact with your dealer or customer service.	
	Do not disassemble or repair it yourself or by non-professionals.	

Specifications

Model Number	R8Q01
Rated Voltage	100-240V~
Rated Frequency	50-60Hz
Rated Power	120W
Upright position - Approximately	1517×755×1125mm
Reclined position - Approximately	1662×755×1021mm

