


Instruction Manual

Model No. **AT-2800**

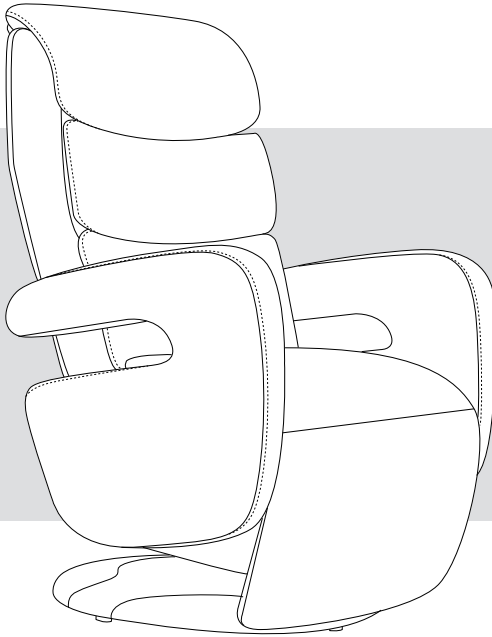

Before operating this unit, please read these instructions completely.

Thank you for purchasing AT-2800 Massage Chair.

Before using your massage chair, please read the contents of this instruction manual and refer to it when needed.

TABLE OF CONTENTS

Highlights	1
Safety Precautions	2
Product Description	5
Preparation For Use	6
Product Specifications	10
Remote Controller	11
Operation Guide	12
Troubleshooting	14

1 Highlights

- An installed auto scan automatically measures the shoulder height of the user.
- Air pressure system in the seat lumbar and leg area.
- Six pre-programmed automatic massage programs with customizable Speed and intensity.
- Manual programming possible by any combination of Massage techniques and movement of the massage rollers in the tense zone.
- Shiatsu roll leg or feet (Shiatsu roller under feet or leg.)
- the zero-gravity function enables a simple and comfortable angle. (zero-gravity function brings easy and comfortable angle.)
- Angle of backrest and footrest can be adjusted separately. (angle of backrest and footrest can be adjusted separately.)
- Swivel footrest (turnable footrest)
- All massage programs have a timer 15 minutes.
- User-friendly LCD control panel.
- Ergonomically shaped design, for optimal comfort.
- Recommended quality product.

2 Safety Precautions

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire or injury to persons. Please read the following precautions before using the massage chair.

Make sure the power plug is securely inserted into a proper electrical outlet to reduce the risk of short-circuit and fire.

It is highly recommended that a surge protector is used to prevent from damage.

DO NOT use the massage chair in areas where the humidity is high such as a sauna steam room, pools, bathrooms, AS or heating vents, etc.

DO NOT use the massage chair outdoors and avoid areas with direct sunlight.

If the chair is not being used, turn the power switch to the OFF position and unplug the massage chair from the electrical outlet to prevent any damages to the chair when there are power outages/surges that may cause serious damage.

Never plug/unplug the power cord plug socket with wet hands.

Close and continuous supervision is necessary when the massage chair is used by, on or near children or disabled persons.

Avoid falling asleep while using the massage chair.

Always keep the massage chair clean, and never insert any objects into or around the gaps of the massage chair.

DO NOT move the massage chair by pulling on the power supply cord.

If you find any rips or tears in the fabric of the massage chair contact the service department and stop using the chair immediately.

Please consult a doctor before using the massage chair if you are pregnant, undergoing any medical treatment, using a medical electronic device such as a pacemaker, or are experiencing any of the following: Malignant tumor, heart disease, back pain, abnormal or curved back bone, osteoporosis or acute illness.


Never use a massage function on swollen or inflamed parts of the body.

DO NOT use the massage chair for more than 30 minutes at a time.

DO NOT use the massage chair where aerosol(spray) products are being used or where oxygen is being administered.

This massage chair is a non-professional product designed to provide a comfortable massage and should not be substituted for appropriate medical treatment.


3 Product Description

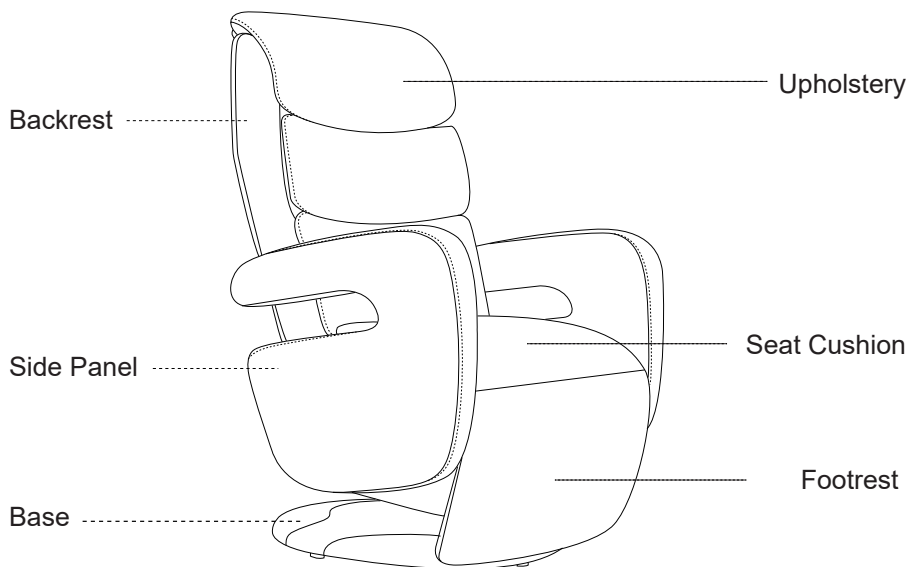

4 Preparation For Use



Step 1:

Note that keep the chair in front and back at least 60 cm free space, in order to bring the position to the recline.

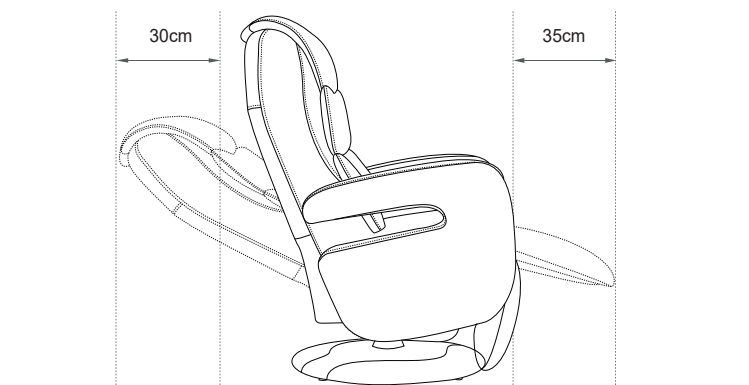


Step 2:

Connect the upholstery parts with Chair, IND as pictured below the hook and loop closures put together.

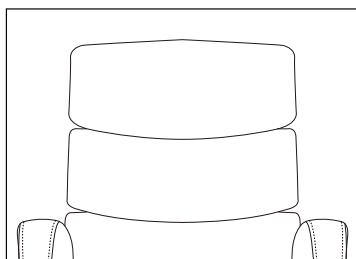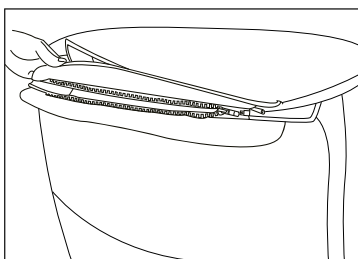

Step 3:

Plug the power plug of the Chair on the proper slots properly.

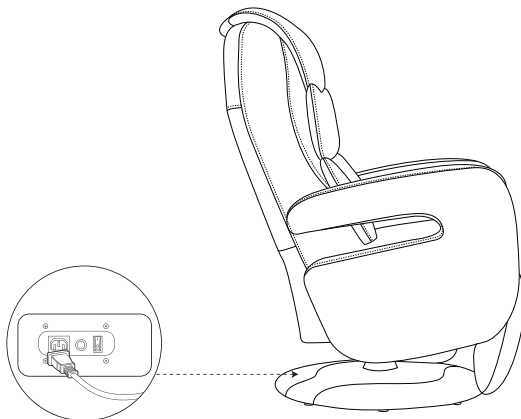


Step 4:

1. Before moving the chair, adjust the legrest back to its original position.
2. Recline the Chair on the basis of the backrest about 45 °, in order to let feed wheels contact with the ground. Now you can move the Chair with transport wheels.

Caution:


- 1) Bring the Chair always in the original position (backrest and Footrest vertical) before you move the Chair on the feed rollers.
- (2) Do not move the massage chair when there is someone seated on it.

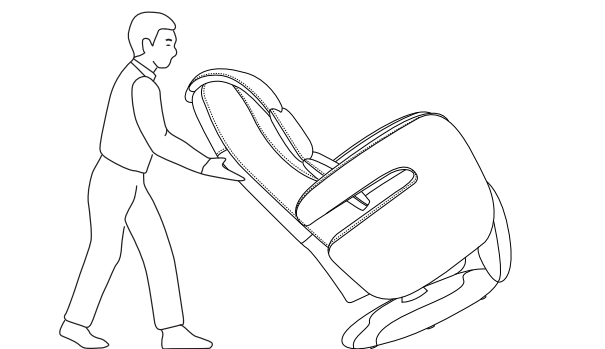

5 Power Connector

Plug the power plug of the Chair into the socket.


If in the insert of the Chair occurs a short circuit, contact a qualified electrician to check whether your power supply is connected correctly or not. If the plug is not fitted in the socket, should let the electricians replace the slot of the socket.

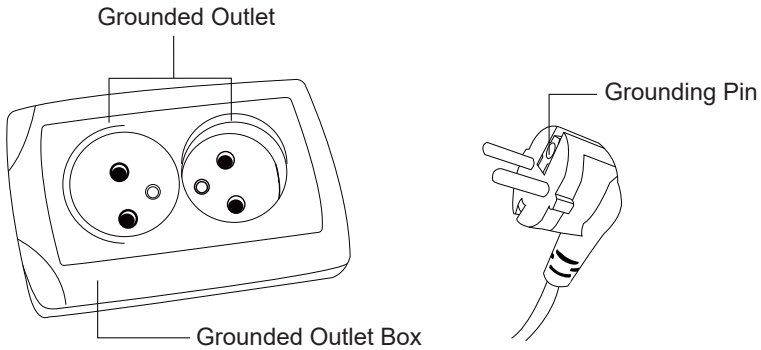

6 Product Specifications

Description	Specifications
Model	AT-2800
Power Input	230V
Power Consumption	190W
Auto Timer	15 Minutes
Maximum Time	30 Minutes
Dimension	Upright size : 114(L) x 80(W) x 117(H) cm Recline size : 172(L) x 78.5(W) x 84(H) cm Box Dimension : 115(L) x 82(W) x 120(H) cm
Weight	Gross weight: 76KG Net weight: 94KG

7 Remote Controller

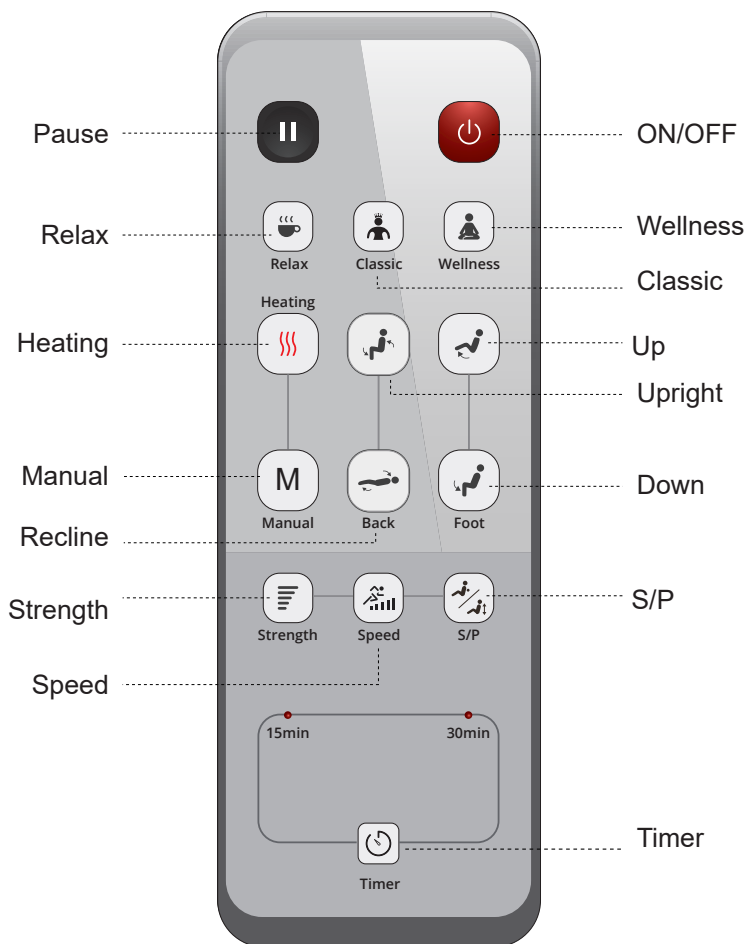

8 Operation Guide

Connect the power plug to the power supply. Turn the switch to “I” at the bottom of the massage chair.

Massage chair is in standby mode and only “Raise Backrest”, “Recline Backrest”, “Raise Leg Rest”, “Recline Leg Rest” and “Power” function work.

Function Description

Power [Button 1]

- Start and stop all functions of the massage chair.
- Press once and remote controller’s LED lights will start blinking to indicate the chair is on standby mode.

Press massage modes button to start.

- Press again to stop and massage rollers, backrest and footrest will return to original position.

Pause [Button 2]

- Press once and stop all massage functions temporarily including the timer, press again to resume the original massage function.

Wellness [Button 3]

- Engages the full body deep tissue massage. This program focus on neck/shoulder, relaxes sore muscles and improves blood circulation.

Relax [Button 4]

- This is a gentle massage mode to relieve body pain. Massage the full body, help you to fall asleep at night.

Classic [Button 5]

- Engages the deep tissue massage to loosen up the muscles.
- Relief of a day’s work pressure.

Footrest up/down [Button 6/8]

- Allows you to lift or drop the footrest.
- Press once and the footrest will start to lift/drop.

Recline/Upright [Button 15/10]

- These buttons control the recline and upright angle of the chair.
- Press once and the backrest and footrest will move to horizontal reclining position or an upright sitting position.
- Press again to stop the product at your preferred angle.

Heating [Button 7]

- This button offers you heating massage on lumbar.
- Press once to start the heating massage and press again stop it.

Manual massage [Button 9]

- Kneading/tapping/rolling
- Press once to activate kneading massage of the full back.
- Each press of button, the massage mode will change in sequence.

Massage strength [Button 12]

- 5 strength levels of the control of massage rollers. After activating the massage strength function, press each time to change the massage strength in the sequence of weak to strong.

Massage speed [Button 13]

- Control the speed of massage.
- Select a massage function and press to select between 5 speeds.

Sector massage [Button 11]

- Press once to localize the massage to a particular point.
- Press again to shift massage to a particular area of body.

Timer [Button 14]

- Control the duration of the massage session.
- The default time for all massage function is 15 minutes.
- Press each time to change the duration for 20,25,30 minutes.

9 Troubleshooting

This page summarizes the most common problems you could encounter with the product.

Problem	Possible Cause	Suggestion
The product does not work	The product is not plugged in properly.	Ensure the voltage on the product corresponds to the local mains voltage and then plug in again.
	The product has just finished its auto timer session and has automatically switched to standby mode.	If you want another session, press the Power button again.
	You may have used the product continuously for 45 minutes where the over heat protection has been activated.	Unplug the product and let it cool down for 60 minutes before you use it again.
	An excessive load has been applied on the product.	Reduce the excessive load and start again.
The product is abnormally warm	The product is likely to be overused.	Unplug the product and let it cool down before using it again.
Noise can be heard from the product	Noise is made by the mechanical parts of the product.	This is normal and does not mean that the product is faulty.

Alpha Techno GmbH
Ernst-Bauer-Str.1
97941 Tauberbischofsheim
Tel.: 0934 1 / 9285-0
Fax: 0934 1 / 9285-28
Email: Info@Alpha-Techno.com
Germany