


OGAWA

User Manual

Relaxio

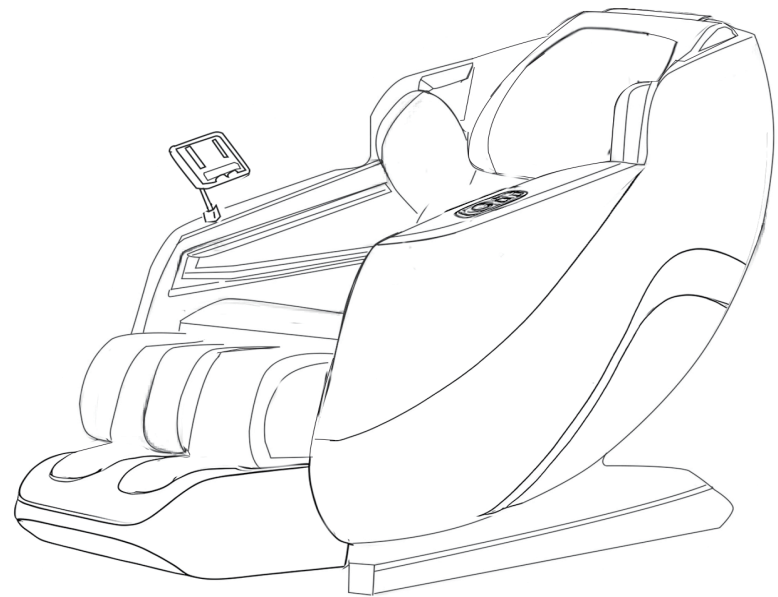

OG 6231

Living Art

Thank you for purchasing our company's massager products. This luxury massage chair is ergonomically designed to massage the head, back, waist, buttocks, legs, feet, arms and other parts, with a variety of massage methods. Warm feeling hot compress, vibration, airbag squeeze massage and other functions, is a high-end luxury enjoyment. Before use, please read this manual carefully, and pay special attention to safety precautions to ensure correct operation and use of this product. Keep the user manual in a safe place for future reference.

Contents

1. Product Features
2. Name of each part
3. How to use
4. Maintenance
5. Matters needing attention
6. Safety protection
7. Warm reminder
8. Technical parameters
9. Circuit schematic
10. Name and content of harmful substances in products
11. Product Warranty Instructions
12. After-sales service guarantee card
13. Analysis and elimination of common faults

13. Analysis and elimination of common faults

Fault phenomenon	Possible reason	Approach
Beeping (sound of operation) *airbag inflation sound *airbag deflation sound *Solenoid valve switching sound *Air pump working sound	When the product is working, it makes a sound of mechanical operation	This sound is normal and needs no processing
The whole machine does not work completely	The power plug is not inserted into the socket The socket switch is not turned on Massage button not pressed	Check the power plug and socket, make sure the plug is in good contact with the socket and press the massage button
The massage stopped suddenly	This product has just completed the rated working time of 15 mins and automatically switches to standby mode	If you want to massage again, please press the standby button again to turn on the massage function
	Over rated use time, motor overheating protection	Shut down, cut off the power supply, and use it after the motor cools down

The company reserves the right to improve the product manual, if there is any change without notice, the appearance of the product is subject to the actual product. This booklet has been carefully checked, but it does not rule out that there may be typographical errors or misunderstandings in the content, please understand, the company reserves the right to interpret.

 Improper disposal of waste can cause environmental pollution

Certificate

Product name : _____

Model : _____

Detect work number : _____

Production Date : _____

12.After-sales service guarantee card

Warranty Card

Product name	
Product model	
Buy shop	
Purchase date	
Customer name	
Customer address	
Customer phone	


Maintenance records

Date	Maintenance content	Replacement parts		Maintenance man	User signature
		Name	Quantity		

1.Product Features

1. The whole machine has beautiful lines, bright colors, humanized design, and green materials.
2. This product is designed with a manipulator massage device, which realizes massage functions such as kneading, massage, and beating on the back and waist of the human body.
3. The whole machine is equipped with about 20-30 airbags on the head, legs, arms, cushions and shoulders, which can freely display the function of airbag acupressure massage.
4. The back and waist massage movement can be adjusted manually, various massage techniques can be switched freely, and three-speed adjustment can be realized
5. One-key switch for airbag massage, you can manually adjust the airbag massage of arms and legs, and the massage intensity can be adjusted in three gears
6. The inclination angle of the backrest can be adjusted according to the demand, 115°-155° can be adjusted freely, and the zero gravity function can be realized when the backrest angle reaches the lowest
7. One-key heating, constant temperature 35°-45°
8. The massage time is adjusted according to the needs, in five-minute increments, and one massage stroke can be adjusted by setting 15 minutes, 20 minutes, 25 minutes, and 30 minutes.
9. Special foot roller, with airbag rocking massage
10. Set up the bluetooth audio, massage while enjoying the fun of music

2.Name of each part

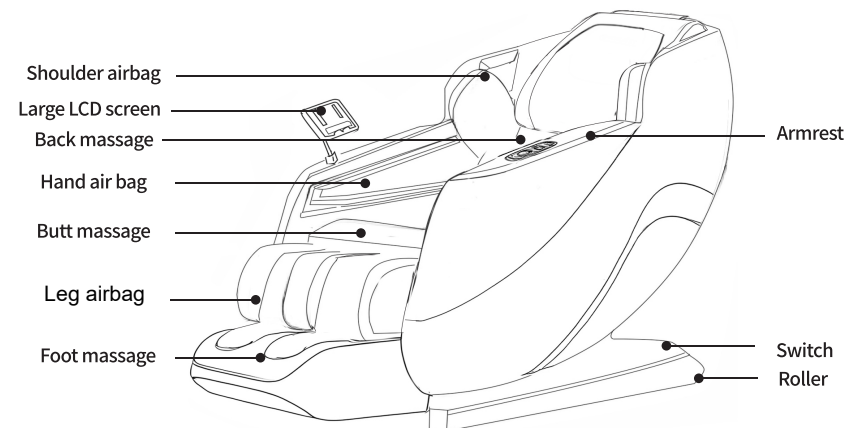

3.How to use

One-piece installation-free

No tedious installation required,ready to use out of the box


1.Connection and installation method



figure 1

Connect the plug of the power cord to the electrical box plug (figure 1), and connect the other end to the power outlet

1.How to move the massage chair

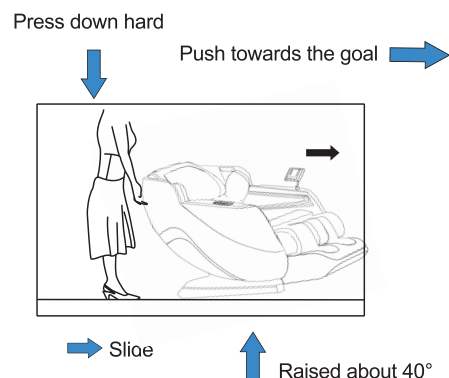

- The person stands on the back of the massage chair,presses the top down hard,and lifts the calf off the ground
- Tilt the back chair 40° for easy movement of the massage chair indoors
- Do not press down too much to avoid damage caused by the complete tilt of the fuselage
- Please do not move when someone is on the massage chair
- Moving the massage chair may damage the floor,it is recommended to put a cushion under the product

10.Name and content of harmful substances in products

Part Name	Harmful materials					
	Lead (Pb)	Tribute (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr (VI))	polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCB board	X	○	○	○	○	○
Motor	X	○	○	○	○	○
Metal rack	X	○	○	○	○	○
Plastic parts	○	○	○	○	○	○
Leather case	○	○	○	○	○	○
Connecting line	○	○	○	○	○	○
Sponge	○	○	○	○	○	○
Packaging material	○	○	○	○	○	○

This form is prepared according to the provisions of SJ/T 11364

○ means that the content of the hazardous substance in all average materials of this part is below the limit requirement of GB/T 26572

× means that the content of the hazardous substance in at least one of the average materials of this part exceeds the limit requirement of GB/T 26572

The "hazardous substances" shown in this table will not cause any harm to the human body and the environment under the normal use of the product.

The "hazardous substances" shown in this table and the parts in which they are present provide consumers and recycling practitioners with information

on the presence of the relevant substances, which can help in the proper disposal of products when they are discarded.



Indicative Explanation of the Regulations on the Recycling and Disposal of Waste Electrical Appliances and Electronics

The company advocates the concept of environmental protection and low-carbon consumption. It is recommended that users who own the product abide by the relevant laws and regulations on the recycling and disposal of waste electrical and electronic products in the UK when they no longer need this pro-duct,and hand them over to the local state-approved recycling disposal.Qualified manufacturers recycle,reduce waste of resources and protect the natural environment of the earth

11.Product Warranty Instructions

1. In order to protect the interests of consumers, the product castration is implemented in accordance with the national three-guarantee regulations. Consumers enjoy a one-year warranty service. During the warranty period, if domestic product quality problems cause damage, the company will repair and replace spare parts free of charge.

2. During the warranty period, if the service is required due to the following circumstances, the company will charge the material cost as appropriate:

- Improper use or repair by yourself
- Not used according to the specified power supply voltage
- Move, ship or modify by yourself after installation
- Appearance is naturally soiled due to use
- Damage due to natural and man-made disasters


3. In the following cases, the company will charge as usual:

- Overdue warranty
- Warranty card not presented


8. Technical parameters

Product name	Relaxio
Rated voltage	220V
Rated frequency	50Hz
Rated power	90W
Rated working time	15min
Security Level	Category 1
Executive standard	GB4706.1-2005 GB4706.10-2008

9. Circuit schematic

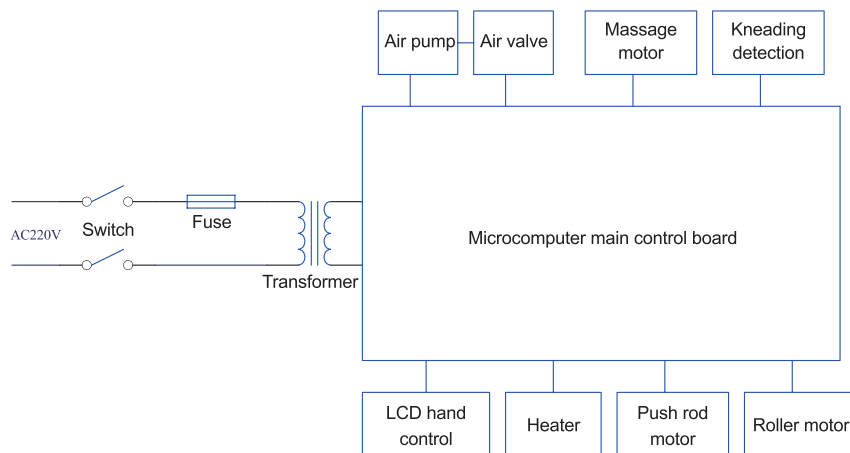

3. Manual operation instructions

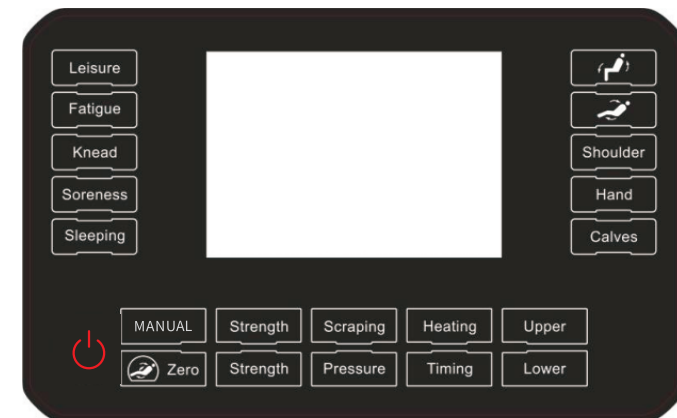

Remote Control Keys

Power: Press to turn the Massage Chair On or Off

Press Power I: Press the power button and select either automatic massage or manual massage option. The base time is set to 15 minutes.

Automatic Mode Program Selection: “Leisure”、“Fatigue”、“Knead”、“Soreness”、“Sleeping”.

Pressure: Press to turn the pneumatic automatic On/Off

Shoulder: Press to turn the shoulder airbag On/Off.

Calves: Press to turn the Calves air bag On/Off

Hand: Press to turn the hand bag On/Off

Zero: Press to move the chair into the zero gravity position (3 steps)

Foot speed: Press to turn the foot roller On/Off or adjust the speed (3 levels).

Timing: Use this button to change the massage time anywhere between 5. and 30 minutes The default time is 30 minutes.

Heating: Press to turn the heating On/Off.

Upper: Long press, calf rise ; backrest down.

Lower: Long press, lower leg ; backrest rises.

4. Maintenance

1. For daily cleaning, please wipe with a neutral detergent and a soft cloth. Do not eat corrosive detergents.
2. If the power cord is damaged, in order to avoid danger, it is not allowed to be replaced by full-time personnel at the manufacturer's designated maintenance point
3. When not using this product or cleaning, please unplug the power cord to avoid danger
4. Do not use any sharp objects to cut the surface of the product
5. Do not place the product in a humid environment, it should be placed in a dry and ventilated place
6. Do not apply force or force to the product

5. Matters needing attention

In order to ensure the safe and correct use of the massage chair, be sure to refer to the operation manual in detail before using this product.

To reduce the risk of fire, burns, electric shock, or injury to others, follow these instructions:

- 1) Do not use a power supply other than AC 220V.
- 2) When no one is using the machine, be sure to unplug the power plug of the massage chair from the socket. When the machine is not in daily use or before installing/removing parts, be sure to unplug the power plug from the socket in time.
- 3) To avoid fire, electric shock or injury due to overheating, do not operate the product under other coverings such as pillows or blankets.
- 4) If the product is used by children or people with physical and mental disabilities and disabilities, they need to be supervised and guided by an adult guardian.
- 5) Please be sure to use this product in accordance with the purpose described in the manual. Do not use spare parts not recommended by the manufacturer.
- 6) Do not use this product when the following conditions occur: the power cord or power plug is damaged, the operation is abnormal, such as heavy fall to the ground or other damage, falling into water, please return the product to the maintenance service center for inspection and maintenance .
- 7) Do not drag the power cord to move the product or use the power cord as a handle.
- 8) The power cord must keep a safe distance from the heating surface.
- 9) Do not operate the product when the air outlet is blocked. Please keep the air outlet unobstructed to avoid being blocked by lint, hair, etc.
- 10) Do not insert or drop objects into any openings of the product.
- 11) Do not use this product outdoors.
- 12) Do not operate this product in a place where aerosol products are used or filled with oxygen.
- 13) Cut off the power supply, please turn off all operation controls, and then unplug the power plug from the socket.
- 14) Do not cover the massage chair to avoid overheating and cause malfunction or fire.

6. Safety protection

- Do not use the massage chair in an excessively humid or dust-intensive environment to avoid electric shock or mechanical failure.
- Do not use the massage chair when the room temperature exceeds 40°C.
- Do not place the massage chair near electric heaters, near stoves, or in direct sunlight.
- The massage chair is designed as a personal use product and is not suitable for any commercial use.

Be careful

- Massage chairs are for indoor use only.
- Use the massage chair in a low room temperature, do not raise the temperature suddenly. It is recommended
- to gradually adjust the temperature to the normal range before use.

If the massage chair is moved from a low temperature storage place to a warm environment for use, the normal operation of the machine may be affected due to the accumulation of moisture in the parts, which may even cause the parts to malfunction. After moving, it is recommended to place the product at normal room temperature for 1 hour before using it.

7. Warm reminder

- The power switch must be turned on before other functions can be selected.
- Children, please use this massage chair under the supervision of adults to avoid equipment damage and injury to children due to improper operation.
- Do not allow children to climb on this massage chair to avoid children falling.
- When using a massage chair, it is necessary to adjust the strength of the chair massage, because the massage force is too small to achieve the proper stimulation, and if the massage force is too large, it is easy to cause fatigue and damage the skin.
- When using a massage chair, you should relax your body and mind. In addition to concentrating your thoughts during massage, you should be calm, and your whole body should not be tense.
- Patients with heart disease, high blood pressure, osteoporosis, local skin damage, ulcers, bleeding, tuberculosis, tumors, and people who are too hungry, too full, alcoholic or too tired are not suitable to use the massage chair.
- In order to avoid reducing the massage effect or causing injury, please do not use the massage chair with other therapeutic equipment such as electric blankets at the same time.
- Do not use the massage chair within 1 hour after eating to avoid adverse effects.
- Do not use the massage chair when hands or other parts of the body are wet, and do not insert or remove the power plug
- Do not insert any objects or flammable objects into the massage chair. This may cause electric shock, malfunction, or cause a fire.
- If you feel any discomfort during the massage, please stop immediately.
- This product is not intended for self-diagnosis or treatment. If diagnosis or treatment is required, it should be handled by professional medical personnel.
- This product should not be used by persons receiving medical conditions and those who are pregnant or menstruating.