



< timetorelax

Since the company was founded back in the year 2000, the name CASADA has become synonymous with high-quality products in the wellness and fitness sector.

Today, CASADA devices are available worldwide. Continuous development, unmistakable design and a strict focus on improving quality of life are just as much characteristic of CASADA products as reliable and top-class quality.

Congratulations!

By purchasing this massage chair, you have demonstrated health awareness.

In order for you to enjoy the benefits of this device for a long time, we would like to ask you, to read and follow the safety instructions carefully.

We wish you much pleasure with your personal **Skyliner III**.

Table of contents

1. Safety Instructions.....	62
2. Contraindications.....	63
3. Placement of the Massage Chair.....	64
4. Set-up and Assembly.....	66
5. Structure of the chair.....	68
5.1 Elements on the massage chair.....	68
5.2 Functions of the massage chair.....	69
5.3 Belt heater.....	70
5.4 Structure of the remote control.....	72
5.5 Structure of the quick control panel.....	74
6. Before use.....	75
7. Operating instructions.....	77
7.1 Operate massage chair.....	77
7.2 Pause function.....	79
7.3 Automatic programs.....	79
7.4 Remote Control.....	84
7.5 Adjusting the Chair.....	95
7.6 Settings.....	97
7.7 Health detection.....	101
7.8 User Defined.....	104
7.9 Other functions.....	105
7.10 Memory.....	110
7.11 Ending massage.....	111
8. Maintenance.....	112
8.1 Cleaning and maintenance.....	112
8.2 Troubleshooting.....	113
9. Specials.....	114
10. Legal.....	117
10.1 EU declaration of conformity.....	117
10.2 Warranty conditions.....	117

1. Safety Instructions



Please read the following instructions carefully before using your massage chair to ensure that it functions properly and with optimal efficiency. Please keep these operating instructions for further use!

- The massage chair conforms to recognised technical principles and the latest safety regulations.
- The massage chair is equipped with heated sections. Persons who are sensitive to heat should take care when using the product. (ICE 60335-2-32)
- The massage chair does not require maintenance. Any potential repairs may only be carried out by authorised experts.
- Improper use and unauthorised repairs are not permitted for safety reasons and will lead to loss of the warranty.
- In order to avoid injury, please do not stick your fingers between the massage rollers.
- Never touch the mains plug with wet hands.
- Do not allow the massage chair to come into contact with water, high temperatures or direct sunlight.
- Do not use the massage chair in an environment with high humidity levels, such as in the bathroom.
- Do not use the massage chair in an area with insufficient space or in an area where ventilation is covered and a supply of fresh air is not guaranteed.
- To avoid the danger of short-circuits, disconnect the massage chair from the power supply if it is not in use for a long period of time.
- Do not use any damaged cables, plugs or loose sockets.
- If cables/plugs are damaged, they must be replaced by the manufacturer, a service representative or qualified personnel.
- In the case of malfunction, immediately disconnect the product from the mains.
- The company disclaims any liability for damage if the product is used inappropriately or incorrectly.
- Do not exceed the daily recommended massage duration of 30 minutes in order to avoid excessive strain on your muscles and nerves.
- To avoid damaging the massage chair, never use pointed or sharp objects.
- In order to reduce the danger of short circuits or fire, it is essential to use only sockets that fit the plug and to ensure that the plug is fully inserted into the socket.
- Disconnect the massage chair from the power supply after use and before cleaning.
- Do not allow children under 14 to clean or maintain the product without supervision.
- If an unexpected power failure occurs during use, immediately set the switch to the OFF position and disconnect the plug in order to avoid damage to the massage chair.
- Do not use the massage chair if the electric cables are wet or damaged.
- Children under the age of 14, people with disabilities and frail people must be supervised at all times when in the vicinity of the massage chair or when using the massage chair.
- Do not use the massage chair immediately after consuming a meal or when under the influence of alcohol.
- Only use the product for the purpose described in the operating instructions.
- Please only use accessories provided by the supplier.
- To prevent damage, please do not stand, sit or bounce on the footrest.
- To avoid damage or injury, do not try to sit on the armrests or backrest.
- Please clean your massage chair regularly and prevent foreign bodies from penetrating the crevices of the massage chair.
- Please do not pull directly on the mains cable.
- When adjusting the position of the footrest or the backrest, please ensure that there are no other objects underneath, in particular no children.
- The product is only intended for domestic use.
- If the flexible power cable becomes damaged, another flexible cable designated for the same purpose must be used or a suitable replacement cable must be purchased from the manufacturer or their service point.

2. Contraindications

If you are unsure whether you should use the massage chair, be sure to consult your doctor.

- Use of the massage chair is prohibited during pregnancy or if any of the following complaints are present in the massage area: recent injuries, thrombotic diseases, any kinds of inflammations and swellings or cancer. If you are undergoing treatment for illnesses or conditions, it is recommended that you consult a doctor before getting a massage.
- Persons with physical, cognitive or mental impairments or persons lacking experience and knowledge should only use this chair under the supervision and guidance of persons responsible for their safety.
- In order to avoid any discomfort or danger when using the massage chair, we would ask the following people to consult a doctor before using the product:
 - Bedridden persons
 - Persons receiving medical treatment
 - Patients with back pain and persons with spinal problems / curvature of the spine
 - Persons with pacemakers
- If you experience pain during the massage, stop using the product immediately.
- If you injure yourself while using the chair, seek immediate medical treatment.
- Please do not massage any reddened, swollen or inflamed areas of the skin.
- This massage chair is intended to be used only for home wellness massages and is not a medical massage unit. It therefore cannot be used as a substitute for specialist medical treatment.
- We recommended that you use the massage chair for 30 minutes on a daily basis. Individual areas of the body should be massaged for at most 15 minutes at a time, as excessive massaging can otherwise be counter-productive.
- This product is not suitable for children under the age of 14.
- Children under the age of 14 must be supervised. Ensure that children do not play with the massage chair.

Braintronics® contraindications

- Psychoses (e.g. Schizophrenia, bipolar disorder, endogenous depression)
- Personality disorders
- Epilepsy and similar seizure disorders
- Heart conditions
- Diseases of the central nervous system
- Thrombosis
- Endogenous depression
- ADHD (under-active)
- Recent heart attack or stroke
- Mental disability
- Addictions such as to drugs or alcohol or dependency on medication
- Regular intake of psychotropic drugs
- Pregnancy


NOTE: For ethical and legal reasons, braintronics® should not be used on children and young people without the explicit permission of the legal representatives. Persons for whom meditation may conflict with religious beliefs should refrain from using the product.

3. Placement of the Massage Chair

Placement

Make sure that there is at least 10 cm of space behind the chair so that the chair can be tilted.


Protect the chair from excessive room temperatures. Position it to avoid direct sunlight and to ensure sufficient distance from heating devices. To protect the floor from damage, we recommend an appropriate underlay (e.g., a mat).

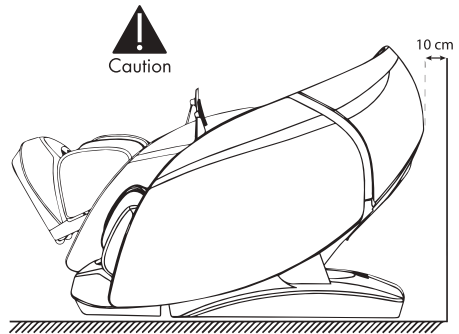

Raising the Chair

To avoid injuries, it is necessary to have help when lifting and moving the chair.

1. Please lift the massage chair when moving it on sensitive surfaces such as wooden floors.
2. When the chair is lifted and moved to the intended position, take care to protect your hands and feet from being crushed. Do not let go of the chair until it is standing level. To avoid damage to the floor, we recommend placing protective mats or the like on the floor.

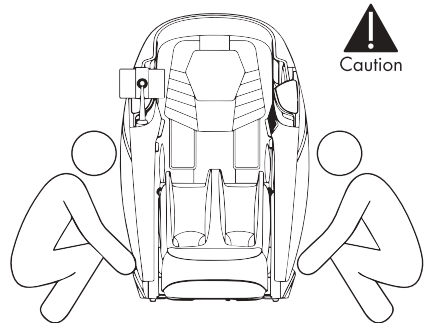

3. Placement of the Massage Chair


Repositioning the Massage Chair

Use the castors on the back to move the massage chair. Move the chair by tilting it backwards by about 45° (see illustration).



Note: Excessive force will cause the chair to tip over and be damaged.


1. Before moving the chair, please lower it and switch off the power supply after reaching the basic position.
2. Please move the chair only when it is empty (people, pets or objects must not remain on the chair).
3. Do not push the chair over any obstacles higher than 2 mm or gaps wider than 5 mm.
4. When moving this product using the rollers, a single continuous movement is not possible; if the distance is more than 50 metres, please move the product slowly and smoothly to prevent damage.

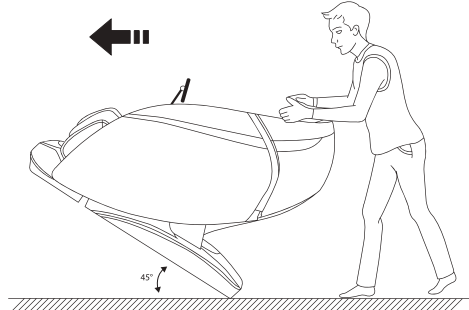

Removing and Attaching the Head Cushion and Backrest

The kneading intensity of the massage in the area of the neck and shoulders can be alleviated by using the pillow. We recommend that you use the cushion.



The back cushion and the backrest (1), as well as the head cushion and the backrest cushion (2) are connected with a zip.

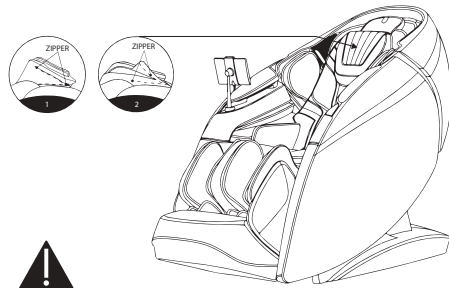



4. Set-up and Assembly

Installing the Armrest

1. Switch on the unit and lower the backrest using the remote control.
2. Plug the wiring harness connector and the air line into the side of the steel frame and into the corresponding connectors of the armrest (Figure 1).
3. Lift the armrest with the air line and cable plugged in and hang the hooks on both sides of the steel frame (Figure 2).

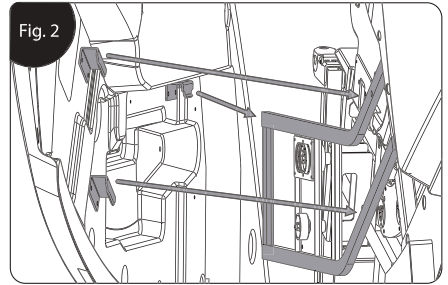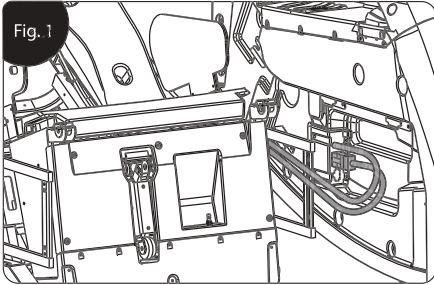




4. Insert the rollers at the rear end of the armrest into the attachment (Figure 3) and move the armrest backwards and downwards. Then push the armrest backwards and finally fasten it with two M5 screws (Figure 4).

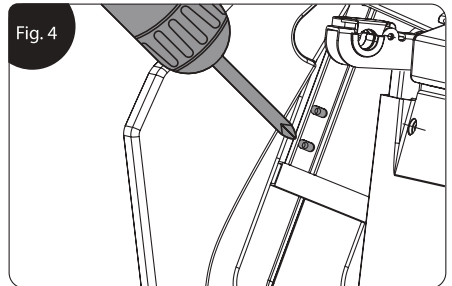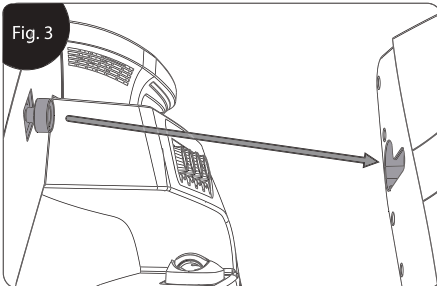

4. Set-up and Assembly




Starting the Calf Mechanism

1. Plug the cable and the air line of the calf mechanism into the respective connector on the front of the steel frame (Figure 1).
2. After connecting, open the cover of the bracket on both sides of the steel frame (Figure 2).
3. Lift the calf mechanism and put it into the holder. Close the cover and affix it with two M4 screws (Figure 3).

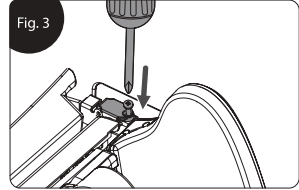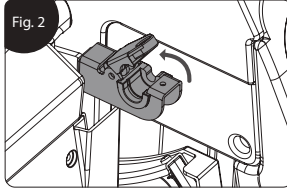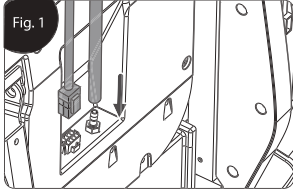


Installing the Touch Screen Bracket

1. Align the bracket on the mounting device, the right armrest, and affix it with an M5 screw (Figure 1).
2. Put the cover cap in place and press it down firmly (Figure 2).
3. After assembly, carefully wiggle the bracket to check that it is firmly installed. The bracket is now fully assembled (Figure 3).

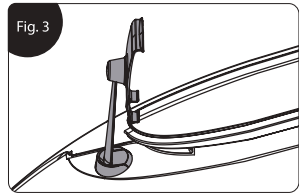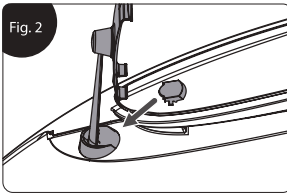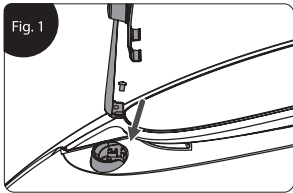


5.1 Elements on the massage chair

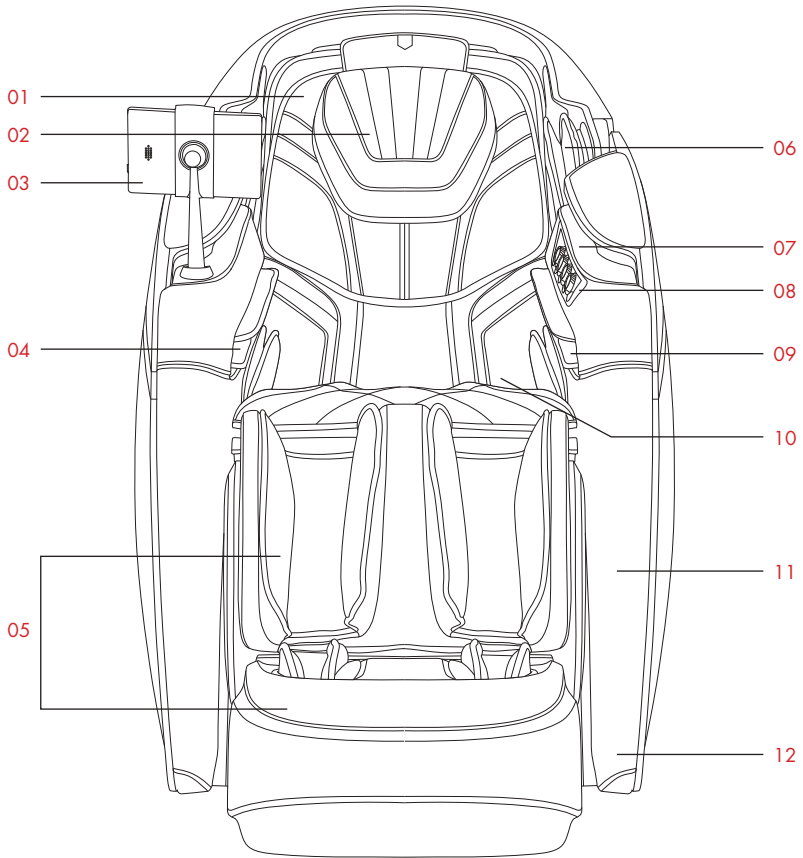

- | | |
|-------------------------|---------------------------------------|
| 1. Large cushion | 7. Illumination |
| 2. Small cushion | 8. Quick control panel |
| 3. Remote control | 9. Health scanner |
| 4. Arm air cushion | 10. Shoulder mechanism / back cushion |
| 5. Foot section | 11. Side panel |
| 6. Shoulder air cushion | 12. Illumination |

5.2 Functions of the massage chair

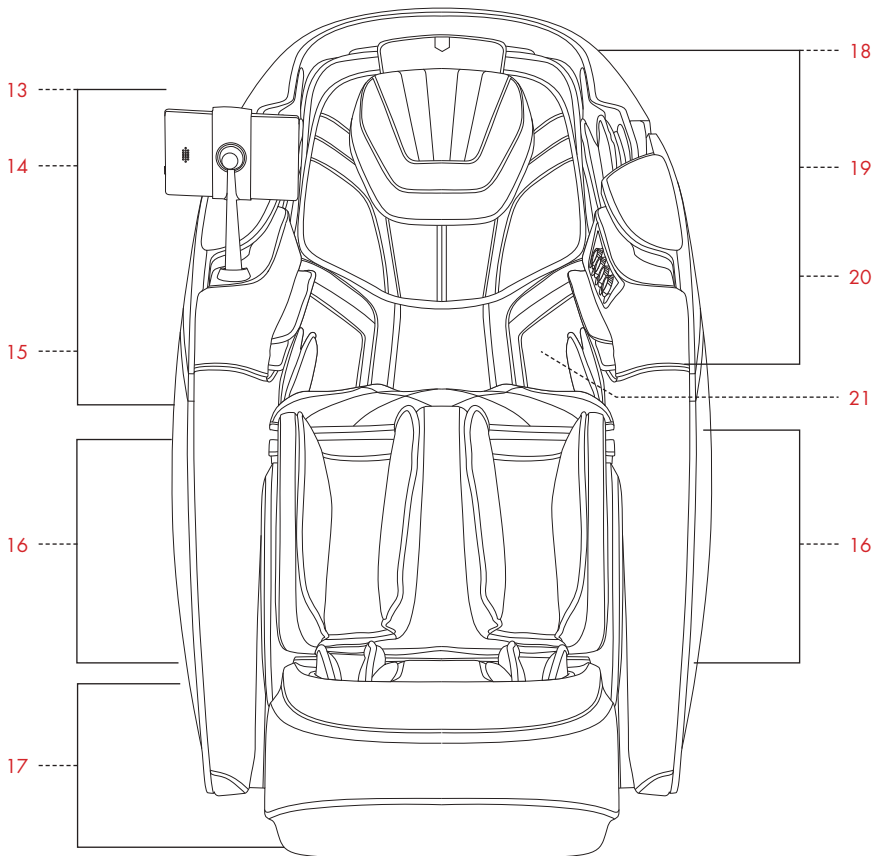


- 13. Shoulders
 - Air cushion massage
- 14. Arm (right)
 - Remote control
 - Voice control
 - Air cushion massage
- 15. Hands
 - Air cushion massage
- 16. Legs
 - Air cushion massage
 - Kneading function
 - Calf movement massage
- 17. Soles
 - Roller massage

- 18. Head
 - Speakers
- 19. Arm (left)
 - NFC inductive charging station
 - USB charging socket
 - Air cushion massage
 - Ion air supply
- 20. Head and neck, to buttocks
 - Dual core mechanism
 - Heat massage
- 21. Shoulder, back, waist, abdominal area
 - Heat function

5.3 Belt heater

Using the belt heater

- The chair is equipped with a unique wrap with innovative graphene heating, which not only warms the shoulders, but also the back, waist and abdominal area. The user can apply the wrap as needed. When placed over the shoulder, it warms the acupuncture points of Bingfeng, Tianzong, Yunmen and Qihu. In addition, the heat effectively alleviates ailments such as scapulohumeral perithritis and cough.
- When the wrap is placed around the abdomen and back, the graphene heating warms the body and relieves pain. In addition, channel flow is warmed and blood congestion on the back and abdomen is eliminated. Irregular menstruation and dysmenorrhoea improves, and pain in the lower back and kidney area is relieved. Internal organs are warmed, thereby eliminating intestinal chill with good effects for people with Qi deficiency or spleen or stomach weakness.

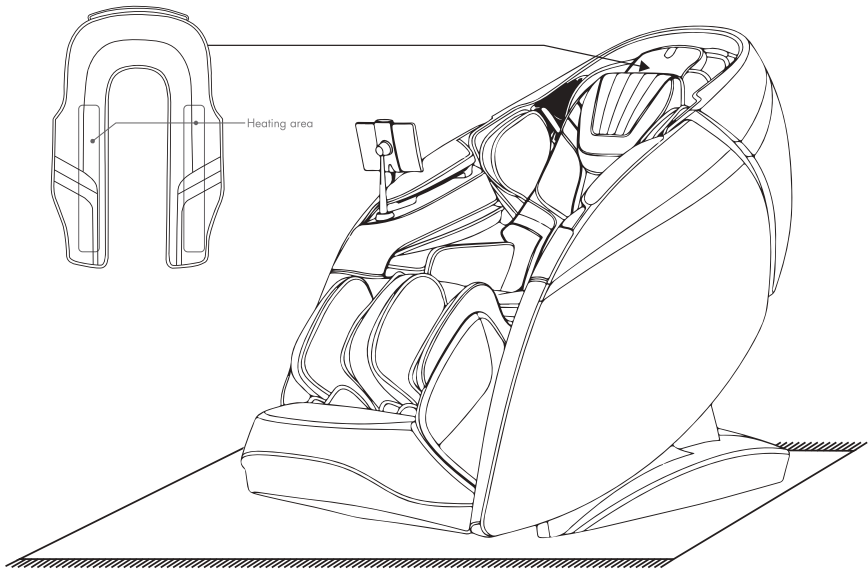

5.3 Belt heater

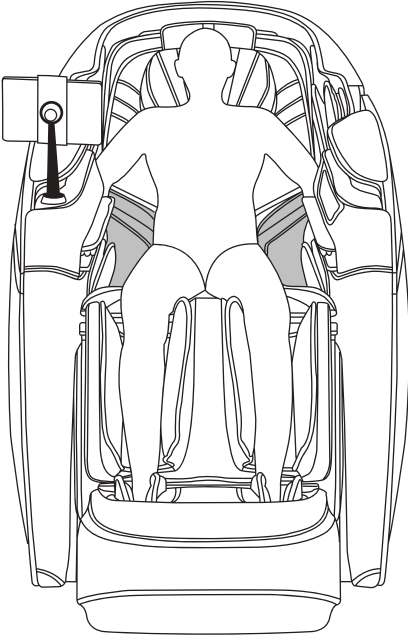


Illustration showing use for back and waist.

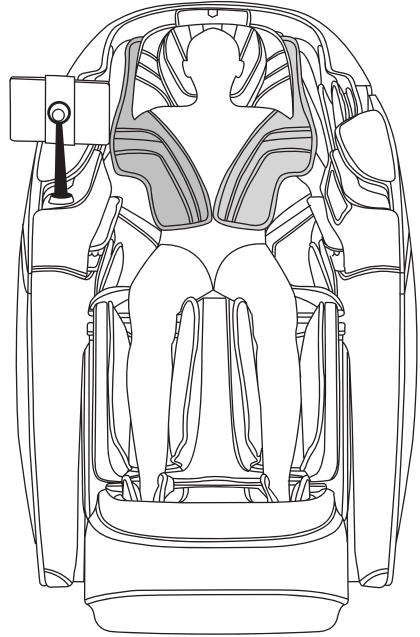


Illustration showing use for shoulder and abdomen.

5.4 Structure of the remote control




1. On-/ Off-Button
2. Pause or continue the massage
3. Activates or deactivates the belt heat
4. Activates or deactivates the heating function in the center of the body
5. Activates or deactivates the O2 ion function
6. Activates or deactivates the foot rollers
7. Activates or deactivates calf knead function
8. Activates or deactivates the voice control function
9. Adjusting the massage intensity
10. Turns the massage chair on or off
11. Adjusting the air pressure for the lower body
12. Selection of the desired massage area
(Only possible in manual mode)
13. Adjusting the foot size
14. Adjusting the shoulder position

5.4 Structure of the remote control



15. Display of the current status of the massage chair
16. Selection of automatic massage programs
17. Selection of manually adjustable functions
18. Adjusting the position of the seat and the angle of the sitting posture
19. Settings
20. Selection key for the massage techniques
21. Increase or decrease the air pressure intensity on the upper body
22. Status display
23. Selection of the compression massage area
24. Selection of the length of the massage program
25. Adjusting the massage speed
26. Adjusting the 4D intensity
27. Health detection
28. User defined menu
29. Custom memory

5.5 Structure of the quick control panel

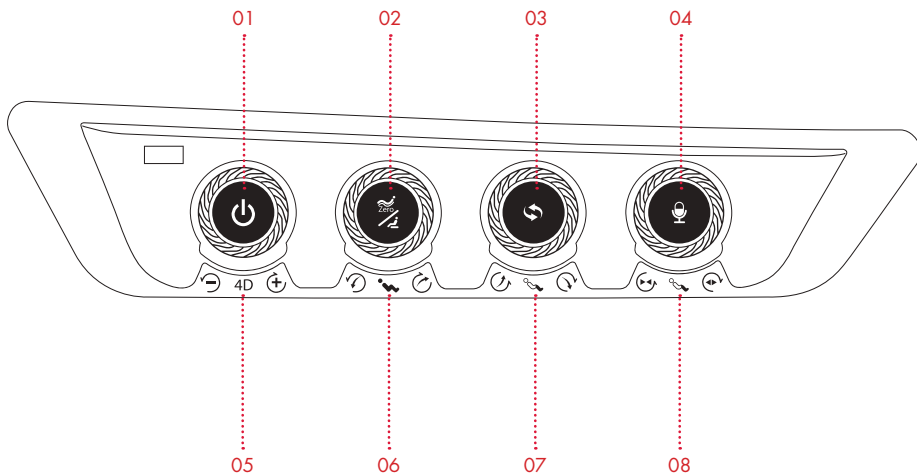

1. On/ Off button

Press the button for three seconds to start or switch off the massage chair. Press the button briefly to pause the chair or to switch it to stand-by.

2. Zero Gravity button

Press this button to be moved to the zero gravity position. Zero gravity can be set to two levels. Press and hold the button for two seconds to be returned to the starting position.

3. Automatik mode button

Press this button to switch between the different programmes.

4. Voice command button

Press this button to activate the voice assistant.

5. 4D intensity knob

Turn the knob to either slowly increase or decrease the 4D intensity.

6. Backrest up/ down control

Turn the knob to either slowly raise or lower the backrests. The legrest rises slowly, and then the footrest is automatically adjusted.

7. Legrest up/ down control

Turn the knob to either slowly raise or lower the legrest. The footrest is automatically adjusted when the knob is no longer being operated.


8. Footrest length regulator

Turn the knob to slowly extend or shorten the footrest. The mechanism stops as soon as the controller is no longer being actuated.

6. Before use

Checking Surroundings

Make sure that there are no people, pets or objects in the area of the chair.

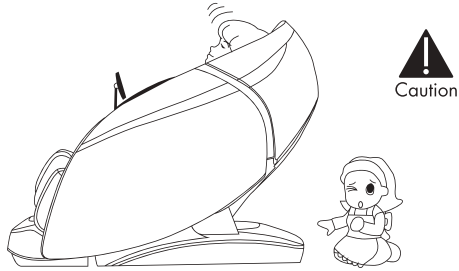

Check gaps

Before the massage, make sure that no foreign objects are caught on the legs, feet, etc.

Make sure that your hands, feet and head do not get into the area between the lower leg mechanism and the main part or between the armrest and the capsule.


Under no circumstances should your hands, feet or head get under the fabric or leather cover in the massage area.

6. Before use


Connect power supply




Caution

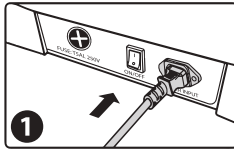

Connect the power cable.

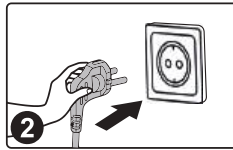

Insert the plug into the socket.

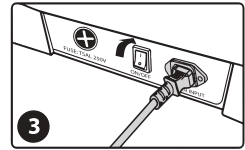


Switch on the main switch (position „I“)







Caution


- Please check the power cable and plug for damage before use.
- Please use a power source that is in accordance with the operating requirements of this product.
- It is strictly forbidden to use a voltage other than the nominal operating voltage of this product.
- It is strictly prohibited to use power conversion devices to supply power to this product without authorisation.


7.1 Operate massage chair

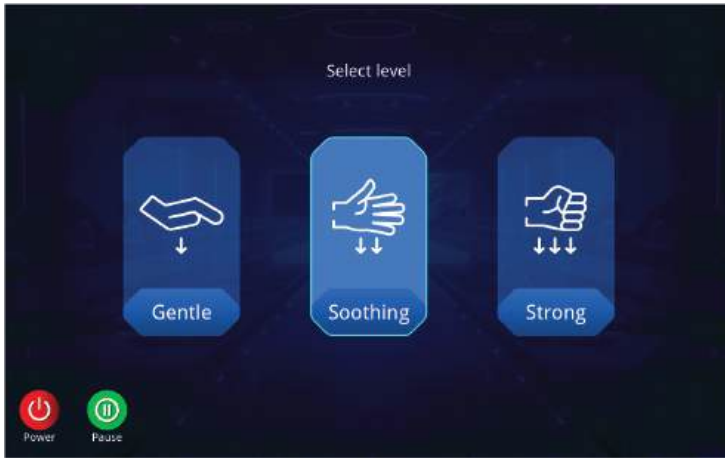1. Press the On/Off button on the side of the remote control  or long press the On/Off button on the armrest for the system to start.




2. After starting the system, select the massage intensity by pressing the "Gentle" , "Soothing" , "Strong"  buttons on the remote control. This switches on the programme, and the massage chair changes to the lying position. If no selection is made within five minutes, the chair will automatically switch off.

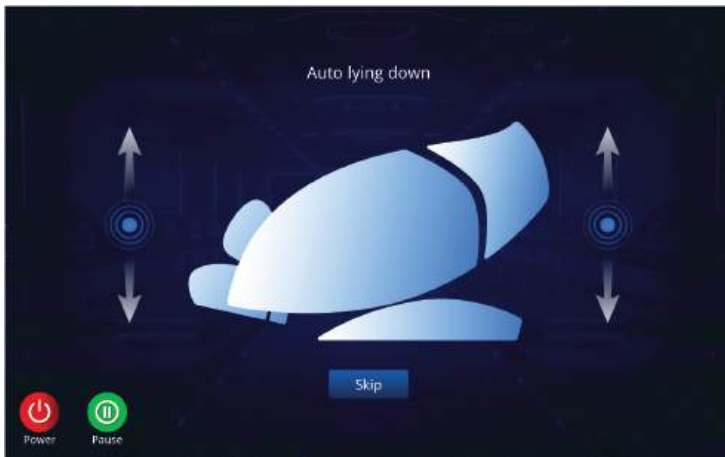

3. For the massage programmes, select the automatic programme (see 7.3) and the massage chair will be moved to the zero gravity position. Wait until the setting process is finished. Press the Skip button , to skip a step and go directly to the next level.

7.1 Operate massage chair


- The chair now scans your body shape. Wait until your body shape check has been fully scanned. You can also press the Skip button **Skip** or skip the test and start the massage directly.

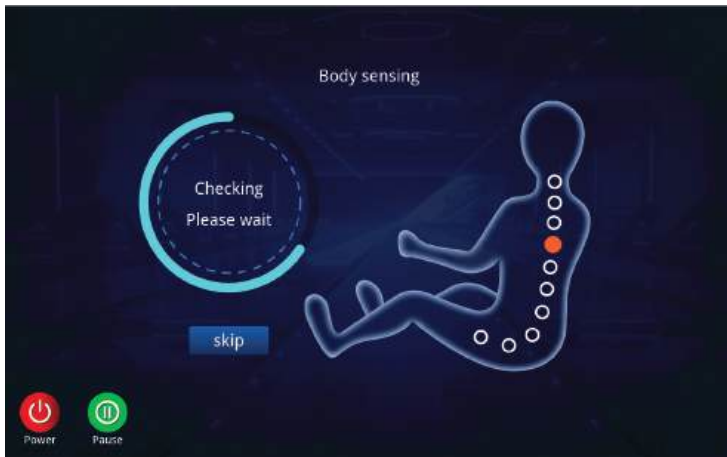

After scanning your body shape, the remote control will give an acoustic signal. The signal alerts you that you can now fine-tune the shoulder position. When the massage roller is in the right position for you, press the OK button **OK**, to start the massage. If the position is not correct, use the Up button **▲** or the Down button **▼**, to manually correct the position of the massage and press the OK button **OK** to confirm your selection and start the massage. If no buttons are pushed within 20 seconds, the rollers will move to the starting position and the massage will start.



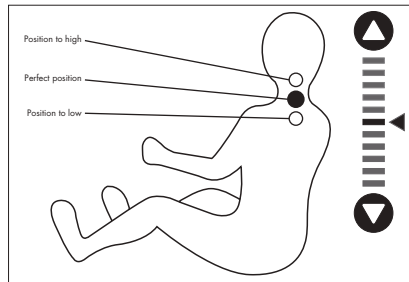

7.1 Operate massage chair



7.2 Pause function


(Please use this function only after switching on the chair [see page 77].)


After switching on the massage chair, press the Pause button  to pause the massage process. Press the Pause button  again to resume the programme. Please note: In pause mode, all functions except shutdown are disabled.

7.3 Automatic programs

(Please use this function only after switching on the chair [see page 77].)

Selecting the Automatic programs

1. Select the Auto button  in the left menu bar.
2. Select the desired automatic massage programme and click to start the massage.

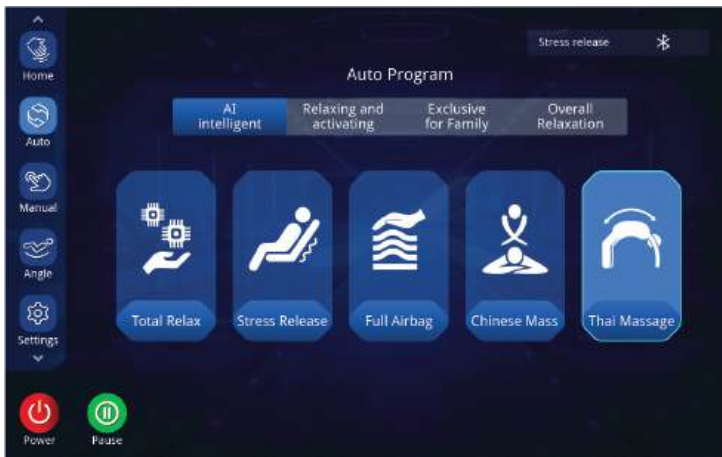

You can choose from 20 automatic programmes.

7.3 Automatic programs

AI Intelligent - Programs	
Function	Description
Total Relax	The upper mechanical core is used to massage the neck, shoulders and Fengchi acupoint by kneading. This is followed by tapping and shiatsu to massage the whole body. The lower mechanical core is used to massage the waist and hips by kneading and tapping. The two mechanical cores coordinate to help relax the muscles of the entire body and relieve fatigue.
Stress Release	Massages the neck, shoulders and Dazhui acupuncture point mainly by kneading to relieve systemic pressure.
Full Airbag	Applies compression massage to the whole body, together with the sole roller and calf kneading massage.
Chinese Massage	Using the massage technique of Traditional Chinese Medicine, 4D massage is applied to the back and waist. Thus, the blood circulation of the back and waist is stimulated, the meridians are soothed and blockages in the back and waist are released by the massage.
Thai Massage	This massage dominates with the help of compression massage on legs, hands, shoulders and hips. During the movement, the 3D massage hand holds with pressure against the waist to cause the Thai stretching. Note: The stretching is divided into three levels. For a gentle stretch, select the lowest level. For a strong stretch, select the strongest level.

7.3 Automatic programs

Relaxing and activating - Programs	
Function	Description
Meridian Treatment	Massage of the shoulders, neck, back and waist using kneading, tapping and shiatsu techniques to treat the meridians.
Neck & Shoulder	Massages the neck and shoulders mainly with kneading and stretching techniques and the upper back with a medical massage. Jianjing acupuncture points are pressed to relieve cervical spondylosis and relax the muscles of the neck and shoulders.
Waist Care	Massages the waist by kneading, kneading&tapping and tapping. This is followed by a 4D massage at the waist.
Waist & buttock Shape	Massages the buttocks through kneading and a medical massage. This is followed by a deep massage for the buttocks and perineum through tapping and kneading. To relax the hip muscles, raise your hip.
Leg & foot Relieve	Massages the shoulders and waist mainly by kneading, tapping and kneading&tapping. Applies a soothing compression massage to the calves and feet.

7.3 Automatic programs

Exclusiv for Family - Programs	
Function	Description
Power	Massage the shoulders, neck, back and waist mainly by kneading, tapping and kneading&tapping. This relieves fatigue, promotes blood circulation and reduces stress through deep massage. The massage intensity is moderate, making it suitable for men.
Keep fit	Massages the shoulders, neck, waist and hips through kneading and shiatsu techniques. By massaging the whole body, it causes the body and mind to relax. Enjoy treatment worthy of a queen. This is particularly suitable for women, as the massage intensity is very gentle.
Senior	Applies a gentle massage to the whole body in addition to the sole roller and calf kneading massage.
Office Regimen	Massages the shoulders, neck and waist with the massage techniques of kneading, tapping and kneading&tapping. Deep massage is used to relieve shoulder and neck pain, relieve sore muscles in the lumbar region and maintain the lumbar spine. It is especially for office workers and for people who sit a lot.
Health Recharge	Deep massage of the whole body using kneading, tapping and shiatsu techniques to promote blood circulation throughout the body and prevent blood clots. It is especially for people who do not get much exercise. The massage intensity is moderately gentle.


7.3 Automatic programs



Overall Relaxation - Programs	
Function	Description
Energy Boost	Deep massage of the whole body using kneading, tapping and shiatsu techniques to awaken the vitality of the human body and stimulate energy.
Lunch Break	Massages the back and waist using kneading and tapping techniques while pressing the Shenyu acupoint. This massage aims to improve the quality of your lunch break so that you can start the afternoon with a new burst of energy.
Sweet Dream	Massages the shoulders, neck, back and waist through kneading and a medical massage technique. The Fengchi and Shenyu acupuncture points are pressed to improve sleep quality and promote sleep. It is especially for people who suffer from sleep disorders.
Brain Refresh	Massages the shoulders, neck, back and waist through kneading, 4D kneading and Shiatsu techniques. A high degree of physical and mental harmony is achieved through deep massage. It is especially for people who are mentally exhausted and overworked. The intensity of the massage is gentle.
Rejuvenate	Massages the back and waist, mainly with massage techniques such as tapping and kneading&knocking. This promotes blood circulation, eliminates local muscle pain, accelerates the elimination of lactic acid and regenerates human vitality.

7.4 Remote Control





(Please use this function only after switching on the chair [see page 77].)

Program selection








Select the  button on the left menu bar to enter the selection menu. You can choose from the following settings: Massagetechnique, Massage Area, 4D intensity, Position, Massage Width und Massage Speed.

- There are a total of 11 options in the massage technique menu: Stopp, Knead, Tap I, Tap II, Knead & Tap, Shiatsu I, Shiatsu II, Grap, 4D I, 4D II, 4D III, 4D IV. (Please note: To display more massage techniques, press the arrow buttons  or  on the remote control)





Function	Setting the massage rollers	
4D I 	Speed and strength	<ul style="list-style-type: none"> • Speed can be set at five levels. • Width can be set at five levels. • Intensity can be set at five levels.
4D II 	Speed and strength	
4D III 	Speed, width and strength	
4D IV 	Speed, width and strength	

7.4 Remote control

Function	Setting the Massage Rollers	
Stop		Press this button for massaging without a technique.
Knead		Speed and strength can be set.
Tap I		Speed, width and strength can be set.
Tap II		Speed, width and strength can be set.
Knead & Tap		Speed, width and strength can be set.
Shiatsu I		Speed, width and strength can be set.
Shiatsu II		Speed, width and strength can be set.
Grasp		Speed and strength can be set.

- Speed can be set at five levels.
- Width can be set at five levels.
- Intensity can be set at five levels.

Please note: You can also press the Massage Technique button  on the "Home" screen  where you can select the desired massage technique from the pop-up menu. (This function is a shortcut for changing massage techniques on the current "Home" screen of the remote control programmes.)



7.4 Remote control

- The massage area menu offers you five areas as options: Point-by-Point, Partial, Full, Upper (back) and Lower (back). Select the desired area for the massage.



Button	Description
	Fixed point massage
	Local forwards and backwards massage in a partial area.
	Full forwards and backwards massage.
	Forwards and backwards massage of the upper back.
	Forwards and backwards massage of the lower back.

Please note: You can also click on the massage area button **Area** on the “Home” screen to select the corresponding massage area in the pop-up menu. (This function is a shortcut for switching the massage areas on the current “Home” screen of the remote control programme.)


7.4 Remote control




3. You can set the 4D intensity in the menu. Setting levels 1-5 are available, with 1 being the lowest and 5 the strongest. The higher the 4D intensity is set, the further the massage roller protrudes and the stronger the massage. Select the Plus **+** button or Minus button **-**, to adjust the 4D intensity.




7.4 Remote control

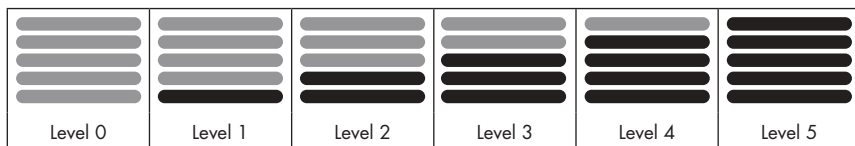

Button	Description
+	Press this button to increase the 4D intensity in levels 1 to 5.
-	Press this key to decrease the 4D intensity in levels 1 to 5.

Please note: You can also set the 4D intensity with the Plus button **4D+** or the Minus button **4D-** on the “Home”  screen. (This function is a shortcut for setting the 4D intensity on the current “Home” screen of the remote control programme.)



Button	Description
4D+	Press this button to increase the 4D intensity in levels 1 to 5.
4D-	Press this button to decrease the 4D intensity in levels 1 to 5.

7.4 Remote control

4. To set the massage robot, select the arrow pointing upwards ▲ or the downward pointing arrow ▼, to fine-tune the massage hand up or down.



5. Select the message widths as shown in the illustration below.





(1) The width can only be set when the user activates the remote control mode when selecting the massage technique or massage area.

(2) The message width can be set from level 1 to 5, where 1 is the narrowest and 5 is the widest setting. Please select one of the following massage techniques: Tap I, Tap II, Shiatsu I, Shiatsu II, 4D III und 4D IV.

7.4 Remote control

■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■
Level 0	Level 1	Level 2	Level 3	Level 4	Level 5

Button	Description
	Press this button to increase the massage width in steps 1 to 5.
	Press this button to decrease the massage width in steps 1 to 5.



6. Select the massage speed as shown in the illustration below.



(1) The speed can only be set if no automatic massage programme is running at the same time.


(2) The massage speed can be set from level 1 to 5, where 1 is the slowest and 5 is the fastest setting. The speed cannot be adjusted if the massage process has been stopped.

■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■
Level 0	Level 1	Level 2	Level 3	Level 4	Level 5

Button	Description
	Press this button to increase the massage speed in levels 1 to 5.
	Press this key to decrease the massage speed in levels 1 to 5.

Please note: You can also use the massage speed + **SPEED+** or massage speed - **SPEED-** on the "Home" screen  to set the massage speed.

7.4 Remote control



Button	Description
SPEED+	Press this button to increase the massage speed in steps 1 to 5.
SPEED-	Press this button to decrease the massage speed in steps 1 to 5.

7.4 Remote control

- Go to the Manual menu to select the Air mode as shown in the following figure. The air mode includes full back, upper back or lower back. There is also a hand roller massage function on the inside of the arm that automatically turns on when the full body air massage is selected.



Button	Description
	Press this button to activate or deactivate the <i>complete back</i> air massage.
	Press this button to activate or deactivate the <i>upper back</i> air massage.
	Press this button to activate or deactivate the <i>lower back</i> air massage.

Air massage display		
Complete body air pressure	Upper body air pressure	Lower body air pressure

7.4 Remote control

Please note: You can also press the air massage button  on the "Home" screen  and select the desired air massage area from the pop-up menu. (This function is a quick key to the air massage on the current "Home" page of the remote control).



- To set the air intensity, the air massage must be switched on. There are a total of 5 levels, with 1 being the lowest and 5 the highest level.



7.4 Remote control



Button	Description
	Press this key to increase the compression intensity between 1 to 5.
	Press this key to decrease the compression intensity between 1 to 5.


Please note: You can select the Upper Body Air Massage + button **Upper Air +** or Lower Body Air Massage - **Upper Air -** on the "Home" Screen or set the upper body compression intensity; the settings can also be set in the same manner with the Lower Body **Lower Air +** **Lower Air -**. There are 5 levels of compression intensity.



Button	Description
	Press this button to increase the compression intensity between 1 and 5.
	Press this button to decrease the compression intensity between 1 and 5.



7.5 Adjusting the Chair

(Please use this function only after switching on the chair [see page 77].)



Click on the Angle button  in the menu bar on the left side of the screen to enter the settings menu where you can adjust the angle of the chair. Adjustments include extending the legrest, extending the footrest, raising the legrest, raising the joint, raising the backrest, zero gravity I and II and other setting functions.



1. Setting zero gravity



Button	Description
Zero Gravity I 	Zero Gravity I button: automatically setting the legrest and backrest position to Zero Gravity I position.
Zero Gravity II 	Zero Gravity II button: automatically setting the legrest and backrest position to Zero Gravity II position.

2. Lengthening or shortening the footrest



Button	Description
Shortening footrest 	Button for shortening the footrest: To manually set the footrest, press and hold this button to slowly move the footrest upwards and shorten the footrest. Release the button when you are finished with the manual setting process.
Lengthening footrest 	Button for lengthening the footrest: To manually set the footrest, press and hold this button to slowly move the footrest downwards and lengthen the footrest. Release the button when you are finished with the manual setting process.

7.5 Adjusting the Chair



3. Lengthening or shortening the legrest

Button	Description
Shortening legrest 	Button for shortening the legrest: Shorten the legrest using the remote control. Press and hold this button to slowly move the legrest upwards. Release the button to stop.
Lengthening legrest 	Button for lengthening the legrest: Lengthen the legrest using the remote control. Press and hold this button to slowly move the legrest downwards. Release the button to stop.



4. Raising and lowering the legrest

Button	Description
Raising legrest 	Raising the legrest: Press and hold this button to slowly raise the legrest. Release the button to stop the movement. When the legrest has been fully raised, the footrest is automatically adjusted by the chair.
Lowering legrest 	Lowering the legrest: Press and hold this button to slowly lower the legrest. Release the button to stop the movement. When the legrest has been fully lowered, the footrest is automatically adjusted by the chair.

5. Setting the angle


Button	Description
Raising chair 	Raising the chair: Press and hold this button to slowly raise the chair angle and release the button to stop the movement of the backrest upwards movement or the legrest downwards. When the desired angle has been reached, the footrest is automatically adjusted.
Lowering chair 	Lowering the chair: Press and hold this button to slowly lower the joint while the legrest is slowly raised. Release the button to stop the movement of the backrest downwards or the legrest upwards. When the desired angle has been reached, the footrest is automatically adjusted.

6. Setting the back angle

Button	Description
Raising backrest 	Button for raising the backrest: Press and hold this button to slowly raise the backrest. Releasing the button again stops the function.
Lowering backrest 	Button for lowering the backrest: Press and hold this button to slowly lower the backrest. Releasing the button again stops the function.

7.6 Settings


(Please use this function only after switching on the chair [see page 77].)


Tap the  button in the menu bar on the left side of the screen to access the settings. This is where the model, software version, serial number and firmware version are displayed. The interface also includes the language settings.

1. The Current Unit information shows the model, software version and the serial number of the product and firmware.
2. Bluetooth (playback via Bluetooth speakers)
Once the sound source (such as a mobile phone, MID tablet, etc.) has been paired with the Bluetooth function of the massage chair, the music will be transmitted wirelessly to the playback system of the massage chair.
 - a. Access the main menu of your smart device (e.g., mobile phone). Open Settings and select the Bluetooth option. Activate the Bluetooth and search for devices in your vicinity.
 - b. The smart device will search for the corresponding Bluetooth name - Skyliner III-XXXX ("X" stands for an individual number). Connect your device to the chair.
 - c. Now start the desired music on your device.

7.6 Settings

3. Voice control

- a. Say "Hi Alice" or "Hey Alice" near the left armrest to activate the voice assistant, or alternatively press the voice button  on the left armrest. The voice assistant will respond "I am here" to indicate that it is listening.
- b. After activating the voice assistant, please speak the command within 6 seconds for the massage chair's function control will react. Once the voice assistant has responded to the command, you can issue another command. The interval between two consecutive commands must not exceed 6 seconds, or else the voice assistant will need to be activated again.

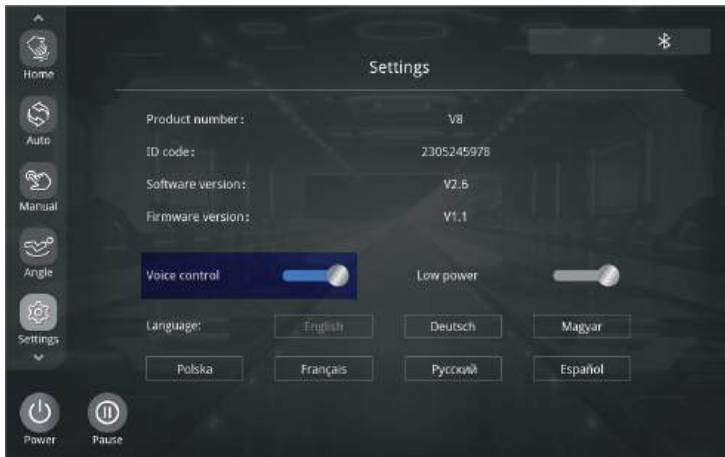

7.6 Settings


Voice control		
Say "Hi Alice" or "Hey Alice" Answer: I am here. Communication with the voice assistant is in English only.		
	Command	Response
1.	Massage on	Ok, massage on
2.	Massage close	Ok, massage close
3.	Total Relax	Ok, Total Relax
4.	Energy Boost	Ok, Energy Boost
5.	Sweet Dream	Ok, Sweet Dream
6.	Neck and Shoulder	Ok, Neck and Shoulder
7.	Lunch Break	Ok, Lunch Break
8.	Thai Massage	Ok, Thai Massage
9.	Open Air pressure	Ok, open the air pressure
10.	Close air pressure	Ok, close the aire pressure
11.	Up the seat position	Ok, up the seat position
12.	Down the seat position	Ok, down the seat position
13.	Change the other mode	Ok, change the other mode
14.	Go little down	Ok, go little down
15.	Go little up	Ok, go little up

Please note: Commands 14 and 15 can only be used after Command 13.

7.6 Settings


4. Energy-saving mode

Energy-saving mode on: The armrest quick buttons and voice control functions cannot be used in energy-saving mode; they must be used when switched on. Energy-saving mode off: The quick buttons on the armrest and the voice control function can also be used in standby mode.

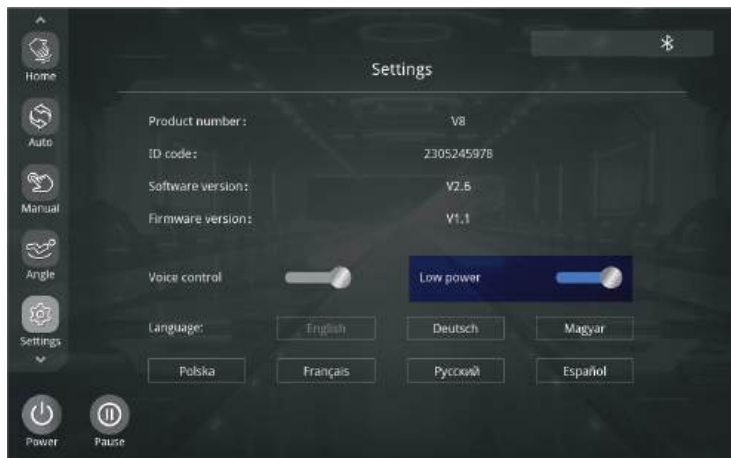

5. Language selection


The standard language is English. The following languages can be selected: English, German, Hungarian, Polish, French, Russian and Spanish.

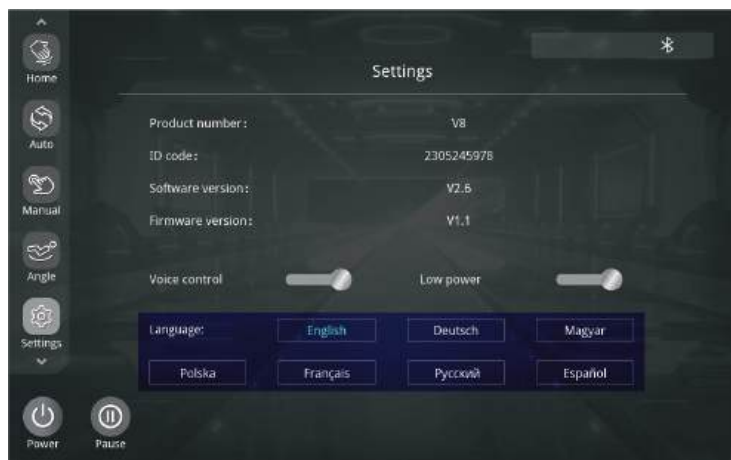


7.7 Health detection


(Please use this function only after switching on the chair [see page 77].)

1. Starting the Health detection

- a. Click on the Health button  in the menu bar on the left side of the screen. To start the health detection, press **Start** and then gently place your index finger or middle finger on the sensor. After a few seconds, the real-time data of heart rate, blood oxygen and microcirculation are displayed while the unit waits for the check process to finish.

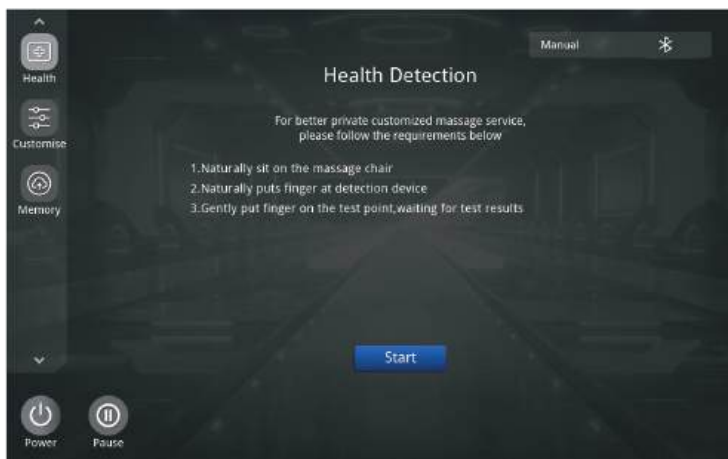

b. Health scan progress display

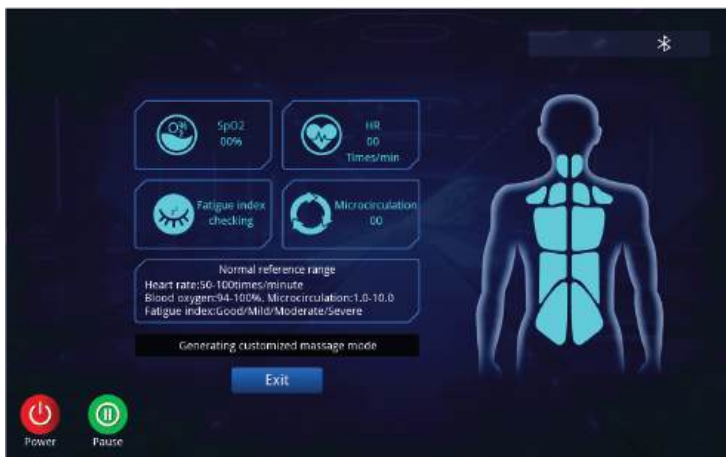

7.7 Health detection


2. Recommended Programm

When the normal check is complete, heart rate, blood oxygen and fatigue level are displayed. Blood oxygen is normally in a range between 95% and 99%. Fatigue levels include good, light, moderate and heavy. Based on your fatigue level, an automatic programme is recommended. Select "Yes" to start the recommended programme and "No" to return to the massage mode running before the health check.



3. No valid data is reconisred

If no valid data is detected, you have the option to repeat the check. Select "Retest" to start again and "Exit" to stop the check and return to the mode running before the check.

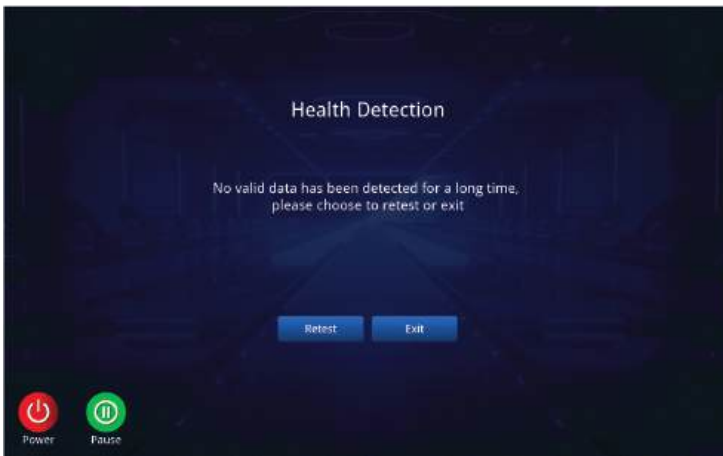

7.7 Health detection


4. Ending the Health Scan


During the health scan, press the **Exit** button to stop the check process and return to the massage mode running before the check.



7.8 User Defined

(Please use this function only after switching on the chair [see page 77].)

Click on the User-Defined button  in the menu bar on the left side of the screen. There you select either “Customise 1” or “Customise 2” for the massage. (This is only possible if the corresponding user definition has been set and saved beforehand.)

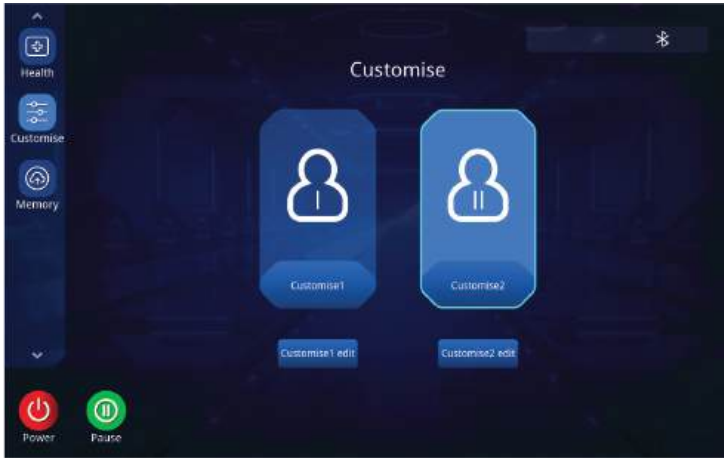



Click either the “Customise 1 edit” or “Customise 2 edit” button to access the User Definition menu. Then select the preferred massage technique. Next, define your massage from the given functions and click on Save. Once the settings have been saved, the custom programme will be available right away and can be used for the next massage. To do this, click on the saved user-defined programme.





7.9 Other functions

(Please use this function only after switching on the chair [see page 77].)


On the display under "Home" , select the "Belt heater" button , to switch the heating function of the wrap (graphene heating) on or off. After switching on the heating function, heat will be emitted for 3 minutes.



On the display under "Home" , select the "Core Warmth" button , to switch the mechanical heating function (jade heating) on or off. After switching on the heating function, heat will be generated for 3 minutes.






7.9 Other functions

On the display under “Home”  select the “O2 Ion” button , to switch the O2 ion heating function on or off.





On the “Home” screen , click on the “Roller” button , to switch the foot massage function on or off with three adjustable speeds.




Button	Description
   Level 1 Level 2 Level 3	Press this button to activate or deactivate the sole roller function. Press the cyclically programmed button multiple times to switch between speed levels 1, 2, 3 and off.

7.9 Other functions



On the display under “Home” , select the “Calf” button , to switch the calf massage function on or off. There is a friction massage function for the inside of the calf and an air cushion massage function for the outside, which can relieve stiffness in the calf muscles or tension caused by standing for long periods of time.





On the display under “Home” , select the “Voice Control” button  to activate the voice assistant.



7.9 Other function



On the display under "Home" , select the "Shoulder" button  and press the up and down arrow buttons in the pop-up menu to adjust the shoulder position to a total of 11 levels.



On the "Home" screen display , press the "Foot Size" button  to optimize the appropriate shoe size and massage experience.



7.9 Other functions

On the "Home" screen display , select the "Massage Time Setting" button . Press the plus and minus arrow button in the pop-up menu to lengthen or shorten the massage time. The time is always shortened or lengthened in 5 minute steps. The longest running time is 40 minutes.






On the "Home" screen display , select the "Soft" , „Soothing"  or „Strong"  button to obtain the desired massage intensity.



7.10 Memory



(Please use this function only after switching on the chair [see page 77].)

Click on the "Memory" button  in the menu bar on the left side of the screen to access the massage function memories. There are two categories: saving and recall of the massage function. The massage can be saved under "Save I", "Save II" or "Save III". You can call up the saved massage under "Use I", "Use II" and "Use III".

Button	Description
	Saving: Save the currently running massage programme, including automatic programme, massage technique, air mode and intensity, position and angle of the leg and backrest unit and other massage functions.
	Recall: Recall the previously saved massage program, including all settings.




7.11 Ending massage


During the massage, press the button  on the remote control or the button  on the right armrest to switch off the unit. All massage functions are ended, and the chair is reset to its starting position. All massage functions are automatically switched off when the massage time has elapsed; the backrest and legrest are not returned to the starting position.

Disconnect the power supply to the entire machine as shown in the illustrations.


Turn the main switch off
(position "0")

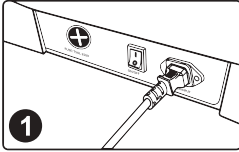

Disconnect the power supply unit.

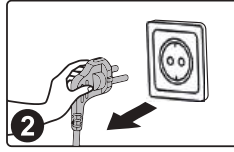

Pull the power cable out
of the socket.

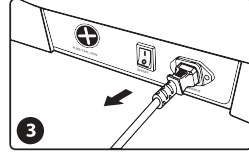


8.1 Cleaning and maintenance

Cleaning synthetic leather and plastic parts

Wipe the synthetic leather with a soft, dry cloth.

- Do not use chemicals such as thinner, petrol, alcohol, etc. to clean the unit.
- When using commercially available leather care products (cloths), please adhere to the instructions for use.
- If the synthetic leather is especially dirty, wipe it as follows:
 - Dip a soft cloth in water or hot water with 3% to 5% neutral detergent, and then wring it out thoroughly.
 - Afterwards, wipe with a damp soft cloth.
 - Allow the material to air dry.
- For stubborn stains, please dip a commercially available melamine sponge in a neutral cleaning agent and wipe the surface with it.
- Do not use a hair dryer to dry the surface.
- Be careful when wiping the unit with denim and coloured fabrics, as the dye may rub off onto the surface of the synthetic leather.
- Do not allow these materials to come into contact with plastic for a prolonged period of time, as this may cause discolouration.
- Synthetic leather may become discoloured. If you use hair dye, please cover the chair with a towel where your hair might touch it.

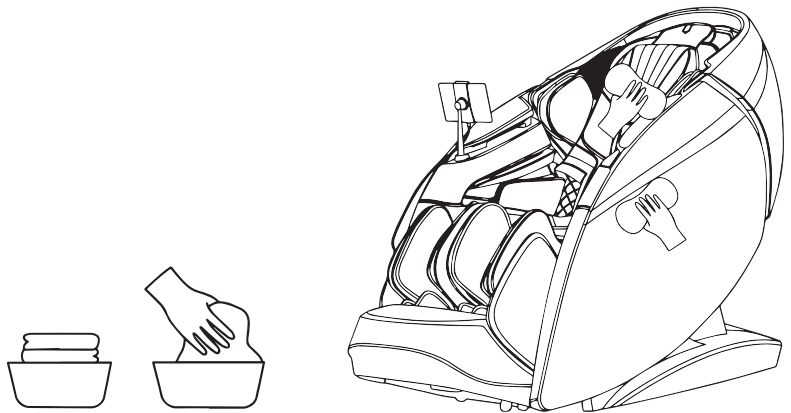

8.2 Troubleshooting

Malfunction	When the calf mechanism or the backrest reaches a certain position, the chair will no longer change the position when you press the desired setting button.
Solution	Due to the product design and ergonomic requirements, this product has safety limits for the position settings. An acoustic signal will sound when the limit is reached.

Malfunction	One or more functions do not work after the unit has been switched on.
Solution	After switching on the unit by pressing the power button, an automatic massage programme or another operating mode needs to be selected manually. If no selection is made, the unit will switch off automatically after 20 minutes. If manual operating mode is selected, the functions that are not selected can be deactivated and the operating mode will have to be set manually.






Malfunction	The unit makes a sound like rubbing leather when it changes position.
Solution	High-quality abrasion-resistant leather that meets environmental protection requirements is used for this product. Due to the special properties of leather materials, there is a slight noise caused by rubbing from movement in the corresponding area. This is normal. Please note: If you hear a noise that sounds like fabric or leather tearing when the machine is running, stop the operation immediately and contact a technician.

Malfunction	The massaging action does not reach the shoulders or neck.
Solution	If you have skipped the body scan before the massage (see 7.1 Operating the massage chair), you must set the shoulder position manually in the main menu. If this is not sufficient and the head does not touch the headrest or the back does not touch the loins, the shoulder position may be lower than the actual position during the body scan. Sit in the lowest position of the seat, lean your head on the headrest and start from the beginning.

Malfunction	The unit is damaged. The power supply unit or the mains plug is unusually hot.
Solution	Stop using the unit and disconnect the power supply. To avoid accidents, please contact an authorised service centre.

If you have any questions or concerns about this product, please contact the service personnel.

Technical details

Model:	Skyliner III
Dimensions:	Upright: 85,5 x 177 x 130 cm Reclining: 85,5 x 190 x 90,5 cm
Weight:	186,5 kg
Voltage:	220-240 V ~ 50/60 Hz
Rated output:	220 W
Safety design:	Class I
Running time:	30 Minuten
braintronics®:	21 Minuten
Certificates:	    

9. Specials



ROLLING

Pleasant alternation between relaxation and releasing the muscles – also perfectly suited for a final massage, for relaxation and recovery of the muscles.



KNEADING

Skin and muscles are either clasped and kneaded between the thumb and the index finger or with both hands. This massage technique is used in particular to ease tension.



AIR COMPRESSION

Rising and receding airbags have a pumping motion which produces natural muscle reflexes. This is particularly beneficial in the calf and foot area.



CARBON HEATING

Deeply penetrating Carbon infrared heat, blood vessels expand, the blood flow increases and the muscle tone is reduced. In addition, it carries out a highly beneficial effect on nerve cells, which are responsible for reporting pain to the brain.



JADE HEAT

Jade is a natural store and conductor of heat. These high-quality jade stones, purposefully integrated in the massage heads dispense deep warmth and a relaxing effect.



BELT HEATER

The unique belt heater with innovative graph heating, warms not only the shoulders, but also the back, waist and abdominal area. The built-in graph heat can reduce coldness and relieves pain.



KNEAD & TAP (DUAL ACTION)

The techniques of kneading and tapping are combined in order to relieve tension and stimulate blood circulation at the same time.



TAPPING

Short, tapping movements are performed with the edge of the hand, the palm or the fist. This promotes blood circulation in the skin and softens tense muscles. If tapping is performed at lung height, this can improve the release of mucus in the lung.



SOLE ROLLER

The foot massage stimulates the nerve endings and certain organs of the body, which also relaxes the muscles.



I-OPEN FLEXIBLE RAIL

While lowering the massage chair into the lying position, the angle of the guide rail will be increased. This creates a more comfortable lying feeling, relieves the spine and intensifies the massage experience.



ZERO SPACE

For the lying-position the massage chair moves forward and therefore requires very little distance to the wall behind. Space saving and comfortable!



ZERO GRAVITY

You put yourself in the position of an astronaut – that “weightless feeling”.



AUTOMATIC

Specifically developed automatic programmes for the whole body, which offer a big range of different massage techniques. Additionally you can also turn on the heating function, if you'd like.



MEMORY

Using the intelligent memory function the massage chair remembers your favourite massage exactly and begins immediately without a scan.



BACK AREA

An individual applicable to any size massage area.



ARTHROSE TRACTION

Arthrosis Traction consists of gentle stretching pressure. It has a stimulating effect on the cartilages, which enhances the transport of bodily fluids, nutrients absorption and can alleviate symptoms of arthrosis.



ADJUSTABLE FOOTREST

The footrest can be extended, this way it is adaptable to different body sizes.

9. Specials



ADJUSTABLE PILLOW

If necessary, the double cushion can be placed to reduce the neck and shoulder massage intensity.



RECLINING POSITION

The adjustability of the backrest and footrest contributes to personal well-being of the body position.



BRAINTRONICS®

Braintronics® technology synchronises your brainwaves through audio stimulation. Combined with a specially developed massage programme your stress-ridden body will be able to relax. No matter whether you'd like to relax, dream or learn – anything's possible.



ADJUST SHOULDER

The massage heads can be moved upward or downward to a suitable position in the shoulder area.



AIR INTENSITY

Adjustable airbag massage intensity.



AIR AREA

Whole body airbag massage. Different areas are individually selectable



BACK STRETCH ROLLING

Targeted stretch massages activate the body and have an invigorating effect on the whole body.



4D MASSAGE

The 4D L-Track massage has been improved to provide a wider, deeper and more rhythmic massage than conventional massage rollers. This 4D massage is the most realistic like-from-hand massage in on the market.



2 MASSAGEROBOTS

Two massaging mechanisms working separately of each other.



SHIATSU

Shiatsu (finger press) is a form of body therapy originating in Japan. The massage technique consists of soft, rhythmic, far-reaching stretches and rotations. The aim of Shiatsu is to simulate individual parts of the body and to mobilise the muscles.



SHOULDER GRASP

Targeted kneading massage in the shoulder/neck area – ideal for easing tension and pain in this area.



WAIST STRETCH

Airbags in the lower area of the back ensure gentle stretching of the pelvis. Effectively counteracts tensions.



SPOT

The massage heads can massage a particular spot.



SPEED

Massage speed is adjustable.



WIDTH

The distance between the both massage heads can be set (narrow, medium and wide).



MUSIC

Further relaxation and fun with the music function.



BLUETOOTH

A wireless connection to your smartphone or tablet ensures a facilitated music experience.



ACUPRESSURE POINTS

Key acupressure points are massaged.



REFLEXOLOGY

Reflexology regenerates foot muscles and has a harmonizing effect on almost all organs inside your body.

9. Specials



HUMAN HANDS FEELING

Specially designed massage heads imitate the hand motion of a professional masseur. The maximum stretch space is 6,5 cm, and the maximum stretch angle is 41 degrees, so the mechanical hands can do effective massage to human cervical vertebra thoracic vertebra and lumbar vertebra.



O2 IONIZER

Polluted air around you will be neutralized and you will breathe purified oxygen during your massage.



USB - CHARGER

While you relax, the integrated USB port can supply, for example, your phone with power.



QUICKSTART

With one touch the quick start buttons in your armrest allow you to control the most important functions.



DUAL SENSOR BODY SCAN

The massage chair performs a body scan to capture the main areas of the neck and back to ensure optimal pressure throughout the massage. The scan technology detects the height of your shoulders, that can be modified after the scan, if required.



BLUETOOTH AMPHITHEATRE SOUND SPEAKER

The massage chair is equipped with Bluetooth technology and an amphitheatre sound system that reduces ambient noise and boosts your sound experience. In this way you can enjoy your massage even with your favourite meditation application or your favourite music. We recommend starting the Bluetooth speakers with the lowest volume before playing music and then gradually increasing them to your desired level.



SLIM LCD TOUCH SCREEN REMOTE CONTROL

Using the touch screen, you can select your desired massage comfortably and adjust all other settings. You can navigate through the menu by clicking the buttons to select Neck/Shoulder, Lower Back, Auto, Manual, Advance or Air Massage. Optionally, you can set the massage time to a period of 5 minutes, starting from 5 minutes up to 30 minutes.



VOICE CONTROL

Use the voice control to activate selected functions.



WIRELESS CHARGER

Wireless charging function for NFC-smartphones.



HEALTH DETECTION

A built-in pulse oximeter records important data such as heart rate, blood oxygen content, microcirculation and fatigue level. Based on this data, the appropriate massage program is determined individually. So you get a massage that is adapted to your specific needs.

10.1 EU declaration of conformity

Complies with European Directives EMC 2014/30/EU, LVD 2014/35/EU and RoHs.

10.2 Warranty conditions

The retailer guarantees a statutory period of warranty for the product described on the reverse. The warranty is valid from the date of purchase. The purchase date must be documented with proof of purchase. The retailer will repair or replace defective products registered within Germany free of charge. This does not include parts subject to wear, such as fabric covers. The defective device must be sent in with proof of purchase before the warranty period expires.

The warranty is void if a defect occurs that is due to outside influences or as a result of a repair or modification not performed by the manufacturer or an authorised dealer, for example. The retailer warranty is limited to product repair or replacement. Under this warranty, the manufacturer or the retailer has no further liability and is not responsible for damages due to failure to observe the instructions for use and/or improper use of the product.

If, after examining the product, the manufacturer determines that the warranty claim is not for a defect covered by the warranty or that the warranty period has expired, the customer will be responsible for the costs of the inspection and repair.

Legal notice: None of the contents involve any therapeutic claims. The diagnosis of and therapy for illnesses and other physical disorders requires treatment by a doctor, alternative practitioner or therapist. Statements made here are informative only and must not be used as a substitute for medical treatment. Every user is instructed to carefully assess their situation and, where necessary, consult a doctor to determine whether using the product will be beneficial in their own unique case. Every use or therapy is undertaken at the user's own risk. We dissociate ourselves from any therapeutic claims or commitments.

Casada International GmbH
Obermeiers Feld 3
33104 Paderborn, Germany
info@casada.com
www.casada.com

Copyright Pictures and texts are subject to the copyright of CASADA International GmbH and may not be used further without express confirmation.

Copyright © 2022 CASADA International GmbH.

All rights reserved.

A1.3-SK3-GB0723